



















Technical Information

Minicap FTC260, FTC262

Capacitive Limit Detection Compact switch for limit detection with active build-up compensation; No calibration necessary Version available for dust explosion areas



Applications

Minicap is designed for limit detection of light bulk solids, with a grain size up to max. 30 mm and a dielectric constant $\varepsilon_r \ge 1.6$, e.g. grain products, flour, milk powder, animal feed, cement, chalk or gypsum.

Versions:

- Minicap FTC260 (left): with 140 mm rod probe, with FDA listed material; for bulk solids and liquids
- Minicap FTC262 (right): with max. 6 m rope probe; for bulk solids
- Relay output (potential-free change-over contact / SPDT) with AC or DC power
- PNP output with three-wire DC power

Your Benefits

- Complete unit consisting of the probe and electronic insert:
 - simple mounting
 - no calibration on start-up
- Active build-up compensation
 - accurate switch point even with heavy build-up on the probe
 - high operational safety
- Mechanically rugged
 - no wearing parts
 - long operating life
 - no maintenance
- The rope probe of the Minicap FTC262 can be
 - optimum matching to the measuring point in the silo
 - less stocks required

Table of contents

runction and system design	
General Information	
Measuring principle	
Measuring System	6
· ·	
Townsh	7
Input	
Measured variable	
Measuring range	7
Outside	7
Output	
Output signal	
Signal on alarm	7
Switching delay when free or covered	7
Overvoltage category	
Protection class	
1100004011 01400	• • ·
Power supply	. 7
Electrical connection	7
Supply voltage	
Terminal compartment	
Terminal comparament	0
Performance characteristics	. 9
Reference operating conditions	
Hysteresis	
Switch point	
Power up response	
Long-term drift	
Influence of medium temperature \dots	9
Operating conditions	. 9
Operating conditions	
Installation	9
Installation	9 .10
Installation	9 .10
Installation	9 .10
Installation	9 .10 .11
Installation	9 . 10 . 11
Installation	9 . 10 . 11
Installation	9 10 11
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature	9 .10 .11 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class	9 . 10 . 11 . 12 . 12 . 12 . 12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection	9 .10 .11 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class	9 .10 .11 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection	9 .10 .11 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance	9 .10 .11 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance	9 .10 .11 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility	9 10 11 12 12 12 12 12 12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance	9 10 11 12 12 12 12 12 12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process	9 .10 .11 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2	9 .10 .11 .12 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process temperature limits	9 .10 .11 .12 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process temperature limits Process pressure range pe	9 .10 .11 .12 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process temperature limits	9 .10 .11 .12 .12 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process pressure range pe Temperature diagrams	9 .10 .11 .12 .12 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process temperature limits Process pressure range pe	9 .10 .11 .12 .12 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process temperature limits Process pressure range pe Temperature diagrams Mechanical construction	9 .10 .11 .12 .12 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process temperature limits Process pressure range pe Temperature diagrams Mechanical construction Design, Dimensions (in mm)	910 .11 .12 .12 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process temperature limits Process pressure range pe Temperature diagrams Mechanical construction Design, Dimensions (in mm) Material for wetted parts	9 .10 .11 .12 .12 .12 .12 .12 .12 .12 .12 .12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process temperature limits Process pressure range pe Temperature diagrams Mechanical construction Design, Dimensions (in mm) Material for wetted parts Process connections	9 10 11 12 12 12 12 12 12
Installation Installation instructions FTC260 Installation instructions FTC262 Environment Ambient temperature range T1 Ambient temperature limits Storage temperature Climate class Degree of protection Shock resistance Vibrational resistance Electromagnetic compatibility Process Process temperature range T2 Process temperature limits Process pressure range pe Temperature diagrams Mechanical construction Design, Dimensions (in mm) Material for wetted parts	9 10 11 12 12 12 12 12 12

Human interface	14
Display elements	
Operating elements	
Certificates and approvals	14
CE approval	14
Ex approval	1
Overspill protection FTC260	1
Ordering information	15
Product structure FTC260	
Product structure FTC262	
Accessories	12
Adapter	1
Transparent cover	
Rope shortening set	
Supplementary documentation	1
Operating manual (BA)	1
Safety instructions (XA)	

Function and system design

General Information

Technical specifications to DIN 19259

Measuring principle

Limit Detection

A metal plate at the end of the probe, within the insulation, and the integrated counter-electrode together with the surroundings combine to form the two electrodes of a capacitor.

If the probe is covered or free of material, then the capacitance changes and the Minicap switches.


Active Build-up Compensation

The Minicap detects build-up on the probe and compensates for its effects so that the switch point is always accurate. The effects of build-up compensation depend on:

- the thickness of the build-up on the probe,
- conductivity of the material,
- the sensitivity setting on the electronic insert.

Setting the Sensitivity

The Minicap is so calibrated at the factory that it correctly switches in most cases. Greater sensitivity can be set using a multi-pole switch on the electronic insert. This is only necessary, however, if there is very strong build-up on the probe, or if the dielectric constant of the material ε_r is very small.

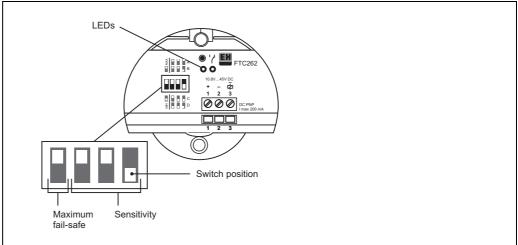

L00-FTC26xxx-15-06-xx-en-00

Factory setting on switches

Function Range

There is a loose relationship between the dielectric constant $\epsilon_{_T}$ and density ρ of the material. However, this depends on the solid.

The table on the left indicates whether the Minicap can be used or if application limits are exceeded.

Grain, seed, legumes	and their pro	ducts	
Examples	ρ in g/l (approx.)	$\epsilon_{\rm r}$ (approx.)	Function
Rice	770	3.0	yes
Cornstarch (packed)	680	2.6	yes
Flour (wheat)	580	2.4	yes
Corn grist	500	2.1	yes
Sunflower seeds	380	1.9	yes
Noodles	370	1.9	yes
Bran (wheat)	250	1.7	yes
Popcorn	30	1,1	no
Minerals, inorganic m	aterials		
Cement	1050	2.2	yes
Plaster	730	1.8	yes
Chalk (packed)	540	1.6	(yes)
Chalk (loose)	360	1.4	no
		-	
Plastics			
ABS granulate	630	1.7	yes
PA granulate	620	1.7	yes
PE granulate	560	1.5	no
PVC powder	550	1.4	no
PU-PU dust	80	1.1	no
Grey background: Application limits of Mir Recommendation: Soliphant FTM to be use	-	l.	

In general:

If the dielectric constant of the solid is not known, then the density (apparent weight) of the solid is a deciding factor.

Under normal conditions the Minicap functions in foodstuffs with a density of 250 g/l and above or in plastic or mineral materials with a density of 600 g/l and above.

Minimum/Maximum Fail-Safe Mode

The Minicap FTC260 can be set to minimum or maximum fail-safe mode (see following table).

AC or DC version with relay output (potential-free change-over contact):

■ Maximum fail-safe mode:

The relay is de-energised when the probe is covered or the power supply fails.

■ Minimum fail-safe mode:

The relay is de-energised when the probe is free or the power supply fails.

DC version with PNP output:

■ Maximum fail-safe mode:

The switch output is blocked when the probe is covered or the power supply fails.

■ Minimum fail-safe mode:

The switch output is blocked when the probe is free or the power supply fails.


Switch position	Level	Relay output SPDT	Transistor output PNP	Red LED for switching status	Green LED for stand-by
†	Probe covered	3 4 5 Relay de-energised	1 3 L+	-¤;-	-¤́-
Maximum fail-safe mode	Probe free	3 4 5 Relay energised	1 3 L+ + connected	•	-¤-
↓	Probe covered	3 4 5 Relay energised	1 3 L+ +	•	\ \
Minimum fail-safe mode	Probe free	3 4 5 Relay de-energised	1 3 L+	-¤;-	-¤;-
U 0 V Power failure		3 4 5 Relay de-energised	1 3 L+ blocked	•	L00-FTC26xxx-15-00-xx-en-002

Selecting the switch position and function

Measuring System

Minicap is an electronic switch. The complete measuring system consists of:

- the Minicap FTC260 or FTC262
- a power supply and
- controllers, switching devices, signal transmitters (e.g. lamps, horns, PCS, PLC, etc.)

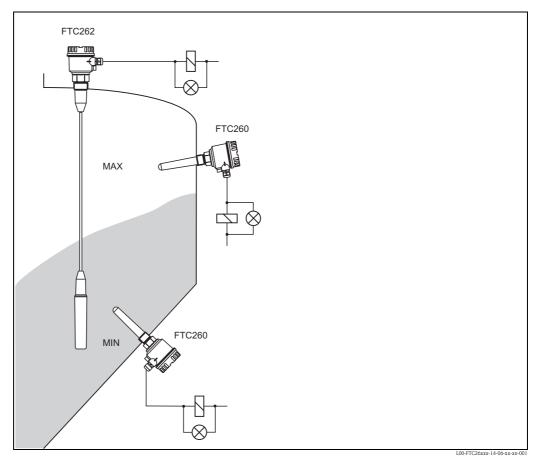

Limit detection in silos containing solids

Input

	-
Measured variable	Limit detection
Measuring range	■ FTC260: $\varepsilon_{\rm r} \ge 1.6$
	■ FTC262: $\varepsilon_{\text{r}} \ge 1.5$
	Output
Output signal	■ DC, PNP transistor output: Switching: PNP I _{max} 200 mA - overload and short circuit protection - residual voltage at transistor at I _{max} < 2.9 V
	■ AC / DC, Relay output: Contact: change-over, potential-free $U\sim_{max} 253 \text{ V}, I\sim_{max} 4 \text{ A (AC)}$ $P\sim_{max} 1000 \text{ VA}, \cos \varphi = 1$ $P\sim_{max} 500 \text{ VA}, \cos \varphi > 0.7$ $I=_{max} 4 \text{ A up to U}= 30 \text{ V (DC)}$ $I=_{max} 0.2 \text{ A up to U}= 253 \text{ V (DC)}$
Signal on alarm	 DC, PNP transistor output: < 100 μA AC / DC, Relay output:
	relay de-energised
Switching delay when free or	■ FTC260: 0.5 s
covered	■ FTC262: 0.8 s
Overvoltage category	Category III (EN 61010)
Protection class	Protection class to EN 61010-1
	■ FTC260: Class II
	■ FTC262: Class I
	D
	Power cumply

Power supply

Electrical connection

To ensure that the Minicap operates safely and without electrical interference, it must be connected to an earthed silo with metal or reinforced concrete walls.

For silos made of non-conductive materials, the external earth wire of the Minicap must be connected to a conductive and earthed component which is earthed near to the silo.

The protective earth can be connected to the internal earth terminal of the Minicap.

Connections can be made with standard instrument cabling.


See TI 241F/00/en for information on EMC (testing procedures, installation).

Connect the potential matching lead (PAL) when using in dust explosion hazardous areas.

Note national regulations!

Minicap AC or DC connection and relay output

- F1: Fine-wire fuse to protect the relay contact, dependent on the connected load
- F2: Fine-wire fuse, 500 mA
- M: Earth connection to silo or metal components on silo
- E: Earth

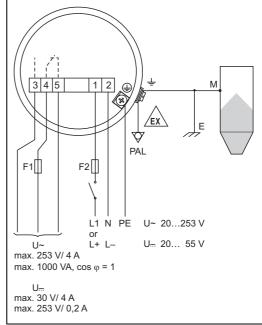


L00-FTC26xxx-04-06-xx-en-001

No ground lines (PE) or potential matching lines (PAL) are required with Minicap FTC260.

Minicap with three-cable DC connection; Transistor output PNP

- F: Fine-wire fuse, 500 mA
- R: Connected load, e.g. PLC, PCS, relay
- M: Earth connection to silo or metal components on silo
- E: Earth

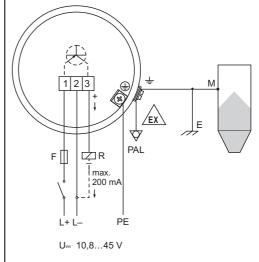

L00-FTC26xxx-04-06-xx-xx-001

Minicap is protected against reverse polarity. The green LED for standby goes out if the connections are reversed.

No ground lines (PE) or potential matching lines (PAL) are required with Minicap FTC260.

Supply voltage

- DC, PNP transistor output:
 - U= 10.8...45 V
 - transient pulses to 55 V
 - current consumption max. 30 mA
 - reverse polarity protected
- AC / DC, Relay output:
 - U~ 20...253 V
 - or U= 20...55 V
 - $-\,$ current consumption max. 130 mA

Terminal compartment

- Stranded wires max. 1.5 mm² in end sleeves
- Electric wire max. 2.5 mm²

Performance characteristics

Reference operating	(for plastic vessels)
conditions	■ Ambient temperature: 23 °C
	■ Medium temperature: 23 °C
	■ Medium pressure p _e : 0 bar
	\blacksquare Medium: dielectric constant $\epsilon_r=2.6$
	■ Conductivity: < 1 µS
	■ Sensitivity setting: C
Hysteresis	■ FTC260: Horizontal 4 mm, Vertical 7 mm
	■ FTC262: Vertical 5 mm
Switch point	■ FTC260: Horizontal: centre of probe −5 mm, Vertical: 40 mm above probe tip
	■ FTC262: Vertical: 35 mm above probe tip
Power up response	■ FTC260: Correct switching aftermax. 1.5 s
	■ FTC262: Correct switching after max. 2 s
Long-term drift	■ FTC260: Horizontal 3 mm, Vertical 6 mm
	■ FTC262: Vertical 6 mm
Influence of medium	■ FTC260: Depending on material to be measured
temperature	■ FTC262: Depending on material to be measured

Operating conditions

Installation

Silo Material

The Minicap can be installed in a wide range of silos made of different materials (e.g. metal, plastic, concrete).


Mounting Point

Note the angle of the material mounds and the outlet funnel when determining the mounting point or probe length of the FTC262.

The Minicap switches when the probe tip is covered by a few centimeters of material or when it is free.

Material flow should not be directed at the probe.

Installation instructions FTC260

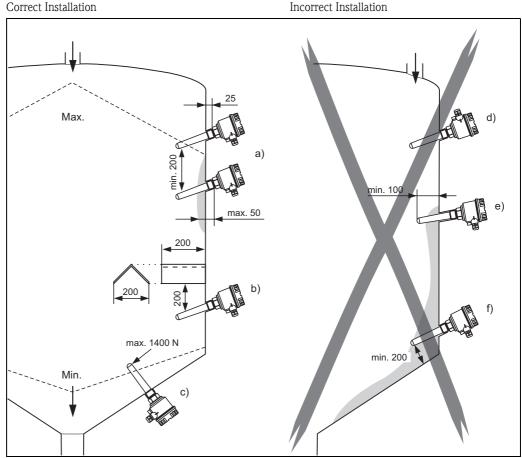

General information and recommendations for installing the Minicap FTC260 limit switch (Dimensions in mm)

L00-FTC26xxx-11-06-xx-xx-00

Correct Installation

- a. Minimum distance:
 - To prevent mutual interference with the FTC260, the probes must be at least 200 mm from each other.
- b. Mounting point:

The tip of the probes must point slightly downwards so that the material can slide off more easily. The protective cover protects the probe rod from collapsing mounds or mechanical strain at the outflow when the Minicap FTC260 is set to minimum detection.

c. Mechanical load:

The maximum lateral load on the probe rod must be taken into account when used for minimum detection. It should therefore only be used for minimum detection with loose materials that have good flow characteristics.


Incorrect Installation

- d. The probe can be damaged by the inflowing material and cause faulty switching. Cable gland pointed upwards can allow moisture to enter.
- e. Threaded socket too long with material build-up on the silo wall. (less than the minimum mounting depth of 100 mm).
- f. Mounted near build-up in the silo.

 The probe tip is too near to a silo wall (less than a minimum distance of 200 mm).

Installation instructions FTC262

Correct Installation Incorrect Installation

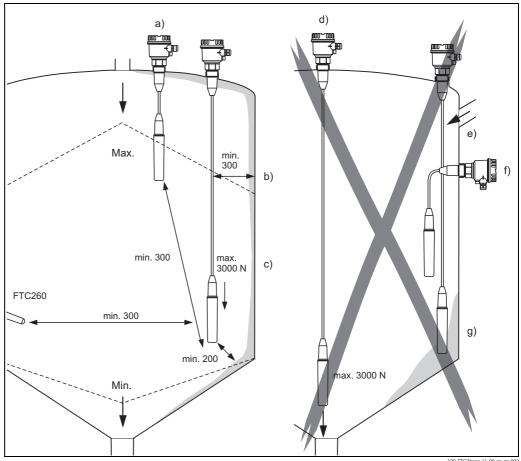

General information and recommendations for installing the Minicap FTC262 limit switch (Dimensions in mm)

Correct Installation

- Minimum distances:
 - Sufficent distance from the material filling curtain and the other probe.

Do not install in the centre of the outlet cone. Ensure there is sufficient distance from the silo wall and from material build-up on the wall.

Mechanical load:

Note the tensile strain on the probe rope and the strength of the silo roof when used for minimum

Very high tensile forces may occur at the material outlet especially with heavy, powdery bulk materials which tend to form build-up. These forces are significantly greater over the outlet than at the silo wall. For minimum detection Minicap FTC262 should only be used for light, easily flowing solids, and that do not tend to form build-up.

Incorrect Installation

- In the centre of the material outflow; the high tensile forces at this point may tear off the probe or damage the silo roof.
- The probe may be damaged by inflowing material.
- f. Mounted laterally
- Too near silo wall; when swinging gently the probe can hit the wall or touch any build-up which may have formed. This can result in error switching

Environment

Ambient temperature range T1	-40+70 °C (-40+160 °F) (+60 °C, Dust-Ex version] (see the temperature diagrams)
Ambient temperature limits	-40+80 °C (-40+180 °F) (+60 °C, Dust-Ex version] (see the temperature diagrams; grey background)
Storage temperature	-40+80 °C (-40+180 °F)
Climate class	IEC 68 part 2-38
Degree of protection	IP66
Shock resistance	Probe: 7 J
Vibrational resistance	EN 60068-2-64 (IEC 68-2-64), 202000 Hz, spectral rate of velocity 0.5, 100 min per axis
Electromagnetic compatibility	Interference Emission to EN 61326, Electrical Equipment Class B Interference Immunity to EN 61326, Annex A (Industrial) and NAMUR Recommendation NE 21 (EMC)
	See TI 241F/00/en for general instructions regarding the EMC test conditions for E+H instruments.

Process

Process	temperature	range
T2		

- FTC260: -40...+120 °C (-40...+250 °F) (...+80 °C, Dust-Ex version)
- FTC262: -40...+70 °C (-40...+160 °F)

(see the temperature diagrams)

Process temperature limits

- FTC260: -40...+130 °C (-40...+270 °F) (...+80 °C, Dust-Ex version)
- FTC262: -40...+80 °C (-40...+180 °F)


(see the temperature diagrams; grey background)

Process pressure range pe


- FTC260: -1...+25 bar (-14,5...+360 psi)
- FTC262: -1...+6 bar (-14,5...+90 psi)

Temperature diagrams

FTC260

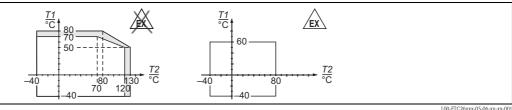

FTC262

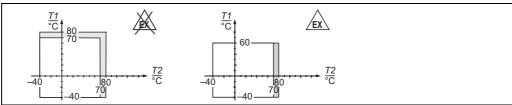


L00-FTC26xxx-05-06-xx-xx-00

12


Mechanical construction

Design, Dimensions (in mm)

Minicap FTC260

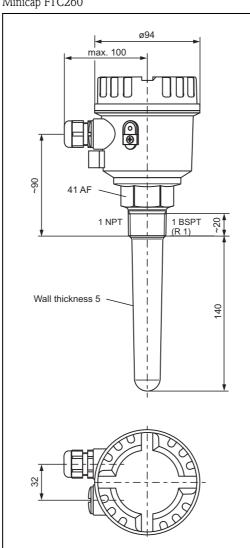


Adapter for FTC260

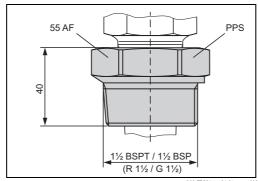

Probe length tolerances:

Probe length L Tolerances bis 1000 mm +0, -10 mm bis 3000 mm +0, -20 mm bis 6000 mm +0, -30 mm

Minicap FTC262

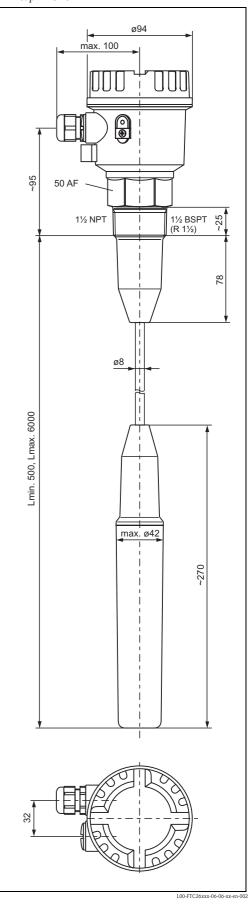

Material for wetted parts

- Probe rod FTC260: PPS = Polyphenylene sulphide (glass fibre content approx. 40%), FDA listed
- Probe length:

FTC260: 140 mm,

FTC262: min. 500 mm, max. 6000 mm

- Flexural strength FTC260: 1400 N (at probe tip)
- Probe rope FTC262: Surface in High Density PE over steel coating
- Other probe parts FTC262: PPS = Polyphenylene sulphide (glass fibre content approx. 40 %)
- Tensile strength F of FTC262: Max. 3000 N up to 40 °C, max. 2800 N at 80 °C



0.FTC26xxx.05.06.xx.xx.003

Process connections

Threaded boss:

■ FTC260: -1 BSPT (R 1, ISO 7/1);

Adapter for 1½ BSPT and 1½ BSP (G 1½) see accessories

- 1 NPT, ANSI B 1.20.1;

Adapter for 11/4 NPT see accessories

■ FTC262: -1½ BSPT (R 1½, ISO 7/1)

- 1½ NPT, ANSI B 1.20.1

Housing

Housing F14: Polyester PBT-FR, IP66

Human interface

Display elements

- Green LED: stand-by
- Red LED: switch status

Operating elements

Switch on electronic insert

- switching between minimum and maximum fail-safe mode
 - sensitivity setting

(depends on the dielectric constant $\varepsilon_{\rm r}$ and build-up).

A sensitivity adjustment is normally not required (see section "Measuring principle")

Certificates and approvals

CE approval	In attaching the CE Mark, Endress+Hauser confirms that the device conforms to all relevant EU directives.
Ex approval	ATEX, FM, CSA See section "Product structure"
Overspill protection FTC260	DIBt, General design approval

14

Ordering information

Product structure FTC260

10	App	roval		pproval					
	Α	Non-haza	rdous a	rea					
	D	Non-haza	n-hazardous area, WHG						
	В	ATEX II 1	/3 D						
	U	CSA, Ge	eneral p	purpose					
	S	CSA, DI	P C	. II Gr. E-G, Cl. III					
	J	FM, DI	P C	. II, III Gr. E-G, T5					
	Y	Special ve	rsion						
20		Process	conn	ection					
		A Thr		DIN2999 R 1, PPS					
		B Thr	ead	ANSI NPT 1, PPS					
		Y Spe	cial ver	sion					
30		Sw	itch o	utput					
30		2	3-wi	-					
		4	-	7 20253 V AC / 2055 V DC					
		9		ial version					
			Орес	TO SOLO					
40			Hou	ising, Cable entry					
			В	F14 Polyester IP66 Gland M20					
			С	F14 Polyester IP66 Thread NPT ½					
			D	F14 Polyester IP66 Thread G ½					
			Y	Special version					
50				Additional option					
				1 Basic version					
				2 Transparent cover					
			9 Special version						
FTC260				Product designation					
				<u>'</u>					

Product structure FTC262

A	10	App	roval								
A Thread DIN2999 R 1 ½, PPS Thread ANSI NPT 1 ½, PPS Y Special version Probe length, L=5006000 mm (20236 inch) 1		A B U S J	Non-h ATEX CSA, CSA, FM,	II 1/3 Gene DIP DIP	Deral pur Cl. II Cl. II	pose I, III G			I		
B	20		Proce	ess co	onnec	tion					
1			В 7	Threac	i A	NSI					
2 inch L (20 236 inch) steel HD-PE insulated 3 1500 mm (59 inch) steel HD-PE insulated 4 2500 mm (98 inch) steel HD-PE insulated 5 4000 mm (157 inch) steel HD-PE insulated 6 6000 mm (236 inch) steel HD-PE insulated 9 Special version	30]	Probe	e leng	th, L=5	006000	mm (2	0236 inch)		
2 3-wire PNP 10.845 V DC 4 Relay 20253 V AC / 2055 V DC 9 Special version			3 3 4 4 5 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6 6	2 . 3 1 4 2 5 4	inch 1500 m 2500 m 4000 m 6000 m	L (20 m (59 i m (98 i m (157 i m (236 i	236 inch) nch) nch)	steel steel steel	HD-PE insulated HD-PE insulated HD-PE insulated HD-PE insulated		
4 Relay 20253 V AC / 2055 V DC Special version Housing, Cable entry B F14 Polyester IP66 Gland M20 C F14 Polyester IP66 Thread NPT ½ D F14 Polyester IP66 Thread G ½ Y Special version Additional option 1 Basic version Transparent cover 9 Special version	40			5	Switch	ı outpu	t				
B F14 Polyester IP66 Gland M20 C F14 Polyester IP66 Thread NPT ½ D F14 Polyester IP66 Thread G ½ Y Special version Additional option 1 Basic version 2 Transparent cover 9 Special version				4	4 Re	elay 20	253 V AC /				
C F14 Polyester IP66 Thread NPT ½ D F14 Polyester IP66 Thread G ½ Y Special version Additional option 1 Basic version 2 Transparent cover 9 Special version	50				Н			itry			
1 Basic version 2 Transparent cover 9 Special version					C D	F14 F14	Polyester Polyester	IP66	Thread NPT ½		
2 Transparent cover 9 Special version	60					Add	litional op	tion			
TC262 Product designation						2	Transparen	t cover			
	FTC262						Product de	signation			

Accessories

■ FTC260, 1 BSPT female (R_c1), ISO 7/1 (see dimensional sketch): Adapter Part No.: 943215-1001, for 1½ BSPT (R 1½ ISO 7/1), PPS Part No.: 943215-1021, for 1½ BSP (G 1½ DIN ISO228), PPS ■ FTC260, 1 NPT female: Part No.: 943215-0042, for 11/4 NPT, steel Part No.: 943215-0043, for 1¹/₄ NPT, AISI 316Ti (1.4571) ■ FTC260/262: Transparent cover Part No.: 943201-1001 Rope shortening set ■ FTC262: Part No.: 52005918

Sunnlementary documentation

	Supplementary documentation
Operating manual (BA)	■ Minicap FTC260 KA093F/00/a6 017476-0000
	■ Minicap FTC262 KA155F/00/a6 52005985
	 Rope shortening set for FTC262 KA157F/00/a6
Safety instructions (XA)	■ Safety instructions (ATEX) for FTC260 XA011F/00/a3

- 52000928
- Safety instructions (ATEX) for FTC262 XA092F/00/a3 **C€** ₺ II 1/3 D 52005988

International Head Quarter

Endress+Hauser GmbH+Co. KG Instruments International Colmarer Str. 6 79576 Weil am Rhein Deutschland

Tel. +49 76 21 9 75 02 Fax +49 76 21 9 75 34 5 www.endress.com info@ii.endress.com



People for Process Automation