

# Technical Information

## Levelflex FMP51, FMP52, FMP54

Guided wave radar



Level and interface measurement in liquids

### Application

- Rod, rope or coax probe
- Process connection: Starting 3/4" thread, flange or process connections for hygiene requirements (Tri-Clamp, 11851)
- Process temperature: -196 to +450 °C (-320 to +842 °F)
- Process pressure: -1 to +400 bar (-14.5 to +5800 psi)
- Maximum measuring range: Rod 10 m (33 ft); rope 45 m (148 ft); coax 6 m (20 ft)
- Accuracy: ±2 mm (±0.08 in)
- International explosion protection certificates; WHG; marine approval; steam boiler approval; EN10204-3.1
- Linearity protocol (3-point, 5-point)

### Your benefits

- Reliable measurement even for changing product and process conditions
- HistoROM data management for easy commissioning, maintenance and diagnostics
- Highest reliability due to Multi-Echo Tracking
- Hardware and software developed according to IEC 61508 (up to SIL3)
- Seamless integration into control or asset management systems
- Intuitive user interface in national languages
- Easy proof test for SIL and WHG
- Heartbeat Technology™

## Table of contents





<b>Important document information</b> . . . . .	<b>4</b>	Electromagnetic compatibility (EMC) . . . . .	76
Symbols . . . . .	4		
<b>Function and system design</b> . . . . .	<b>6</b>	<b>Process</b> . . . . .	<b>77</b>
Measuring principle . . . . .	6	Process temperature range . . . . .	77
Measuring system . . . . .	10	Process pressure range . . . . .	77
		Dielectric constant (DC) . . . . .	78
		Expansion of the rope probes through temperature . . . . .	78
<b>Input</b> . . . . .	<b>12</b>	<b>Mechanical construction</b> . . . . .	<b>79</b>
Measured variable . . . . .	12	Dimensions . . . . .	79
Measuring range . . . . .	12	Tolerance of probe length . . . . .	87
Blocking distance . . . . .	14	Surface roughness of AlloyC-coated flanges . . . . .	87
Measuring frequency spectrum . . . . .	14	Shortening probes . . . . .	87
		Weight . . . . .	88
<b>Output</b> . . . . .	<b>15</b>	Materials: GT18 housing (stainless steel, corrosion-resistant) . . . . .	89
Output signal . . . . .	15	Materials: GT19 housing (plastic) . . . . .	90
Signal on alarm . . . . .	16	Materials: GT20 housing (die-cast aluminum, powder-coated) . . . . .	91
Linearization . . . . .	16	Materials: Process connection . . . . .	93
Galvanic isolation . . . . .	16	Materials: Probe . . . . .	94
Protocol-specific data . . . . .	17	Materials: Mounting bracket . . . . .	96
		Materials: Adapter and cable for remote sensor . . . . .	97
		Materials: Weather protection cover . . . . .	98
<b>Power supply</b> . . . . .	<b>22</b>	<b>Operability</b> . . . . .	<b>99</b>
Terminal assignment . . . . .	22	Operating concept . . . . .	99
Device plug connectors . . . . .	30	Local operation . . . . .	100
Power supply . . . . .	31	Operation with remote display and operating module	
Power consumption . . . . .	34	FHX50 . . . . .	100
Current consumption . . . . .	34	Remote operation . . . . .	101
Power supply failure . . . . .	35	Integration in tank gauging system . . . . .	104
Potential equalization . . . . .	35	SupplyCare inventory management software . . . . .	105
Terminals . . . . .	35		
Cable entries . . . . .	35	<b>Certificates and approvals</b> . . . . .	<b>108</b>
Cable specification . . . . .	35	CE mark . . . . .	108
Overtoltage protection . . . . .	36	RoHS . . . . .	108
		RCM-Tick marking . . . . .	108
		Ex approval . . . . .	108
<b>Performance characteristics</b> . . . . .	<b>37</b>	Dual seal according to ANSI/ISA 12.27.01 . . . . .	108
Reference operating conditions . . . . .	37	Functional Safety . . . . .	108
Reference accuracy . . . . .	37	Overfill prevention . . . . .	108
Resolution . . . . .	40	Sanitary compatibility . . . . .	109
Reaction time . . . . .	40	AD2000 . . . . .	109
Influence of ambient temperature . . . . .	40	NACE MR 0175 / ISO 15156 . . . . .	109
Influence of gas layer . . . . .	41	NACE MR 0103 . . . . .	109
Gas phase compensation with external pressure sensor (PROFIBUS PA / FOUNDATION Fieldbus) . . . . .	41	ASME B31.1 and B31.3 . . . . .	109
Gas phase compensation with reference signal (option for FMP54) . . . . .	42	Pressure equipment with allowable pressure ≤ 200 bar (2 900 psi) . . . . .	109
		Pressure equipment with allowable pressure > 200 bar (2 900 psi) . . . . .	110
<b>Mounting</b> . . . . .	<b>44</b>	Steam boiler approval . . . . .	110
Mounting requirements . . . . .	44	Marine certificate . . . . .	110
		Telecommunications . . . . .	110
<b>Operating conditions: Environment</b> . . . . .	<b>69</b>	CRN approval . . . . .	110
Ambient temperature range . . . . .	69	Track record . . . . .	112
Ambient temperature limits . . . . .	69	Test, Certificate . . . . .	113
Storage temperature . . . . .	76	Product documentation on paper . . . . .	113
Climate class . . . . .	76		
Altitude according to IEC61010-1 Ed.3 . . . . .	76		
Degree of protection . . . . .	76		
Vibration resistance . . . . .	76		
Cleaning the probe . . . . .	76		

Other standards and guidelines . . . . .	114
<b>Ordering information . . . . .</b>	<b>115</b>
Ordering information . . . . .	115
3-point linearity protocol . . . . .	116
5-point linearity protocol . . . . .	117
Customized parametrization . . . . .	119
Tagging (TAG) . . . . .	119
<b>Application Packages . . . . .</b>	<b>120</b>
Heartbeat Diagnostics . . . . .	120
Heartbeat Verification . . . . .	121
Heartbeat Monitoring . . . . .	122
<b>Accessories . . . . .</b>	<b>123</b>
Device-specific accessories . . . . .	123
Communication-specific accessories . . . . .	131
Service-specific accessories . . . . .	132
System components . . . . .	132
<b>Documentation . . . . .</b>	<b>133</b>
Standard documentation . . . . .	133
Supplementary documentation . . . . .	133
Safety documentation . . . . .	134
<b>Registered trademarks . . . . .</b>	<b>138</b>
<b>Patents . . . . .</b>	<b>139</b>






## Important document information

### Symbols









#### Safety symbols

Symbol	Meaning
	<b>DANGER!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation will result in serious or fatal injury.
	<b>WARNING!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in serious or fatal injury.
	<b>CAUTION!</b> This symbol alerts you to a dangerous situation. Failure to avoid this situation can result in minor or medium injury.
	<b>NOTE!</b> This symbol contains information on procedures and other facts which do not result in personal injury.




#### Electrical symbols

Symbol	Meaning
	Direct current
	Alternating current
	Direct current and alternating current
	<b>Ground connection</b> A grounded terminal which, as far as the operator is concerned, is grounded via a grounding system.
	<b>Protective Earth (PE)</b> A terminal which must be connected to ground prior to establishing any other connections.  The ground terminals are situated inside and outside the device: <ul style="list-style-type: none"> <li>▪ Inner ground terminal: Connects the protective earth to the mains supply.</li> <li>▪ Outer ground terminal: Connects the device to the plant grounding system.</li> </ul>



#### Symbols for certain types of information

Symbol	Meaning
	<b>Permitted</b> Procedures, processes or actions that are permitted.
	<b>Preferred</b> Procedures, processes or actions that are preferred.
	<b>Forbidden</b> Procedures, processes or actions that are forbidden.
	<b>Tip</b> Indicates additional information.
	Reference to documentation.
	Reference to page.
	Reference to graphic.
	Visual inspection.

### Symbols in graphics

Symbol	Meaning
1, 2, 3 ...	Item numbers
	Series of steps
A, B, C, ...	Views
A-A, B-B, C-C, ...	Sections
	<b>Hazardous area</b> Indicates a hazardous area.
	<b>Safe area (non-hazardous area)</b> Indicates the non-hazardous area.

### Symbols at the device


Symbol	Meaning
	<b>Safety instructions</b> Observe the safety instructions contained in the associated Operating Instructions.
	<b>Temperature resistance of the connection cables</b> Specifies the minimum value of the temperature resistance of the connection cables.

## Function and system design

### Measuring principle

#### Basic principles

The Levelflex is a "downward-looking" measuring system that functions according to the ToF method (ToF = Time of Flight). The distance from the reference point to the product surface is measured. High-frequency pulses are injected to a probe and led along the probe. The pulses are reflected by the product surface, received by the electronic evaluation unit and converted into level information. This method is also known as TDR (Time Domain Reflectometry).

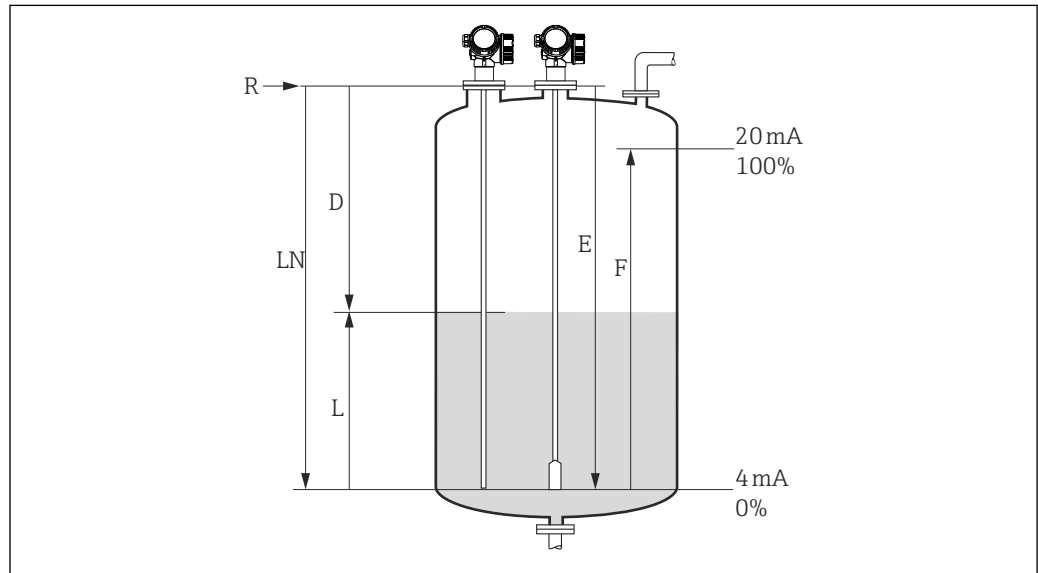

1 Parameters for level measurement with the guided radar

- LN Probe length
- D Distance
- L Level
- R Reference point of measurement
- E Empty calibration (= zero)
- F Full calibration (= span)

**i** If, for rope probes, the DC value is less than 7, then measurement is not possible in the area of the straining weight (0 to 250 mm (0 to 9.84 in) from end of probe; lower blocking distance).

### Dielectric constant

The dielectric constant (DC) of the medium has a direct impact on the degree of reflection of the high-frequency pulses. In the case of large DC values, such as for water or ammonia, there is strong pulse reflection while, with low DC values, such as for hydrocarbons, weak pulse reflection is experienced.

### Input

The reflected pulses are transmitted from the probe to the electronics. There, a microprocessor analyzes the signals and identifies the level echo which was generated by the reflection of the high-frequency pulses at the product surface. This clear signal detection system benefits from over 30 years' experience with pulse time-of-flight procedures that have been integrated into the development of the PulseMaster® software.

The distance  $D$  to the product surface is proportional to the time of flight  $t$  of the impulse:




$$D = c \cdot t/2,$$

where  $c$  is the speed of light.

Based on the known empty distance  $E$ , the level  $L$  is calculated:

$$L = E - D$$

The reference point  $R$  of the measurement is located at the process connection. For details see the dimensional drawing:

- FMP51: →  81
- FMP52: →  84
- FMP54: →  85


The Levelflex possesses functions for interference echo suppression that can be activated by the user. They guarantee that interference echoes from e.g. internals and struts are not interpreted as level echoes.

### Output

The Levelflex is preset at the factory to the probe length ordered so that in most cases only the application parameters that automatically adapt the device to the measuring conditions need to be entered. For models with a current output, the factory adjustment for zero point  $E$  and span  $F$  is 4 mA and 20 mA, for digital outputs and the display module 0 % and 100 %. A linearization function with max. 32 points, which is based on a table entered manually or semi-automatically, can be activated on site or via remote operation. This function allows the level to be converted into units of volume or mass, for example.

### Interface measurement

When the high-frequency pulses hit the surface of the medium, only a percentage of the transmission pulse is reflected. In the case of media with a low  $DC_1$ , in particular, the other part penetrates the medium. The pulse is reflected once more at the interface point to a second medium with a higher  $DC_2$ . The distance to the interface layer now can also be determined taking into account the delayed time-of-flight of the pulse through the upper medium.

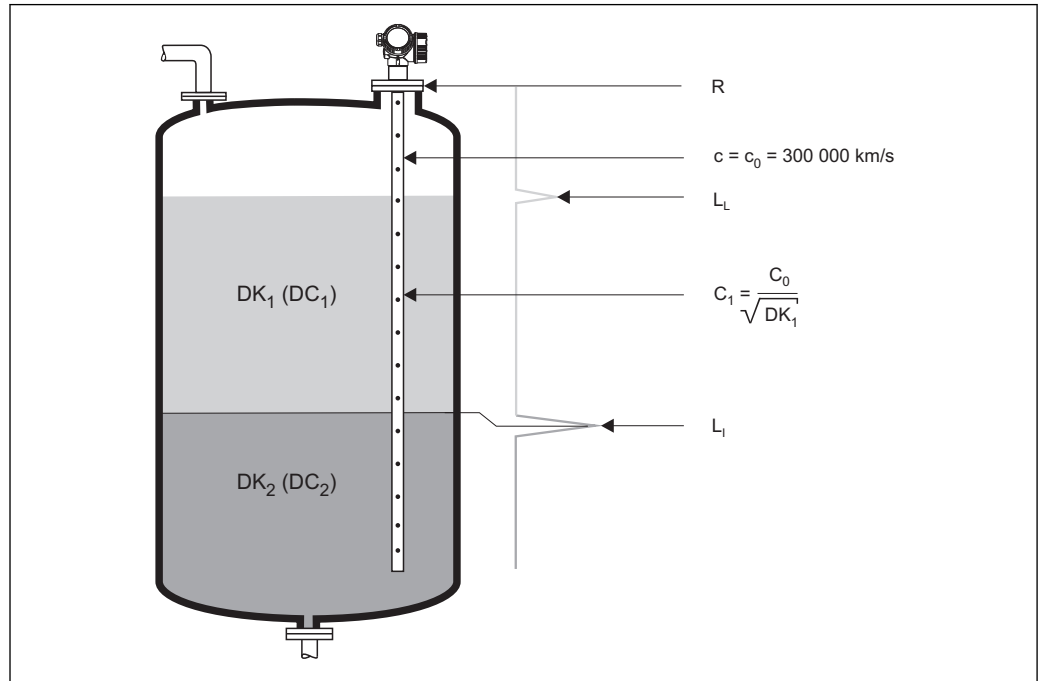

A0011178

2 Interface measurement with the guided radar

*LL* Level complete

*L1* Level interface

*R* Reference point of measurement

In addition, the following general conditions must be observed for interface measurement:

- The DC of the upper medium must be known and constant <sup>1)</sup>. The DC can be determined with the aid of the DC manual CP00019F or the "DC Values App". In addition, if the interface thickness is existing and known, the DC can be calculated automatically via FieldCare.
- The DC of the upper medium may not be greater than 10.
- The DC difference between the upper medium and lower medium must be >10.
- The upper medium must have a minimum thickness of 60 mm (2.4 in).
- Emulsion layers in the area of the interface can strongly attenuate the signal. However, emulsion layers up to 50 mm (2 in) are admissible.



For dielectric constants (DC values) of many media commonly used in various industries refer to:

- the Endress+Hauser DC manual (CP01076F)
- the Endress+Hauser "DC Values App" (available for Android and iOS)

1) For FMP55: Under certain conditions measurement is possible even with a changing DC. For details please contact your Endress+Hauser representative.



### **Life cycle of the product**

#### **Engineering**

- Universal measuring principle
- Measurement unaffected by medium properties
- Hardware and software developed according to SIL IEC 61508
- Genuine, direct interface measurement

#### **Procurement**

- Endress+Hauser being the world market leader in level measurement guarantees asset protection
- Worldwide support and service

#### **Installation**

- Special tools are not required
- Reverse polarity protection
- Modern, detachable terminals
- Main electronics protected by a separate connection compartment

#### **Commissioning**

- Fast, menu-guided commissioning in only 6 steps
- Plain text display in national languages reduces the risk of error or confusion
- Direct local access of all parameters
- Short instruction manual at the device

#### **Operation**

- Multi-echo tracking: Reliable measurement through self-learning echo-search algorithms taking into account the short-term and long-term history in order to check the found echoes for plausibility and to suppress interference echoes.
- Diagnostics in accordance with NAMUR NE107

#### **Maintenance**

- HistoROM: Data backup for instrument settings and measured values
- Exact instrument and process diagnosis to assist fast decisions with clear details concerning remedies
- Intuitive, menu-guided operating concept in national languages saves costs for training, maintenance and operation
- Cover of the electronics compartment can be opened in hazardous areas

#### **Retirement**

- Order code translation for subsequent models
- RoHS-conforming (Restriction of certain Hazardous Substances), unleaded soldering of electronic components
- Environmentally sound recycling concept




**Measuring system**

**General notes on probe selection**

- Normally use rod or coax probes for liquids. Rope probes are used in liquids for measuring ranges > 10 m (33 ft) (> 4 m (13 ft) for FMP52) and with restricted ceiling clearance which does not allow the installation of rigid probes.
- For interface measurement, ideally coax probes or rod probes in a bypass/stilling well are used.
- Coax probes are suited to liquids with viscosities of up to approx. 500 cst. Coax probes can measure most liquefied gases, as of a dielectric constant of 1.4. Moreover, installation conditions, such as nozzles, tank internal fittings etc., have no effect on the measurement when a coax probe is used. A coax probe offers maximum EMC safety when used in plastic tanks.

**Probe selection**



The various types of probe in combination with the process connections are suitable for the following applications <sup>2)</sup>:




Levelflex FMP51						
Type of probe	Rod probe		Rope probe		Coax probe <sup>1)</sup>	
						
	A0011387		A0011388		A0011359	
Feature 060 - Probe:	<b>Option:</b>		<b>Option:</b>		<b>Option:</b>	
	AA	8 mm (316L)	LA	4 mm (316)	UA	... mm (316L)
	AB	1/3" (316L)	LB	1/6" (316)	UB	... inch (316L)
	AC	12 mm (316L)	MB	4 mm (316) with center rod	UC	... mm (AlloyC)
	AD	1/2" (316L)	MD	1/6" (316) with center rod	UD	... inch (AlloyC)
	AL	12 mm (AlloyC)				
	AM	1/2" (AlloyC)				
	BA BC	16 mm (316L) divisible				
BB BD	0.63 in (316L) divisible					
Max. probe length	10 m (33 ft) <sup>2)</sup>		45 m (148 ft)		6 m (20 ft)	
For application	level and interface measurement in liquids		level and interface measurement in liquids		level and interface measurement in liquids	

1) Punched for process connections G1-1/2" or flange; multiple holes for 316L, one hole for AlloyC

2) Maximum probe length for indivisible rod probes: 4 m (13 ft)

2) If required, rod and rope probes can be replaced. They are secured with Nord-Lock washers or a thread coating. For further information on service and spare parts please contact the Endress+Hauser service.

Levelflex FMP52				
Type of probe	Rod probe		Rope probe	
	 A0011357		 A0011358	
Feature 060 - Probe:	Option:		Option:	
	CA	16 mm (PFA>316L)	OA	4 mm (PFA>316), max. 150 mm nozzle height, center rod
	CB	0.63 in (PFA>316L)	OB	4 mm (PFA>316), max. 300 mm nozzle height, center rod
			OC	1/6" (PFA>316), max. 6 in nozzle height, center rod
			OD	1/6" (PFA>316), max. 12 in nozzle height, center rod
Max. probe length	4 m (13 ft)		45 m (148 ft)	
For application	level and interface measurement in corrosive liquids		level and interface measurement in corrosive liquids	

Levelflex FMP54						
Type of probe	Rod probe		Rope probe	Coax probe		
	 A0011357		 A0011358	 A0011359		
Feature 060 - Probe:	Option:		Option:	Option:		
	AE BA BC	16 mm (316L)	LA	4 mm (316)	UA	... mm (316L)
	AF BB BD	0.63 in (318L)	LB	1/6" (316)	UB	... inch (316L)
Max. probe length	10 m (33 ft) <sup>1)</sup>		45 m (148 ft)	6 m (20 ft)		
For application	level and interface measurement in liquids		level and interface measurement in liquids	level and interface measurement in liquids		

1) Maximum probe length for indivisible rod probes: 4 m (13 ft)

## Input

**Measured variable** The measured variable is the distance between the reference point and the product surface.  
Subject to the empty distance entered "E" the level is calculated.  
Alternatively, the level can be converted into other variables (volume, mass) by means of linearization (32 points).


**Measuring range** The following table describes the media groups and the possible measuring range as a function of the media group.

Levelflex FMP51, FMP54					
Media group	DC ( $\epsilon_r$ )	Typical liquids	Measuring range <sup>1)</sup>		
			bare metallic rod probes	bare metallic rope probes	coax probes
1	1.4...1.6	condensed gases, e.g. N <sub>2</sub> , CO <sub>2</sub>	on request		
2	1.6...1.9	<ul style="list-style-type: none"> <li>▪ liquefied gas, e.g. propane</li> <li>▪ solvent</li> <li>▪ Freon</li> <li>▪ palm oil</li> </ul>	<ul style="list-style-type: none"> <li>▪ one-piece: 4 m (13 ft)</li> <li>▪ divisible: 10 m (33 ft)</li> </ul>	15 to 22 m (49 to 72 ft)	6 m (20 ft)
3	1.9...2.5	mineral oils, fuels	<ul style="list-style-type: none"> <li>▪ one-piece: 4 m (13 ft)</li> <li>▪ divisible: 10 m (33 ft)</li> </ul>	22 to 32 m (72 to 105 ft)	6 m (20 ft)
4	2.5...4	<ul style="list-style-type: none"> <li>▪ benzene, styrene, toluene</li> <li>▪ furan</li> <li>▪ naphthalene</li> </ul>	<ul style="list-style-type: none"> <li>▪ one-piece: 4 m (13 ft)</li> <li>▪ divisible: 10 m (33 ft)</li> </ul>	32 to 42 m (105 to 138 ft)	6 m (20 ft)
5	4...7	<ul style="list-style-type: none"> <li>▪ chlorobenzene, chloroform</li> <li>▪ cellulose spray</li> <li>▪ isocyanate, aniline</li> </ul>	<ul style="list-style-type: none"> <li>▪ one-piece: 4 m (13 ft)</li> <li>▪ divisible: 10 m (33 ft)</li> </ul>	42 to 45 m (138 to 148 ft)	6 m (20 ft)
6	> 7	<ul style="list-style-type: none"> <li>▪ aqueous solutions</li> <li>▪ alcohols</li> <li>▪ ammonia</li> </ul>	<ul style="list-style-type: none"> <li>▪ one-piece: 4 m (13 ft)</li> <li>▪ divisible: 10 m (33 ft)</li> </ul>	45 m (148 ft)	6 m (20 ft)

1) The measuring range for interface measurement is limited to 10 m (33 ft).

Levelflex FMP52				
Media group	DC ( $\epsilon_r$ )	Typical liquids	Measuring range <sup>1)</sup>	
			PFA-coated rod probes	PFA-coated rope probes
1	1.4...1.6	condensed gases, e.g. N <sub>2</sub> , CO <sub>2</sub>	–	–
2	1.6...1.9	<ul style="list-style-type: none"> <li>▪ liquefied gas, e.g. propane</li> <li>▪ solvent</li> <li>▪ Freon</li> <li>▪ palm oil</li> </ul>	4 m (13 ft)	9 to 14 m (30 to 46 ft)
3	1.9...2.5	mineral oils, fuels	4 m (13 ft)	14 to 21 m (46 to 69 ft)
4	2.5...4	<ul style="list-style-type: none"> <li>▪ benzene, styrene, toluene</li> <li>▪ furan</li> <li>▪ naphthalene</li> </ul>	4 m (13 ft)	21 to 28 m (69 to 92 ft)
5	4...7	<ul style="list-style-type: none"> <li>▪ chlorobenzene, chloroform</li> <li>▪ cellulose spray</li> <li>▪ isocyanate, aniline</li> </ul>	4 m (13 ft)	28 to 32 m (92 to 105 ft)
6	> 7	<ul style="list-style-type: none"> <li>▪ aqueous solutions</li> <li>▪ alcohols</li> <li>▪ acids, alkalis</li> </ul>	4 m (13 ft)	32 to 45 m (105 to 148 ft)


1) The measuring range for interface measurement is limited to 10 m (33 ft).

-  ▪ Reduction of the max. possible measuring range through buildup, above all of moist products.
- Due to the high diffusion rate of ammonia it is recommended with gas-tight bushing <sup>3)</sup> for measurements in this medium.

3) always contained in FMP54 ; optionally available for FMP51/52

**Blocking distance**

The upper blocking distance (= UB) is the minimum distance from the reference point of the measurement (mounting flange) to the maximum level.

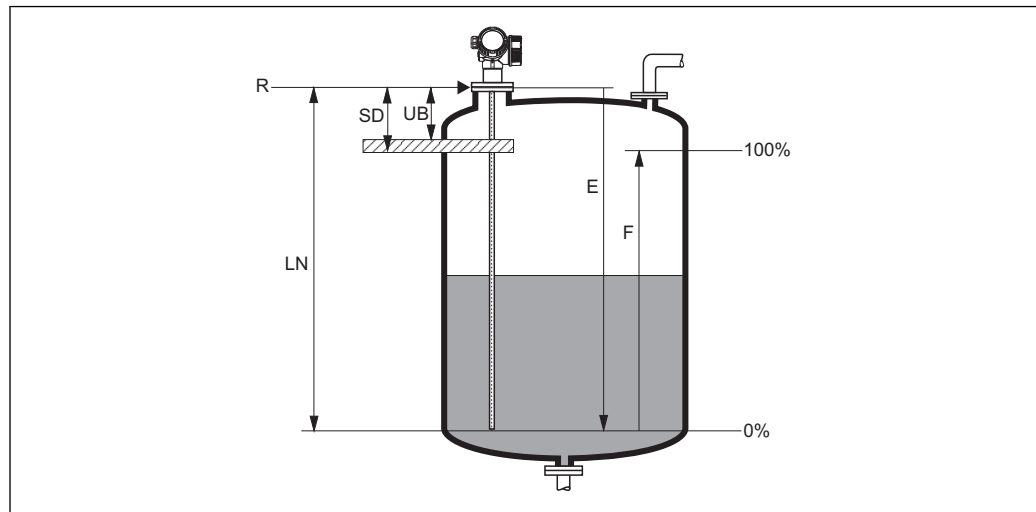

A0011279

**3** Definition of blocking distance and safety distance

- R Reference point of measurement  
 LN Probe length  
 UB Upper blocking distance  
 E Empty calibration (= zero)  
 F Full calibration (= span)  
 SD Safety distance

Blocking distance (factory setting):

- with coax probes: 0 mm (0 in)
- with rod and rope probes up to 8 m (26 ft): 200 mm (8 in)
- with rod and rope probes exceeding a length of 8 m (26 ft):  $0.025 \cdot (\text{length of probe})$

**i** The specified blocking distances are preset on delivery. Depending on the application these settings can be changed.

For rod and rope probes and for media with  $DC > 7$  (or generally for stilling well/bypass applications) the blocking distance may be reduced to 100 mm (4").

Within the blocking distance, a reliable measurement can not be guaranteed.

**i** A safety distance SD can be defined in addition to the blocking distance. A warning is generated if the level rises into this safety distance.

**Measuring frequency spectrum**

100 MHz to 1.5 GHz

## Output

### Output signal

#### HART

Signal coding	FSK $\pm 0.5$ mA over currency signal
Data transmission rate	1200 Baud
Galvanic isolation	Yes

#### PROFIBUS PA

Signal coding	Manchester Bus Powered (MBP)
Data transmission rate	31,25 KBit/s, voltage mode
Galvanic isolation	Yes

#### FOUNDATION Fieldbus

Signal coding	Manchester Bus Powered (MBP)
Data transmission rate	31,25 KBit/s, voltage mode
Galvanic isolation	Yes

#### Switch output



For HART devices, the switch output is available as an option. See product structure, feature 20: "Power Supply, Output", option B: "2-wire; 4-20mA HART, switch output"

Devices with PROFIBUS PA and FOUNDATION Fieldbus always have a switch output.

Switch output	
Function	Open collector switching output
Switching behavior	Binary (conductive or non-conductive), switches when the programmable switch point is reached
Failure mode	non-conductive
Electrical connection values	$U = 16 \text{ to } 35 \text{ V}_{\text{DC}}$ , $I = 0 \text{ to } 40 \text{ mA}$
Internal resistance	$R_i < 880 \Omega$ The voltage drop at this internal resistance has to be taken into account on planning the configuration. For example, the resulting voltage at a connected relay must be sufficient to switch the relay.
Insulation voltage	floating, Insulation voltage $1350 \text{ V}_{\text{DC}}$ to power supply and $500 \text{ V}_{\text{AC}}$ to ground
Switch point	freely programmable, separately for switch-on and switch-off point
Switching delay	freely programmable from 0 to 100 s, separately for switch-on and switch-off point
Number of switching cycles	corresponds to the measuring cycle
Signal source device variables	<ul style="list-style-type: none"> <li>▪ Level linearized</li> <li>▪ Distance</li> <li>▪ Terminal voltage</li> <li>▪ Electronic temperature</li> <li>▪ Relative echo amplitude</li> <li>▪ Interface linearized <sup>1)</sup></li> <li>▪ Interface distance <sup>1)</sup></li> <li>▪ Upper interface thickness <sup>1)</sup></li> <li>▪ Relative interface amplitude <sup>1)</sup></li> <li>▪ Diagnostic values, Advanced diagnostics</li> </ul>
Number of switching cycles	unlimited

1) only if an interface measurement is active

### Signal on alarm

Depending on the interface, failure information is displayed as follows:

- Current output (for HART devices)
  - Failsafe mode selectable (in accordance with NAMUR Recommendation NE 43):
    - Minimum alarm: 3.6 mA
    - Maximum alarm (= factory setting): 22 mA
  - Failsafe mode with user-selectable value: 3.59 to 22.5 mA
- Local display
  - Status signal (in accordance with NAMUR Recommendation NE 107)
  - Plain text display
- Operating tool via digital communication or service interface (CDI)
  - Status signal (in accordance with NAMUR Recommendation NE 107)
  - Plain text display

### Linearization

The linearization function of the device allows the conversion of the measured value into any unit of length or volume. Linearization tables for calculating the volume in cylindrical tanks are pre-programmed. Other tables of up to 32 value pairs can be entered manually or semi-automatically.

### Galvanic isolation

All circuits for the outputs are galvanically isolated from each other.



Protocol-specific data

HART

Manufacturer ID	17 (0x11)
Device type ID	0x1122
HART specification	7.0
Device description files (DTM, DD)	Information and files at: <ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.fieldcommgroup.org">www.fieldcommgroup.org</a></li> </ul>
HART load	Min. 250 Ω
HART device variables	The measured values can be freely assigned to the device variables. <p><b>Measured values for PV (primary variable)</b></p> <ul style="list-style-type: none"> <li>▪ Level linearized</li> <li>▪ Distance</li> <li>▪ Interface <sup>1)</sup></li> <li>▪ Interface distance <sup>1)</sup></li> <li>▪ Upper interface thickness <sup>1)</sup></li> <li>▪ Electronic temperature</li> <li>▪ Relative echo amplitude</li> <li>▪ Relative interface amplitude <sup>1)</sup></li> </ul> <p><b>Measured values for SV, TV, FV (second, third and fourth variable)</b></p> <ul style="list-style-type: none"> <li>▪ Level linearized</li> <li>▪ Distance</li> <li>▪ Interface linearized <sup>1)</sup></li> <li>▪ Interface distance <sup>1)</sup></li> <li>▪ Upper interface thickness <sup>1)</sup></li> <li>▪ Terminal voltage</li> <li>▪ Electronic temperature</li> <li>▪ Absolute echo amplitude</li> <li>▪ Relative echo amplitude</li> <li>▪ Absolute interface amplitude <sup>1)</sup></li> <li>▪ Relative interface amplitude <sup>1)</sup></li> <li>▪ Calculated DC</li> </ul>
Supported functions	<ul style="list-style-type: none"> <li>▪ Burst mode</li> <li>▪ Additional transmitter status</li> </ul>

1) only if an interface measurement is active

Wireless HART data

<b>Minimum start-up voltage</b>	for device version "2-wire; 4-20mA HART" <sup>1)</sup> : 17.5 V
<b>Minimum start-up voltage</b>	for any other device version: 16.0 V
<b>Start-up current</b>	3.6 mA
<b>Start-up time</b>	45 s
<b>Minimum operating voltage</b>	11.4 V
<b>Multidrop current</b>	3.6 mA
<b>Set-up time</b>	1 s

1) Ordering feature 020: "Power supply; output", option A

**PROFIBUS PA**

Manufacturer ID	17 (0x11)
Ident number	0x1558
Profile version	3.02
GSD file	Information and files at:
GSD file version	<ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.profibus.org">www.profibus.org</a></li> </ul>
Output values	<p><b>Analog Input:</b></p> <ul style="list-style-type: none"> <li>▪ Level linearized</li> <li>▪ Distance</li> <li>▪ Interface <sup>1)</sup></li> <li>▪ Interface distance <sup>1)</sup></li> <li>▪ Upper interface thickness <sup>1)</sup></li> <li>▪ Terminal voltage</li> <li>▪ Electronic temperature</li> <li>▪ Absolute echo amplitude</li> <li>▪ Relative echo amplitude</li> <li>▪ Absolute interface amplitude <sup>1)</sup></li> <li>▪ Relative interface amplitude <sup>1)</sup></li> <li>▪ Calculated DC</li> </ul> <p><b>Digital Input:</b></p> <ul style="list-style-type: none"> <li>▪ Extended diagnostic blocks</li> <li>▪ Status output PFS Block</li> </ul>
Input values	<p><b>Analog Output:</b></p> <ul style="list-style-type: none"> <li>▪ Analog value from PLC (for sensor block external pressure and temperature)</li> <li>▪ Analog value from PLC to be indicated on the display</li> </ul> <p><b>Digital Output:</b></p> <ul style="list-style-type: none"> <li>▪ Extended diagnostic block</li> <li>▪ Level limiter</li> <li>▪ Sensor block measurement on</li> <li>▪ Sensor block save history on</li> <li>▪ Status output</li> </ul>
Supported functions	<ul style="list-style-type: none"> <li>▪ Identification &amp; Maintenance Simple device identification via control system and nameplate</li> <li>▪ Automatic Ident Number Adoption GSD compatibility mode with respect to the previous device Levelflex M FMP4x</li> <li>▪ Physical Layer Diagnostics Installation check of the PROFIBUS segment and the Levelflex FMP4x via terminal voltage and telegram monitoring</li> <li>▪ PROFIBUS Up-/Download Up to 10 times faster reading and writing of parameters via PROFIBUS Up-/Download</li> <li>▪ Condensed Status Simple and self-explanatory diagnostic information due to categorization of diagnostic messages</li> </ul>

1) only if an interface measurement is active

**FOUNDATION Fieldbus**

Manufacturer ID	0x452B48
Device type	0x1022
Device Revision	0x01
DD Revision	Information and files at:
CFF Revision	<ul style="list-style-type: none"> <li>▪ <a href="http://www.endress.com">www.endress.com</a></li> <li>▪ <a href="http://www.fieldcommgroup.org">www.fieldcommgroup.org</a></li> </ul>
Device Tester Version (ITK Version)	6.01
ITK Test Campaign Number	IT080500
Link Master (LAS) capable	yes
Link Master / Basic Device selectable	yes; default: Basic Device
Node address	Default: 247 (0xF7)
Features supported	<p>Following methods are supported:</p> <ul style="list-style-type: none"> <li>▪ Restart</li> <li>▪ ENP Restart</li> <li>▪ Setup</li> <li>▪ Linearization</li> <li>▪ Self Check</li> </ul>
<b>Virtual Communication Relationships (VCRs)</b>	
Number of VCRs	44
Number of Link Objects in VFD	50
Permanent entries	1
Client VCRs	0
Server VCRs	10
Source VCRs	43
Sink VCRs	0
Subscriber VCRs	43
Publisher VCRs	43
<b>Device Link Capabilities</b>	
Slot time	4
Min. inter PDU delay	8
Max. response delay	5

*Transducer Blocks*

<b>Block</b>	<b>Content</b>	<b>Output values</b>
Setup Transducer Block	Contains all parameters for a standard commissioning procedure	<ul style="list-style-type: none"> <li>■ Level or volume <sup>1)</sup> (Channel 1)</li> <li>■ Distance (Channel 2)</li> </ul>
Advanced Setup Transducer Block	Contains all parameters for a more detailed configuration of the device	no output values
Display Transducer Block	Contains all parameters for the configuration of the display module	no output values
Diagnostic Transducer Block	Contains diagnostic information	no output values
Expert Configuration Transducer Block	Contains parameters which require detailed knowledge of the functionalities of the device	no output values
Expert Information Transducer Block	Contains information about the state of the device	no output values
Service Sensor Transducer Block	Contains parameters which can only be operated by Endress+Hauser service personnel	no output values
Service Information Transducer Block	Contains information on the state of device which is relevant for service operations	no output values
Data Transfer Transducer Block	Contains parameters which allow to backup the device configuration in the display module and to restore it into the device.	no output values

1) depending on the configuration of the block

Function Blocks

Block	Content	Number of permanent blocks	Number of instantiable blocks	Execution time	Functionality
Resource Block	The Resource Block contains all the data that uniquely identify the field device. It is an electronic version of a nameplate of the device.	1	0	-	enhanced
Analog Input Block	The AI block takes the manufacturer's input data, selected by channel number, and makes it available to other function blocks at its output.	2	3	25 ms	enhanced
Discrete Input Block	The DI block takes a discrete input value (e.g. indication of an level limit), and makes it available to other function blocks at its output.	1	2	20 ms	standard
PID Block	The PID block serves as proportional-integral-derivative controller and is used almost universally to do closed-loop-control in the field including cascade and feedforward.	1	1	25 ms	standard
Arithmetic Block	This block is designed to permit simple use of popular measurement math functions. The user does not have to know how to write equations. The math algorithm is selected by name, chosen by the user for the function to be done.	1	1	25 ms	standard
Signal Characterizer Block	The signal characterizer block has two sections, each with an output that is a non-linear function of the respective input. The non-linear function is determined by a single look-up table with 21 arbitrary x-y pairs.	1	1	25 ms	standard
Input Selector Block	The input selector block provides selection of up to four inputs and generates an output based on the configured action. This block normally receives its inputs from AI blocks. The block performs maximum, minimum, middle, average and 'first good' signal selection.	1	1	25 ms	standard
Integrator Block	The Integrator Function Block integrates a variable as a function of the time or accumulates the counts from a Pulse Input block. The block may be used as a totalizer that counts up until reset or as a batch totalizer that has a setpoint, where the integrated or accumulated value is compared to pre-trip and trip settings, generating discrete signals when these settings are reached.	1	1	25 ms	standard
Analog Alarm Block		1	1	25 ms	standard




Up to 20 blocks can be instantiated in the device altogether, including the blocks already instantiated on delivery.

## Power supply

Terminal assignment

2-wire: 4-20mA HART

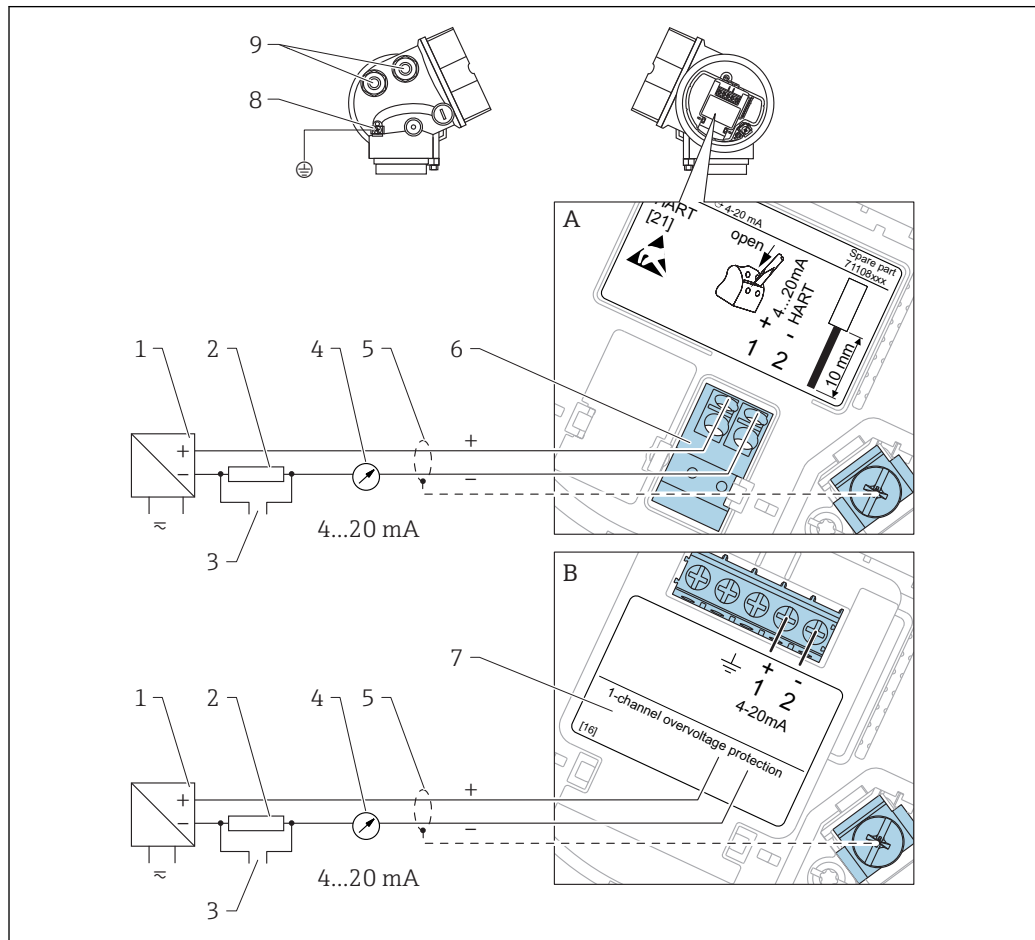

A0011294

4 Terminal assignment 2-wire; 4-20mA HART

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Active barrier with power supply (e.g. RN221N): Observe terminal voltage

2 HART communication resistor ( $\geq 250 \Omega$ ): Observe maximum load

3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)

4 Analog display device: Observe maximum load

5 Cable screen; observe cable specification


6 4-20mA HART (passive): Terminals 1 and 2

7 Overvoltage protection module

8 Terminal for potential equalization line

9 Cable entry

2-wire: 4-20mA HART, switch output

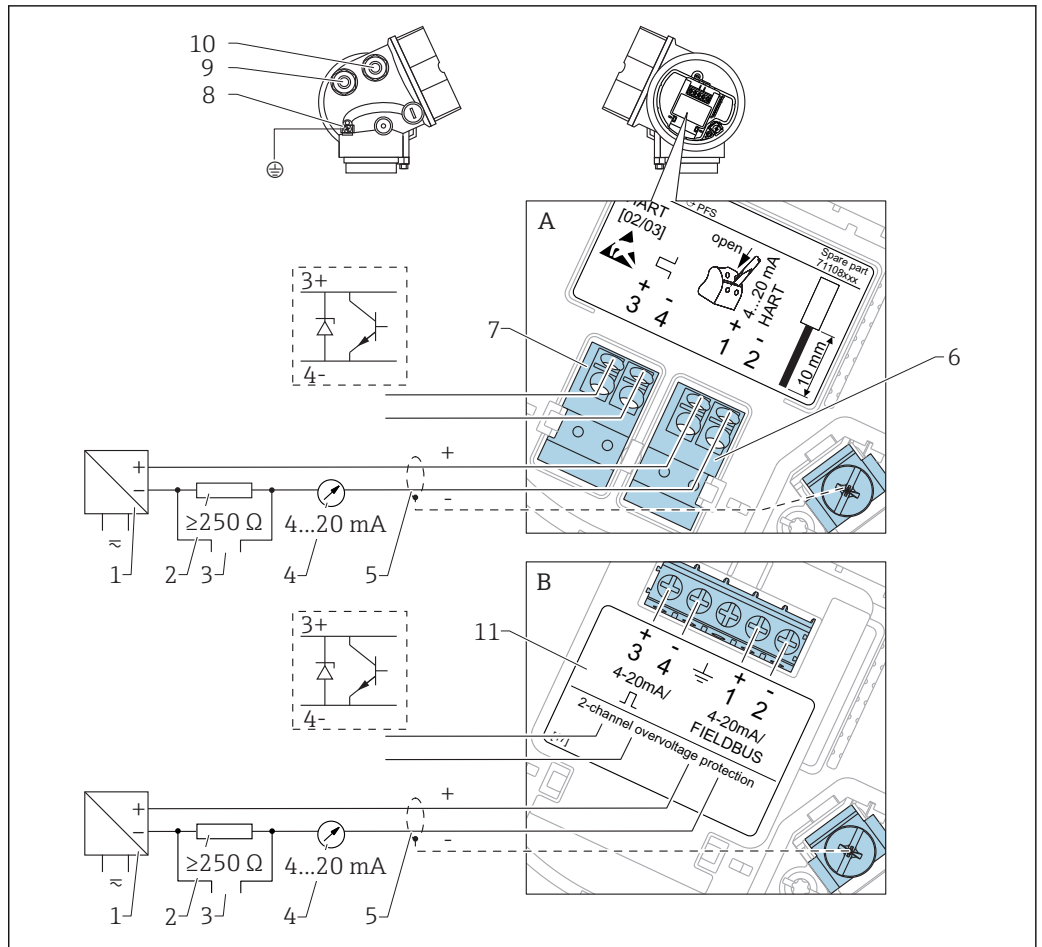

A0013759

5 Terminal assignment 2-wire; 4-20mA HART, switch output

A Without integrated overvoltage protection

B With integrated overvoltage protection

1 Active barrier with power supply (e.g. RN221N): Observe terminal voltage

2 HART communication resistor ( $\geq 250 \Omega$ ): Observe maximum load

3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)

4 Analog display device: Observe maximum load

5 Cable screen; observe cable specification

6 4-20mA HART (passive): Terminals 1 and 2

7 Switch output (open collector): Terminals 3 and 4


8 Terminal for potential equalization line

9 Cable entry for 4-20mA HART line

10 Cable entry for switch output line

11 Overvoltage protection module

2-wire: 4-20mA HART, 4-20mA

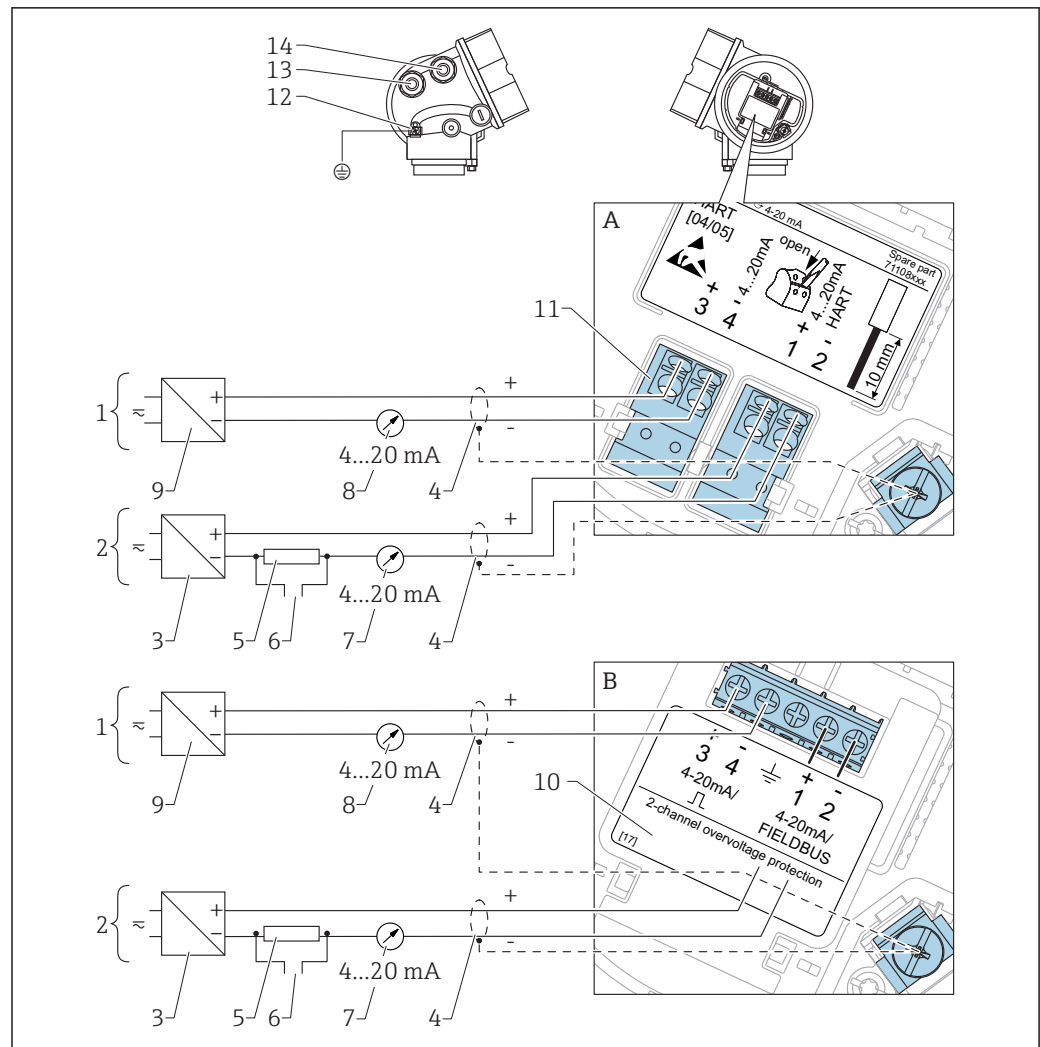

A0013923


6 Terminal assignment 2-wire, 4-20 mA HART, 4...20mA

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Connection current output 2
- 2 Connection current output 1
- 3 Supply voltage for current output 1 (e.g. RN221N); Observe terminal voltage
- 4 Cable screen; observe cable specification
- 5 HART communication resistor ( $\geq 250 \Omega$ ); Observe maximum load
- 6 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 7 Analog display device ; observe maximum load
- 8 Analog display device ; observe maximum load
- 9 Supply voltage for current output 2 (e.g. RN221N); Observe terminal voltage
- 10 Overvoltage protection module
- 11 Current output 2: Terminals 3 and 4
- 12 Terminal for the potential equalization line
- 13 Cable entry for current output 1
- 14 Cable entry for current output 2

**i** This version is also suited for single-channel operation. In this case, current output 1 (terminals 1 and 2) must be used.



**4-wire: 4-20mA HART (10.4 to 48 V<sub>DC</sub>)**

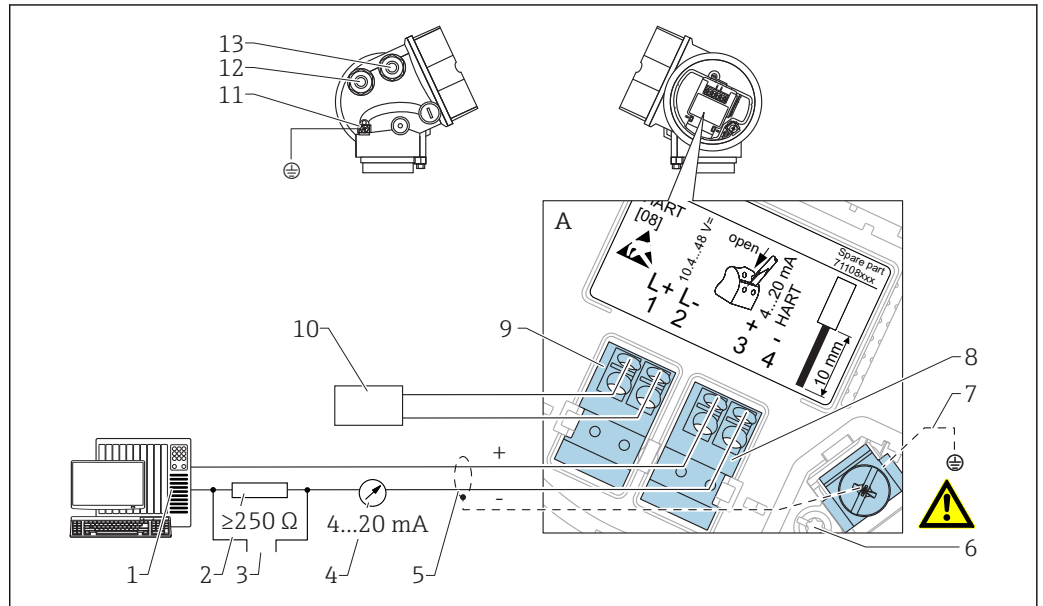


A0011340

**7** Terminal assignment 4-wire; 4-20mA HART (10.4 to 48 V<sub>DC</sub>)

- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ( $\geq 250 \Omega$ ): Observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load
- 5 Signal cable including screening (if required), observe cable specification
- 6 Protective connection; do not disconnect!
- 7 Protective earth, observe cable specification
- 8 4...20mA HART (active): Terminals 3 and 4
- 9 Supply voltage: Terminals 1 and 2
- 10 Supply voltage: Observe terminal voltage, observe cable specification
- 11 Terminal for potential equalization
- 12 Cable entry for signal line
- 13 Cable entry for power supply

4-wire: 4-20mA HART (90 to 253 V<sub>AC</sub>)

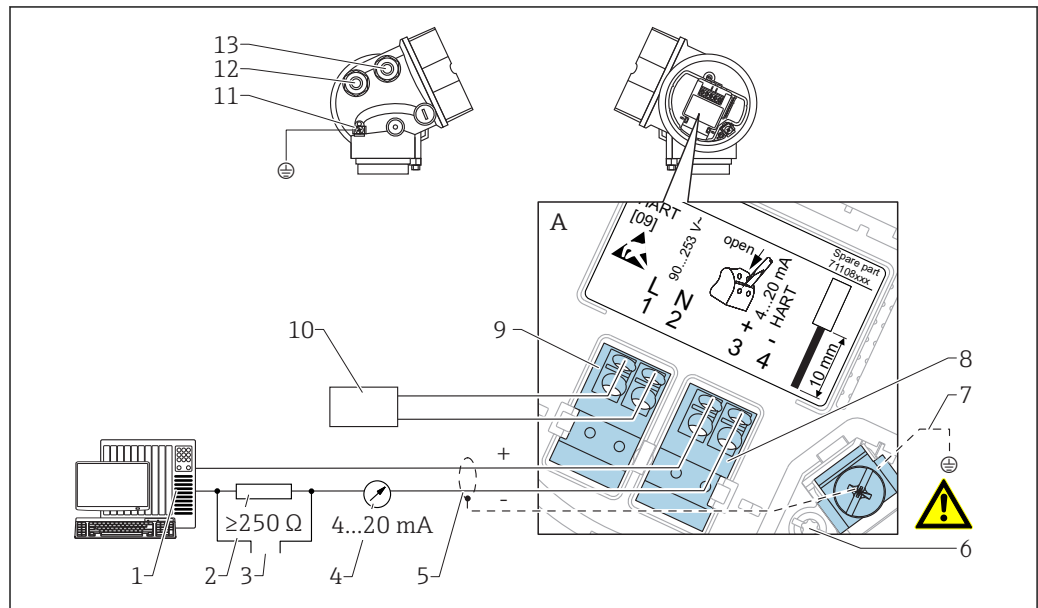

8 Terminal assignment 4-wire; 4-20mA HART (90 to 253 V<sub>AC</sub>)

- 1 Evaluation unit, e.g. PLC
- 2 HART communication resistor ( $\geq 250 \Omega$ ): Observe maximum load
- 3 Connection for Commubox FXA195 or FieldXpert SFX350/SFX370 (via VIATOR Bluetooth modem)
- 4 Analog display device: Observe maximum load
- 5 Signal cable including screening (if required), observe cable specification
- 6 Protective connection; do not disconnect!
- 7 Protective earth, observe cable specification
- 8 4...20mA HART (active): Terminals 3 and 4
- 9 Supply voltage: Terminals 1 and 2
- 10 Supply voltage: Observe terminal voltage, observe cable specification
- 11 Terminal for potential equalization
- 12 Cable entry for signal line
- 13 Cable entry for power supply


**CAUTION**

**To ensure electrical safety:**

- ▶ Do not disconnect the protective connection (6).
- ▶ Disconnect the supply voltage before disconnecting the protective earth (7).

- i** Connect protective earth to the internal ground terminal (7) before connecting the supply voltage. If necessary, connect the potential matching line to the external ground terminal (11).
- i** In order to ensure electromagnetic compatibility (EMC): Do not only ground the device via the protective earth conductor of the supply cable. Instead, the functional grounding must also be connected to the process connection (flange or threaded connection) or to the external ground terminal.
- i** An easily accessible power switch must be installed in the proximity of the device. The power switch must be marked as a disconnecter for the device (IEC/EN61010).

PROFIBUS PA / FOUNDATION Fieldbus

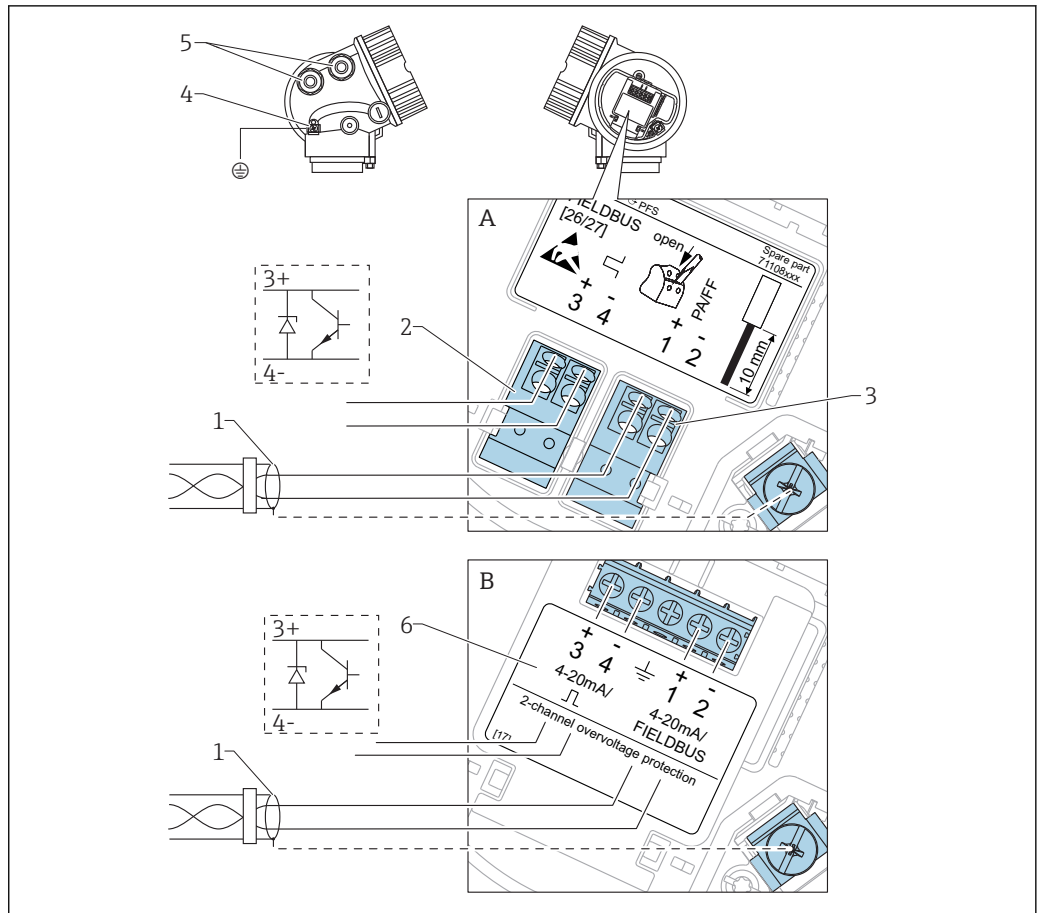

A0011341



9 Terminal assignment PROFIBUS PA / FOUNDATION Fieldbus

- A Without integrated overvoltage protection
- B With integrated overvoltage protection
- 1 Cable screen: Observe cable specifications
- 2 Switch output (open collector): Terminals 3 and 4
- 3 PROFIBUS PA / FOUNDATION Fieldbus: Terminals 1 and 2
- 4 Terminal for potential equalization line
- 5 Cable entries
- 6 Overvoltage protection module

**Connection examples for the switch output**

**i** For HART devices, the switch output is available as an option. See product structure, feature 20: "Power Supply, Output", option B: "2-wire; 4-20mA HART, switch output"


Devices with PROFIBUS PA and FOUNDATION Fieldbus always have a switch output.

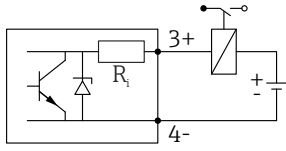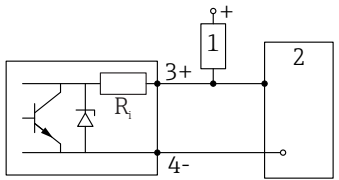 <p><b>10</b> Connection of a relay</p> <p>Suitable relays (examples):</p> <ul style="list-style-type: none"> <li>▪ Solid-state relay: Phoenix Contact OV-24DC/480AC/5 with mounting rail connector UMK-1 OM-R/AMS</li> <li>▪ Electromechanical relay: Phoenix Contact PLC-RSC-12DC/21</li> </ul>	 <p><b>11</b> Connection of a digital input</p> <p>1 Pull-up resistor 2 Digital input</p>
--	--

**i** For optimum interference immunity we recommend to connect an external resistor (internal resistance of the relay or Pull-up resistor) of  $< 1\ 000\ \Omega$ .

### HART loop converter HMX50

The dynamic variables of the HART protocol can be converted into individual 4 to 20 mA sections using the HART loop converter HMX50. The variables are assigned to the current output and the measuring ranges of the individual parameters are defined in the HMX50.

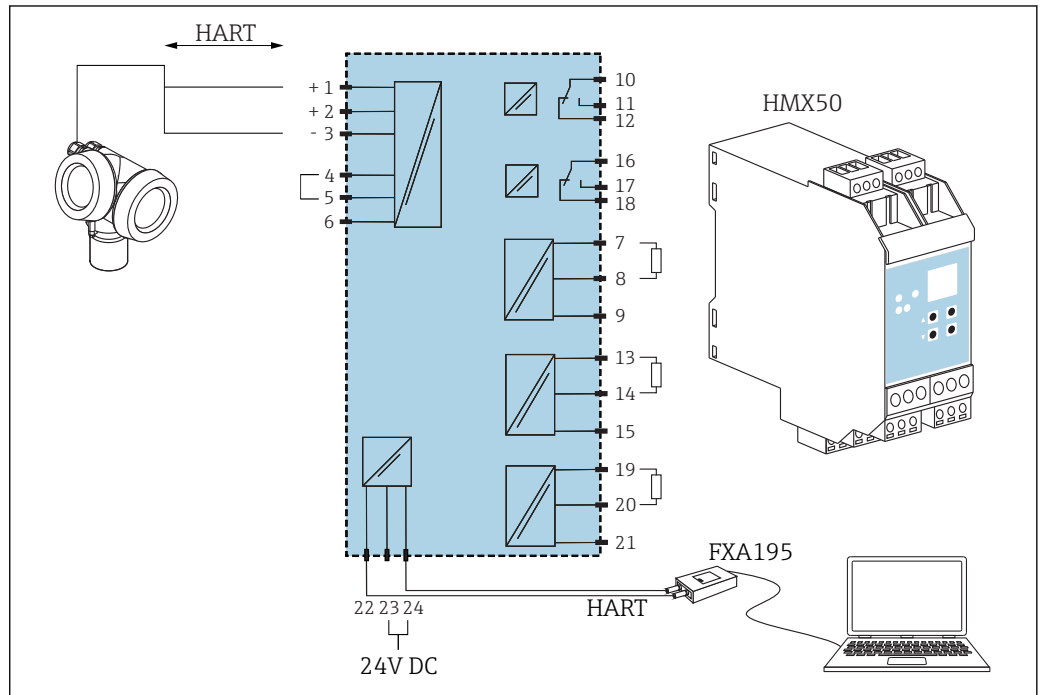

12 Connection diagram for HART loop converter HMX50 (example: passive 2-wire device and current outputs connected as power source)

The HART loop converter HMX50 can be acquired using the order number 71063562.


Additional documentation: TI00429F and BA00371F.

**Device plug connectors**




For the versions with fieldbus plug connector (M12 or 7/8"), the signal line can be connected without opening the housing.

*Pin assignment of the M12 plug connector*

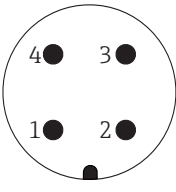
 <p style="text-align: right; font-size: small;">A0011175</p>	Pin	Meaning
	1	Signal +
	2	not connected
	3	Signal -
	4	Ground

*Pin assignment of the 7/8" plug connector*

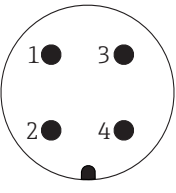 <p style="text-align: right; font-size: small;">A0011176</p>	Pin	Meaning
	1	Signal -
	2	Signal +
	3	Not connected
	4	Screen



**Power supply**

An external power supply is required.

 Various supply units can be ordered from Endress+Hauser.

**2-wire, 4-20mA HART, passive**

2-wire; 4-20mA HART<sup>1)</sup>

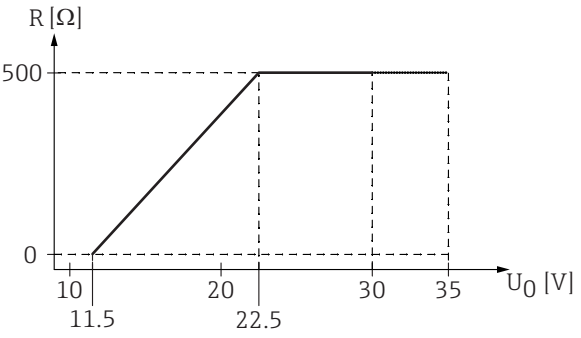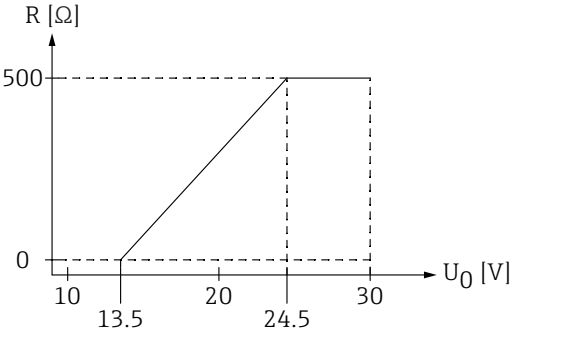"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
<ul style="list-style-type: none"> <li>▪ Non-Ex</li> <li>▪ Ex nA</li> <li>▪ Ex ic</li> <li>▪ CSA GP</li> </ul>	11.5 to 35 V <sup>3)</sup>	 <p style="text-align: right; font-size: small;">A0035511</p>
Ex ia / IS	11.5 to 30 V	
<ul style="list-style-type: none"> <li>▪ Ex d / XP</li> <li>▪ Ex ic[ia]</li> <li>▪ Ex tD / DIP</li> </ul>	13.5 to 30 V <sup>4)</sup>	 <p style="text-align: right; font-size: small;">A0034969</p>

- 1) Feature 020 of the product structure: option A
- 2) Feature 010 of the product structure
- 3) For ambient temperatures  $T_a \leq -30\text{ °C}$  (-22 °F) a minimum voltage of 14 V is required for the sartup of the device at the MIN error current (3,6 mA). For ambient temperatures  $T_a \geq 60\text{ °C}$  (140 °F) a minimum voltage of 12V is required for the sartup of the device at the MIN error current (3,6 mA). The sartup current can be parametrized. If the device is operated with a fixed current  $I \geq 4,5\text{ mA}$  (HART multidrop mode), a volage of  $U \geq 11,5\text{ V}$  is sufficient throughout the entire range of ambient temperatures.
- 4) For ambient temperatures  $T_a \leq -20\text{ °C}$  (-4 °F) a minimum voltage of 16 V is required for the sartup of the device at the MIN error current (3.6 mA).

2-wire; 4-20 mA HART, switch output<sup>1)</sup>

"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
<ul style="list-style-type: none"> <li>■ Non-Ex</li> <li>■ Ex nA</li> <li>■ Ex nA[ia]</li> <li>■ Ex ic</li> <li>■ Ex ic[ia]</li> <li>■ Ex d[ia] / XP</li> <li>■ Ex ta / DIP</li> <li>■ CSA GP</li> </ul>	13.5 to 35 V <sup>3)</sup>	
<ul style="list-style-type: none"> <li>■ Ex ia / IS</li> <li>■ Ex ia + Ex d[ia] / IS + XP</li> </ul>	13.5 to 30 V <sup>3)</sup>	

A0034971

- 1) Feature 020 of the product structure: option B
- 2) Feature 010 of the product structure
- 3) For ambient temperatures  $T_a \leq -30\text{ °C}$  ( $-22\text{ °F}$ ) a minimum voltage of 16 V is required for the startup of the device at the MIN error current (3.6 mA).

2-wire; 4-20mA HART, 4-20mA<sup>1)</sup>

"Approval" <sup>2)</sup>	Terminal voltage U at the device	Maximum load R, depending on the supply voltage U <sub>0</sub> at the supply unit
any	<b>Channel 1:</b> 13.5 to 30 V <sup>3) 4)</sup>	
	<b>Channel 2:</b> 12 to 30 V	

A0034969

A0022583

- 1) Feature 020 of the product structure: option C
- 2) Feature 010 of the product structure
- 3) For ambient temperatures  $T_a \leq -30\text{ °C}$  ( $-22\text{ °F}$ ) a minimum voltage of 16 V is required for the startup of the device at the MIN error current (3.6 mA).
- 4) For ambient temperatures  $T_a \leq -40\text{ °C}$  ( $-40\text{ °F}$ ), the maximum terminal voltage must be restricted to  $U \leq 28\text{ V}$ .



<b>Polarity reversal protection</b>	Yes
<b>Admissible residual ripple at f = 0 to 100 Hz</b>	$U_{SS} < 1\text{ V}$
<b>Admissible residual ripple at f = 100 to 10000 Hz</b>	$U_{SS} < 10\text{ mV}$

**4-wire, 4-20mA HART, active**

"Power supply; Output" <sup>1)</sup>	Terminal voltage	Maximum load R <sub>max</sub>
<b>K:</b> 4-wire 90-253VAC; 4-20mA HART	90 to 253 V <sub>AC</sub> (50 to 60 Hz), overvoltage category II	500 Ω
<b>L:</b> 4-wire 10,4-48VDC; 4-20mA HART	10.4 to 48 V <sub>DC</sub>	

1) Feature 020 of the product structure

**PROFIBUS PA, FOUNDATION Fieldbus**

"Power supply; Output" <sup>1)</sup>	"Approval" <sup>2)</sup>	Terminal voltage
<b>E:</b> 2-wire; FOUNDATION Fieldbus, switch output <b>G:</b> 2-wire; PROFIBUS PA, switch output	<ul style="list-style-type: none"> <li>▪ Non-Ex</li> <li>▪ Ex nA</li> <li>▪ Ex nA[ia]</li> <li>▪ Ex ic</li> <li>▪ Ex ic[ia]</li> <li>▪ Ex d[ia] / XP</li> <li>▪ Ex ta / DIP</li> <li>▪ CSA GP</li> </ul>	9 to 32 V <sup>3)</sup>
	<ul style="list-style-type: none"> <li>▪ Ex ia / IS</li> <li>▪ Ex ia + Ex d[ia] / IS + XP</li> </ul>	9 to 30 V <sup>3)</sup>

1) Feature 020 of the product structure

2) Feature 010 of the product structure

3) Input voltages up to 35 V will not spoil the device.

<b>Polarity sensitive</b>	No
<b>FISCO/FNICO compliant according to IEC 60079-27</b>	Yes

**Power consumption**

"Power supply; Output" <sup>1)</sup>	Power consumption
<b>A:</b> 2-wire; 4-20mA HART	< 0.9 W
<b>B:</b> 2-wire; 4-20mA HART, switch output	< 0.9 W
<b>C:</b> 2-wire; 4-20mA HART, 4-20mA	< 2 x 0.7 W
<b>K:</b> 4-wire 90-253VAC; 4-20mA HART	6 VA
<b>L:</b> 4-wire 10,4-48VDC; 4-20mA HART	1.3 W

1) Feature 020 of the product structure

**Current consumption**

**HART**

<b>Nominal current</b>	3.6 to 22 mA, the start-up current for multidrop mode can be parametrized (is set to 3.6 mA on delivery)
<b>Breakdown signal (NAMUR NE43)</b>	adjustable: 3.59 to 22.5 mA

**PROFIBUS PA**

<b>Nominal current</b>	14 mA
<b>Error current FDE (Fault Disconnection Electronic)</b>	0 mA

**FOUNDATION Fieldbus**

<b>Device basic current</b>	15 mA
<b>Error current FDE (Fault Disconnection Electronic)</b>	0 mA

**FISCO**

<b>U<sub>i</sub></b>	17.5 V
<b>I<sub>i</sub></b>	550 mA
<b>P<sub>i</sub></b>	5.5 W
<b>C<sub>i</sub></b>	5 nF
<b>L<sub>i</sub></b>	10 µH

**Power supply failure**

- Configuration is retained in the HistoROM (EEPROM).
- Error messages (incl. value of operated hours counter) are stored.

**Potential equalization**

No special measures for potential equalization are required.



If the device is designed for hazardous areas, observe the information in the documentation "Safety Instructions" (XA).

**Terminals**

- **Without integrated overvoltage protection**  
Plug-in spring terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)
- **With integrated overvoltage protection**  
Screw terminals for wire cross-sections 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)

**Cable entries**

**Connection of power supply and signal line**

To be selected in feature 050 "Electrical connection"

- Gland M20; Material dependent on the approval:
  - For Non-Ex, ATEX, IECEx, NEPSI Ex ia/ic:  
Plastics M20x1.5 for cable ø5 to 10 mm (0.2 to 0.39 in)
  - For Dust-Ex, FM IS, CSA IS, CSA GP, Ex nA:
  - For Ex d:  
No gland available
- Thread
  - ½" NPT
  - G ½"
  - M20 × 1.5
- Plug M12 / Plug 7/8"  
Only available for Non-Ex, Ex ic, Ex ia

**Connection of remote display FHX50**

Dependent on feature 030: "Display, Operation":

- "Prepared for display FHX50 + M12 connection":  
M12 socket
- "Prepared for display FHX50 + custom connection":  
M16 cable gland

**Cable specification**


- **Devices without integrated overvoltage protection**  
Pluggable spring-force terminals for wire cross-sections 0.5 to 2.5 mm<sup>2</sup> (20 to 14 AWG)
- **Devices with integrated overvoltage protection**  
Screw terminals for wire cross-sections 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)
- For ambient temperature T<sub>U</sub> ≥ 60 °C (140 °F): use cable for temperature T<sub>U</sub> + 20 K.

**HART**

- A normal device cable suffices if only the analog signal is used.
- A shielded cable is recommended if using the HART protocol. Observe grounding concept of the plant.
- For 4-wire devices: Standard device cable is sufficient for the power line.

**PROFIBUS**

Use a twisted, screened two-wire cable, preferably cable type A.

-  For further information on the cable specifications, see Operating Instructions BA00034S "PROFIBUS DP/PA: Guidelines for planning and commissioning", PNO Guideline 2.092 "PROFIBUS PA User and Installation Guideline" and IEC 61158-2 (MBP).

**FOUNDATION Fieldbus**

Endress+Hauser recommends using twisted, shielded two-wire cables.

-  For further information on the cable specifications, see Operating Instructions BA00013S "FOUNDATION Fieldbus Overview", FOUNDATION Fieldbus Guideline and IEC 61158-2 (MBP).

**Overvoltage protection**

If the measuring device is used for level measurement in flammable liquids which requires the use of overvoltage protection according to DIN EN 60079-14, standard for test procedures 60060-1 (10 kA, pulse 8/20 µs), an overvoltage protection module has to be installed.

**Integrated overvoltage protection module**


An integrated overvoltage protection module is available for 2-wire HART as well as PROFIBUS PA and FOUNDATION Fieldbus devices.

Product structure: Feature 610 "Accessory mounted", option NA "Overvoltage protection".

Technical data	
Resistance per channel	2 × 0.5 Ω max.
Threshold DC voltage	400 to 700 V
Threshold impulse voltage	< 800 V
Capacitance at 1 MHz	< 1.5 pF
Nominal arrest impulse voltage (8/20 µs)	10 kA

**External overvoltage protection module**

HAW562 or HAW569 from Endress+Hauser are suited as external overvoltage protection.

-  For detailed information please refer to the following documents:
  - HAW562: TI01012K
  - HAW569: TI01013K

## Performance characteristics

### Reference operating conditions

- Temperature = +24 °C (+75 °F) ±5 °C (±9 °F)
- Pressure = 960 mbar abs. (14 psia) ±100 mbar (±1.45 psi)
- Humidity = 60 % ±15 %
- Reflection factor ≥ 0,8 (water surface for coax probe, metal plate for rod and rope probe with min. 1 m (40 in) diameter)
- Flange for rod or rope probe ≥ 300 mm (12 in) diameter
- Distance to obstacles ≥ 1 m (40 in)
- For interface measurement:
  - Coax probe
  - DC of the lower medium = 80 (water)
  - DC of the upper medium = 2 (oil)


### Reference accuracy

Typical data under reference operating conditions: DIN EN IEC 61298-2 / DIN EN IEC 60770-1, percentage values in relation to the span.

Output:	digital	analog <sup>1)</sup>
Accuracy (Sum of non-linearity, nonrepeatability and hysteresis) <sup>2)</sup>	<b>Level measurement:</b> <ul style="list-style-type: none"> <li>■ Measuring distance up to 15 m (49 ft): ±2 mm (±0.08 in) <sup>3)</sup></li> <li>■ Measuring distance &gt; 15 m (49 ft): ±10 mm (±0.39 in)</li> </ul>	±0.02 %
	<b>Interface measurement:</b> <ul style="list-style-type: none"> <li>■ Measuring distance up to 500 mm (19.7 in): ±20 mm (±0.79 in)</li> <li>■ Measuring distance &gt; 500 mm (19.7 in): ±10 mm (±0.39 in)</li> <li>■ If the thickness of the upper medium is &lt; 100 mm (3.94 in): ±40 mm (±1.57 in)</li> </ul>	
Non-repeatability <sup>4)</sup>	≤ 1 mm (0.04 in)	

- 1) Add error of the analogous value to the digital value.
- 2) If the reference conditions are not met, the offset/zero point arising from the mounting conditions may be up to ±16 mm (±0.63 in). This additional offset/zero point can be compensated for by entering a correction (parameter "level correction") during commissioning.
- 3) For probes with centering stars, the accuracy may deviate close to the centering stars.
- 4) The non-repeatability is already considered in the accuracy.


Differing from this, the following measuring error is present in the vicinity of the lower probe end:

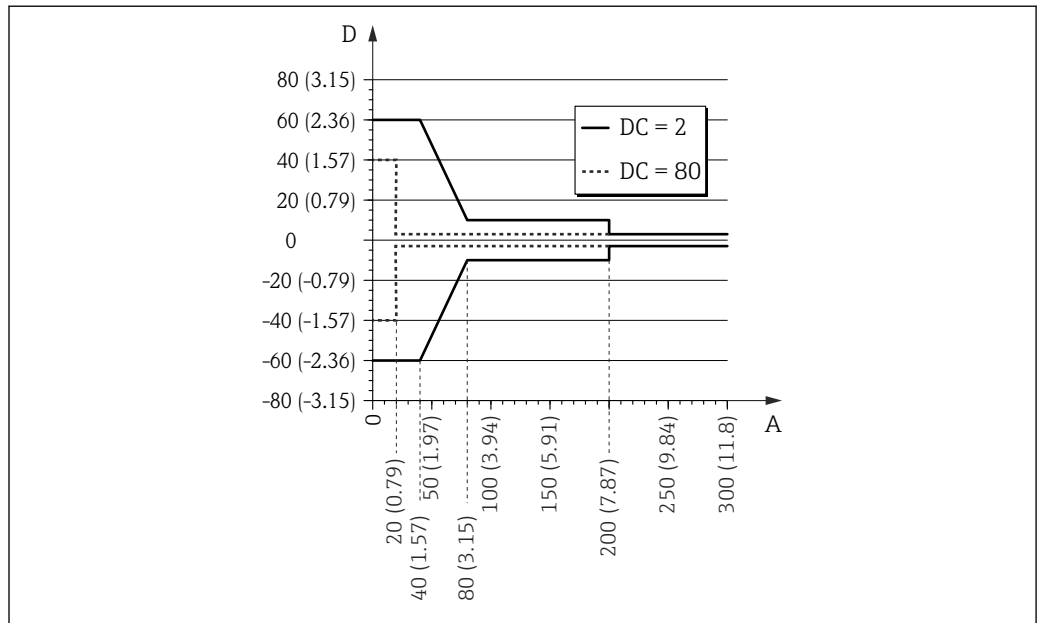

13 Measuring error at the end-of-probe for rod and coax probes

A Distance from probe end [mm(in)]


D Measuring error: Sum of non-linearity, non-repeatability and hysteresis

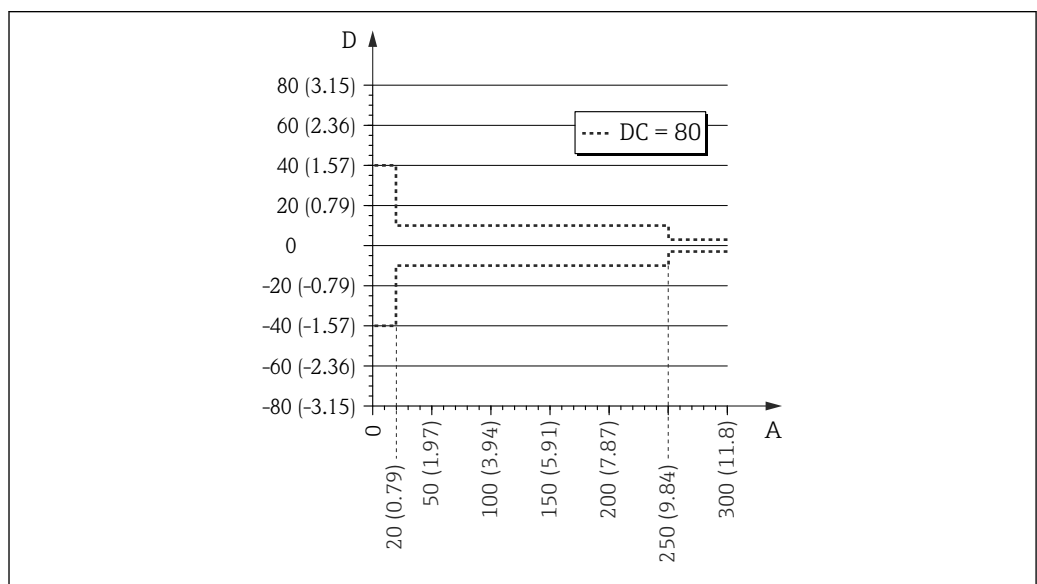

14 Measuring error at the end-of-probe for rope probes

A Distance from probe end

D Measuring error: Sum of non-linearity, non-repeatability and hysteresis

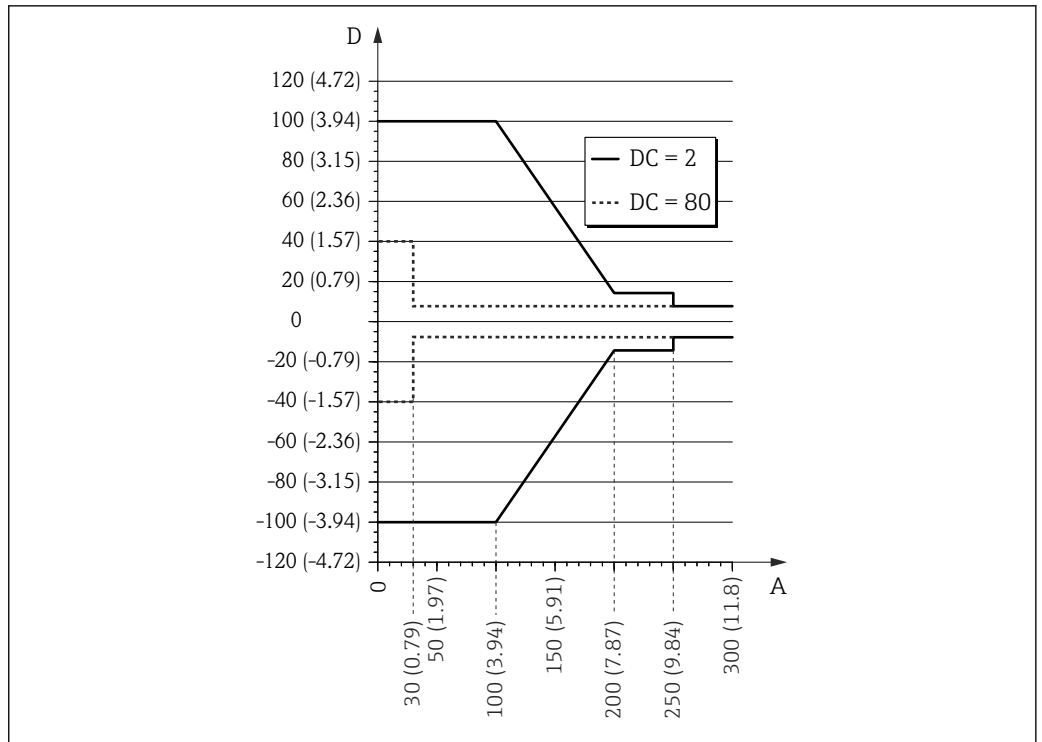

A0021483


15 Measuring error at the end-of-probe for probes with metallic centering disk (product structure: feature 610 "Accessory mounted", option OA, OB or OC)

A Distance from probe end [mm(in)]

D Measuring error: Sum of non-linearity, non-repeatability and hysteresis

**i** If for rope probes the DC value is less than 7, then measurement is not possible in the area of the straining weight (0 to 250 mm from end of probe; lower blocking distance).

In the area of the upper probe end, the measuring error is as follows (rod/rope only):

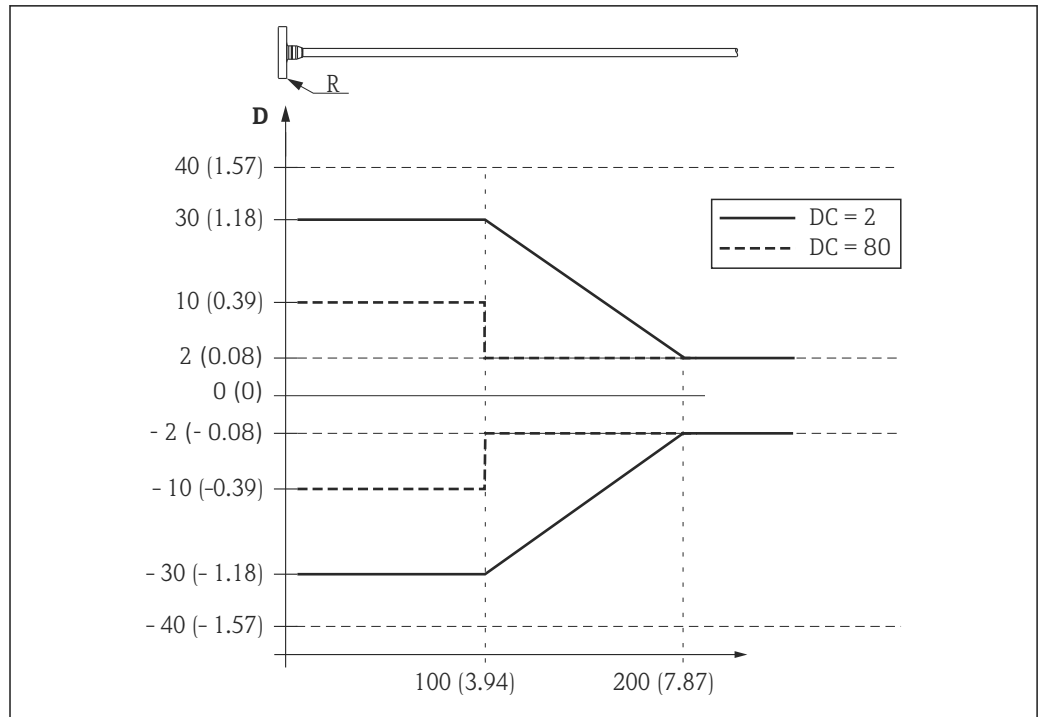

A0015091

16 Measuring error at the upper end of the probe; dimensions: mm (in)

$D$  Sum of non-linearity, non-repeatability and hysteresis

$R$  Reference point of measurement

$DC$  Dielectric constant

**Resolution**

- digital: 1 mm
- analog: 1  $\mu$ A

**Reaction time**

The reaction time can be parametrized. The following step response times (as per DIN EN IEC 61298-2 / DIN EN IEC 60770-1)<sup>4)</sup> are valid if the damping is switched off:

Level measurement		
Probe length	Sampling rate	Step response time
< 10 m (33 ft)	3.6 measurements/second	< 0.8 s
< 40 m (131 ft)	$\geq 2.7$ measurements/second	< 1 s

Interface measurement		
Probe length	Sampling rate	Step response time
< 10 m (33 ft)	$\geq 1.1$ measurements/second	< 2.2 s

**Influence of ambient temperature**

The measurements are carried out in accordance with DIN EN IEC 61298-3 / DIN EN IEC 60770-1

- digital (HART, PROFIBUS PA, FOUNDATION Fieldbus): average  $T_K = 0.6$  mm/10 K  
For devices with remote sensor<sup>5)</sup> there is an additional offset of  $\pm 0.3$  mm/10K ( $\pm 0.01$  in/10K) per 1 m (3.3 ft) of the remote cable.
- analog (current output):
  - zero point (4 mA): average  $T_K = 0.02$  %/10 K
  - span (20 mA): average  $T_K = 0.05$  %/10 K

4) According to DIN EN IEC 61298-2 / DIN EN IEC 60770-1 the response time is the time which passes after a sudden change of the input signal until the output signal for the first time assumes 90% of the steady-state value.

5) Product structure: Feature 600, options MB, MC or MD)



**Influence of gas layer**

High pressures reduce the propagation velocity of the measuring signals in the gas/vapor above the fluid. This effect depends on the kind of gas/vapor and of its temperature. This results in a systematic measuring error that gets bigger as the distance increases between the reference point of the measurement (flange) and the product surface. The following table illustrates this measured error for a few typical gases/vapors (with regard to distance; a positive value means that too large a distance is being measured):

Gas layer	Temperature		Pressure					
	°C	°F	1 bar (14.5 psi)	10 bar (145 psi)	50 bar (725 psi)	100 bar (1450 psi)	200 bar (2900 psi)	400 bar (5800 psi)
Air	20	68	0.00 %	0.22 %	1.2 %	2.4 %	4.9 %	9.5 %
	200	392	-0.01 %	0.13 %	0.74 %	1.5 %	3.0 %	6.0 %
	400	752	-0.02 %	0.08 %	0.52 %	1.1 %	2.1 %	4.2 %
Hydrogen	20	68	-0.01 %	0.10 %	0.61 %	1.2 %	2.5 %	4.9 %
	200	392	-0.02 %	0.05 %	0.37 %	0.76 %	1.6 %	3.1 %
	400	752	-0.02 %	0.03 %	0.25 %	0.53 %	1.1 %	2.2 %

Gas layer	Temperature		Pressure							
	°C	°F	1 bar (14.5 psi)	2 bar (29 psi)	5 bar (72.5 psi)	10 bar (145 psi)	20 bar (290 psi)	50 bar (725 psi)	100 bar (1450 psi)	200 bar (2900 psi)
Water (saturated steam)	100	212	0.26 %	-	-	-	-	-	-	-
	120	248	0.23 %	0.50 %	-	-	-	-	-	-
	152	306	0.20 %	0.42 %	1.14 %	-	-	-	-	-
	180	356	0.17 %	0.37 %	0.99 %	2.10 %	-	-	-	-
	212	414	0.15 %	0.32 %	0.86 %	1.79 %	3.9 %	-	-	-
	264	507	0.12 %	0.26 %	0.69 %	1.44 %	3.0 %	9.2 %	-	-
	311	592	0.09 %	0.22 %	0.58 %	1.21 %	2.5 %	7.1 %	19.3 %	-
	366	691	0.07 %	0.18 %	0.49 %	1.01 %	2.1 %	5.7 %	13.2 %	76 %


**Gas phase compensation with external pressure sensor (PROFIBUS PA / FOUNDATION Fieldbus)**

PROFIBUS and FOUNDATION Fieldbus devices can receive the signal of an external pressure sensor through the bus and use it to perform a pressure dependent time-of-flight correction. In the case of saturated steam in the temperature range from 100 to 350 °C (212 to 662 °F), for example, the measuring error of the distance measurement can be reduced by this method from up to 29 % (without compensation) to less than 3 % (with compensation).

**Gas phase compensation with reference signal (option for FMP54)**

Under high pressure the propagation speed of microwave signals is reduced in the steam (polar media) above the liquid to be measured. As a result, the Levelflex indicates the level too low → 41.

As an option Levelflex is available in a version with automatic gas phase correction, which corrects this error (feature 540 "Application Package", option EF: "Gas Phase Compensation  $L_{ref}= 300\text{ mm}$ " or EG: "Gas Phase Compensation  $L_{ref}= 550\text{ mm}$ "). This version of the Levelflex generates a reference reflection in the distance  $L_{ref}$  from the flange by a diameter step of the probe rod. The reference reflection must be at least 150 mm (6") above the highest level. By means of the shift of the reference reflection the actual propagation speed is measured and the level value will be automatically corrected.

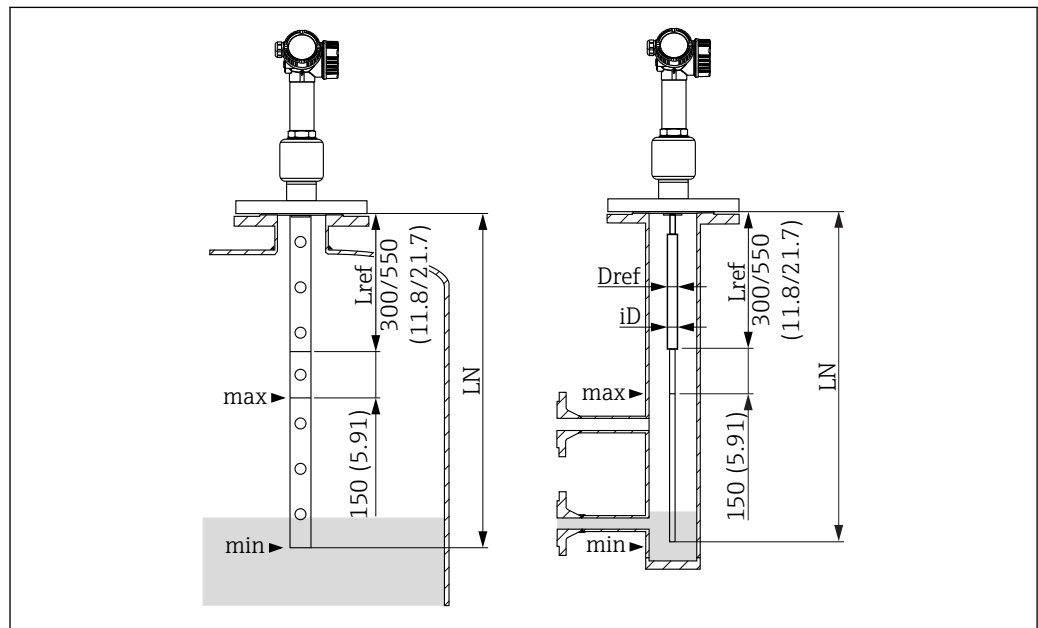

A0014534

17 FMP54 with reference signal for gas phase compensation; dimensions: mm (in)

**i** **Coax probes** with reference reflection can be installed in any tank (free in the tank or into a bypass). Coax probes are completely mounted and adjusted ex works. After mounting they are ready for use, additional settings are not necessary.

**i** **Rod probes** are only recommended if the installation of a coax probe is not possible (e.g. if the bypass diameter is too small).

Rod probes with reference reflection are only suited for mounting in stilling wells and side gauges (bypasses). The diameter  $D_{ref}$  of the probe rod in the range of the reference distance  $L_{ref}$  must be chosen depending on the pipe inner diameter  $iD$ , see table below. In the range of the reference distance  $L_{ref}$  the pipe has to be cylindrical; changes of the cross section, for example at flanged connections, are only allowed up to 5% of the inside diameter  $iD$ .

Additionally, the settings must be checked by an expert person after mounting and corrected if necessary.

Inner diameter $iD$ of the stilling well/bypass	Diameter $D_{ref}$ of the rod probe within the reference distance $L_{ref}$
40 mm (1.57") $\leq iD < 45$ mm (1.77")	22 mm (0.87")
45 mm (1.77") $\leq iD < 70$ mm (2.76")	25 mm (0.98")
70 mm (2.76") $\leq iD < 100$ mm (3.94")	30 mm (1.18")


**Limitations for coax/rod probes**

Maximum probe length LN	<ul style="list-style-type: none"> <li>■ For rod probes: LN ≤ 4 000 mm (157 in)</li> <li>■ For coax probes: LN ≤ 6 000 mm (236 in)</li> </ul>
Minimum probe length LN	LN > L <sub>ref</sub> + 200 mm (L <sub>ref</sub> + 7.7")
Reference distance L <sub>ref</sub>	300 mm (11.8") or 550 mm (21.7"), see feature 540 of the product structure
Maximum level relative to sealing surface of flange	L <sub>ref</sub> + 150 mm (L <sub>ref</sub> + 6")
Minimum dielectric constant of the medium	DC > 7

**Area of application**

Level measurements with high pressure for measuring ranges up to a few meters in polar media with a dielectric constant DC > 7 (e.g. water or ammonia), which would cause a high measuring error without the compensation.

The accuracy of measurement at reference conditions is the higher the larger the reference length L<sub>ref</sub> and the smaller the measuring range:

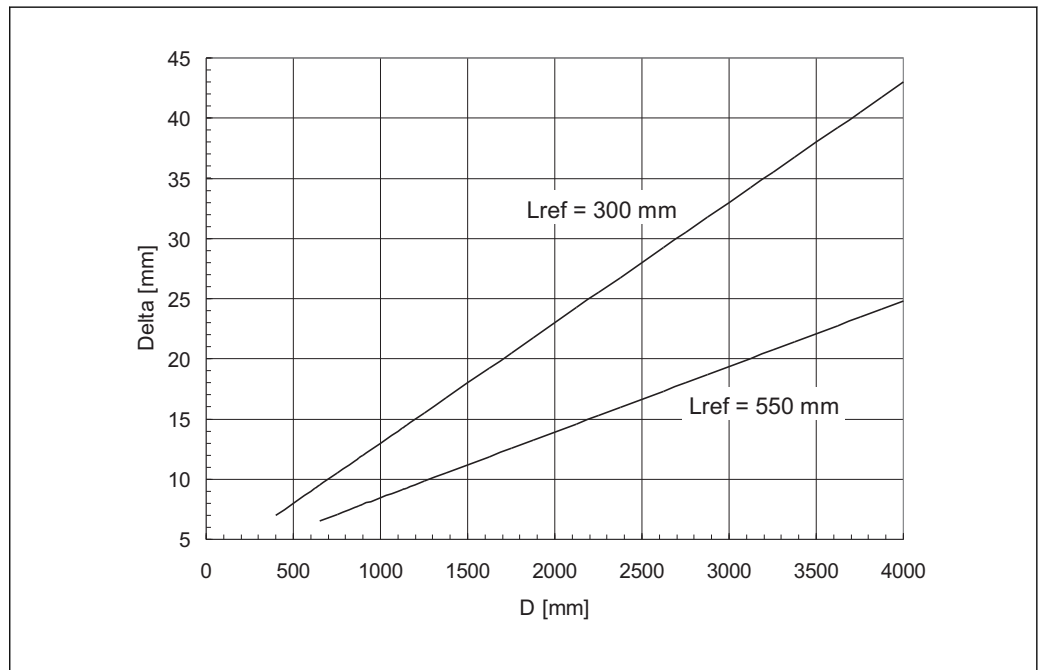

A0014535


*D* Distance from liquid surface to lower edge of the flange  
*Delta* Measuring error

If there are fast changes in pressure, there may be an additional error, since the measured reference distance is filtered with the time constant of the level measurement. In addition, conditions of imbalance - for example due to heating - may cause density gradients within the medium and condensation of steam at the probe. As a result, the level readings at different locations inside the tank may vary slightly. Caused by this application influences the measuring error may be increased by a factor up to 2 to 3.

## Mounting

### Mounting requirements

### Suitable mounting position

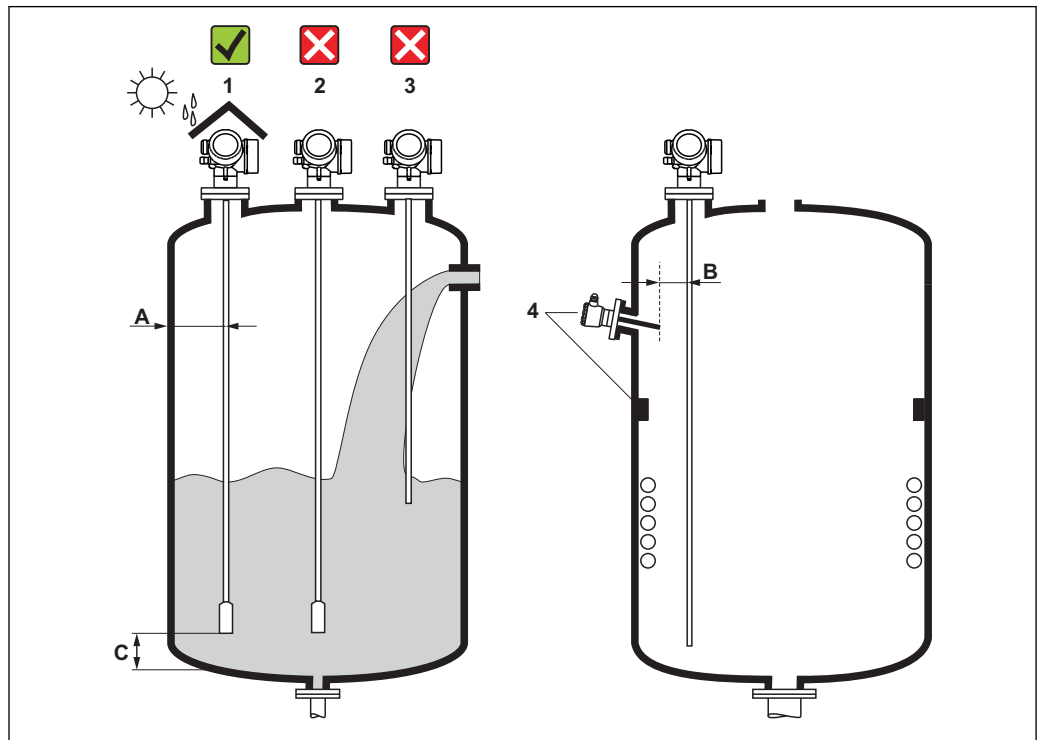

18 Mounting requirements for Levelflex

### Mounting distances

- Distance (A) between wall and rod or rope probe:
  - for smooth metallic walls: > 50 mm (2 in)
  - for plastic walls: > 300 mm (12 in) to metallic parts outside the vessel
  - for concrete walls: > 500 mm (20 in), otherwise the available measuring range may be reduced.
- Distance (B) between rod or rope probe and internal fittings in the vessel: > 300 mm (12 in)
- When using more than one Levelflex:
  - Minimum distance between the sensor axes: 100 mm (3.94 in)
- Distance (C) from end of probe to bottom of the vessel:
  - Rope probe: > 150 mm (6 in)
  - Rod probe: > 10 mm (0.4 in)
  - Coax probe: > 10 mm (0.4 in)




For coax probes the distance to the wall and to internal fittings is arbitrary.


*Additional conditions*

- When mounting in the open, a weather protection cover (1) may be installed to protect the device against extreme weather conditions.
- In metallic vessels: Preferably do not mount the probe in the center of the vessel (2), as this would lead to increased interference echoes.

If a central mounting position can not be avoided, it is crucial to perform an interference echo suppression(mapping) after the commissioning of the device.

- Do not mount the probe in the filling curtain (3).
- Avoid buckling the rope probe during installation or operation (e.g. through product movement against silo wall) by selecting a suitable mounting location.


 With suspended rope probes (probe end not fixed at the bottom) the distance between the probe rope and internal fittings in the tank must not fall below 300 mm (12") during the entire process. A sporadic contact between the probe weight and the cone of the vessel, however, does not influence the measurement as long as the dielectric constant of the medium is at least  $DC = 1.8$ .

 When mounting the electronics housing into a recess (e.g. in a concrete ceiling), observe a minimum distance of 100 mm (4 inch) between the cover of the terminal compartment / electronics compartment and the wall. Otherwise the connection compartment / electronics compartment is not accessible after installation.

### Applications with restricted mounting space

#### Mounting with remote sensor

The device version with a remote sensor is suited for applications with restricted mounting space. In this case the electronics housing is mounted at a separate position from which it is easier accessible.

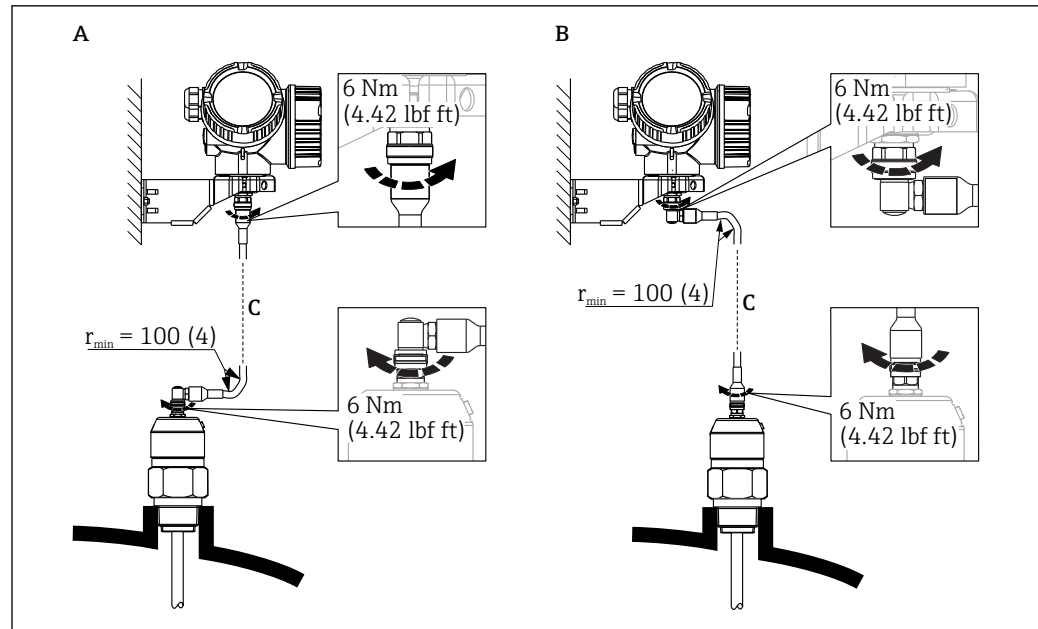


A0014794

- A Angled plug at the probe
- B Angled plug at the electronics housing
- C Length of the remote cable as ordered

- Product structure, feature 600 "Probe Design":
  - Option MB "Sensor remote, 3m/9ft cable"
  - Option MC "Sensor remote, 6m/18ft cable"
  - Option MB "Sensor remote, 9m/27ft cable"
- The remote cable is supplied with these device versions  
Minimum bending radius: 100 mm (4 inch)
- A mounting bracket for the electronics housing is supplied with these device versions. Mounting options:
  - Wall mounting
  - Pipe mounting; diameter: 42 to 60 mm (1-1/4 to 2 inch)
- The connection cable has got one straight and one angled plug (90°). Depending on the local conditions the angled plug can be connected at the probe or at the electronics housing.
- i** Probe, electronics and connection cable are adjusted to match each other. They are marked by a common serial number. Only components with the same serial number shall be connected to each other.

*Divisible probes*

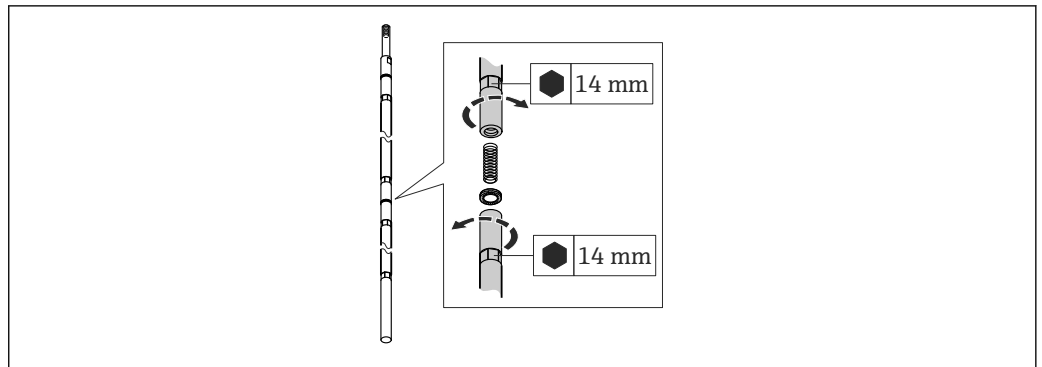

A0021647

If there is little mounting space (distance to the ceiling), it is advisable to use divisible rod probes ( $\phi$  16 mm).

- max. probe length 10 m (394 in)
- max. sideways capacity 30 Nm
- probes are separable several times with the following lengths of the individual parts:
  - 500 mm (20 in)
  - 1000 mm (40 in)
- torque: 15 Nm

**Notes on the mechanical load of the probe**

*Tensile load limit of rope probes*

Sensor	Feature 060	Probe	Tensile load limit [kN]
FMP51	LA, LB MB, MD	Rope 4mm (1/6") 316	5
FMP52	OA, OB, OC, OD	Rope 4mm (1/6") PFA>316	2
FMP54	LA, LB	Rope 4mm (1/6") 316	10

*Bending strength of rod probes*

Sensor	Feature 060	Probe	Bending strength [Nm]
FMP51	AA, AB	Rod 8mm (1/3") 316L	10
	AC, AD	Rod 12mm (1/2") 316L	30
	AL, AM	Rod 12mm (1/2") AlloyC	30
	BA, BB, BC, BD	Rod 16mm (0.63") 316L divisible	30
FMP52	CA, CB	Rod 16mm (0.63") PFA>316L	30
FMP54	AE, AF	Rod 16mm (0.63") 316L	30
	BA, BB, BC, BD	Rod 16mm (0.63") 316L divisible	30

*Bending load (torque) through fluid flow*

The formula for calculating the bending torque M impacting on the probe:

$$M = c_w \cdot \rho / 2 \cdot v^2 \cdot d \cdot L \cdot (L_N - 0.5 \cdot L)$$

with:

$c_w$ : Friction factor

$\rho$  [kg/m<sup>3</sup>]: Density of the medium

$v$  [m/s]: Velocity of the medium perpendicular to the probe rod

$d$  [m]: Diameter of the probe rod

$L$  [m]: Level

$L_N$  [m]: Probe length


**Calculation example**

Friction factor  $c_w$  0,9 (on the assumption of a turbulent current - high Reynolds number)


Density  $\rho$  [kg/m<sup>3</sup>] 1000 (e.g. water)

Probe diameter  $d$  [m] 0,008

$L = L_N$  (worst case)

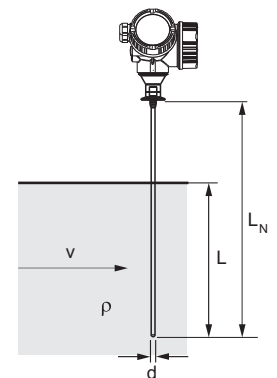



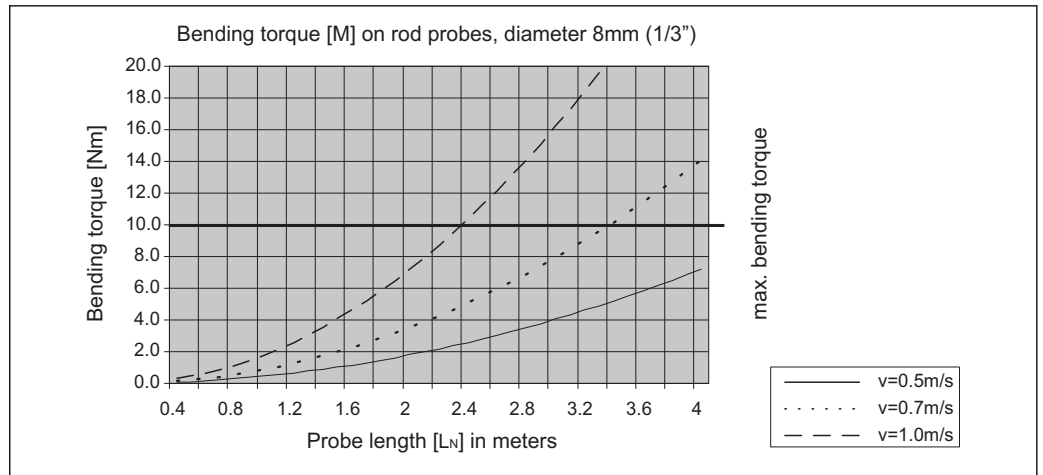

A0014182-EN


*Bending strength of coax probes*

Sensor	Feature 060	Process connection	Probe	Bending strength [Nm]
FMP51	UA, UB	Thread G $\frac{3}{4}$ oder NPT $\frac{3}{4}$	Coax 316L, Ø 21,3 mm	60
		<ul style="list-style-type: none"> <li>■ Thread G1<math>\frac{1}{2}</math> or NPT1<math>\frac{1}{2}</math></li> <li>■ Flange</li> </ul>	Coax 316L, Ø 42,4 mm	300
	UC, UD	Flange	Coax AlloyC, Ø 42,4 mm	300
FMP54	UA, UB	<ul style="list-style-type: none"> <li>■ Thread G1<math>\frac{1}{2}</math> or NPT1<math>\frac{1}{2}</math></li> <li>■ Flange</li> </ul>	Coax 316L, Ø 42,4 mm	300

### Notes on the process connection

Probes are mounted to the process connection with threaded connections or flanges. If during this installation there is the danger that the probe end moves so much that it touches the tank floor or cone at times, the probe must, if necessary, be shortened and fixed down → 56.

#### Threaded connection

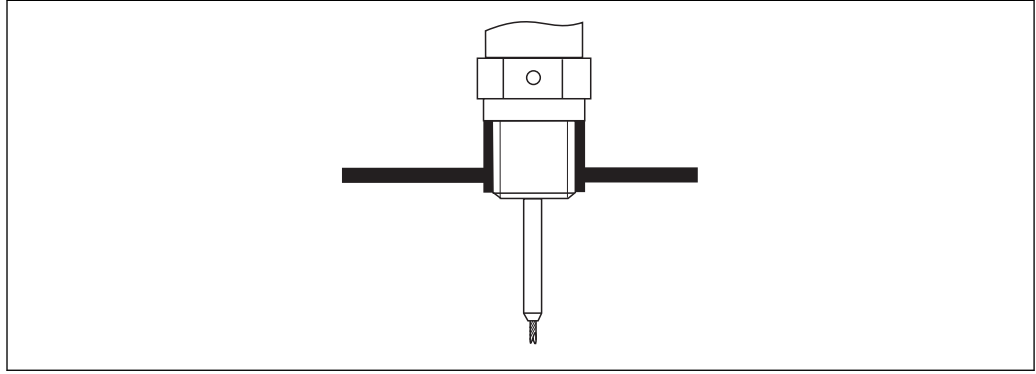

A0015121

19 Mounting with threaded connection; flush with the container ceiling

#### Seal

The thread as well as the type of seal comply to DIN 3852 Part 1, screwed plug form A.

They can be sealed with the following types of sealing rings:

- Thread G3/4": According to DIN 7603 with the dimensions 27 x 32 mm
- Thread G1-1/2": According to DIN 7603 with the dimensions 48 x 55 mm


Please use a sealing ring according to this standard in the form A, C or D and of a material that is resistant to the application.



**For the length of the screwed plug refer to the dimensional drawing:**

- FMP51: → 81
- FMP54: → 85

Nozzle mounting

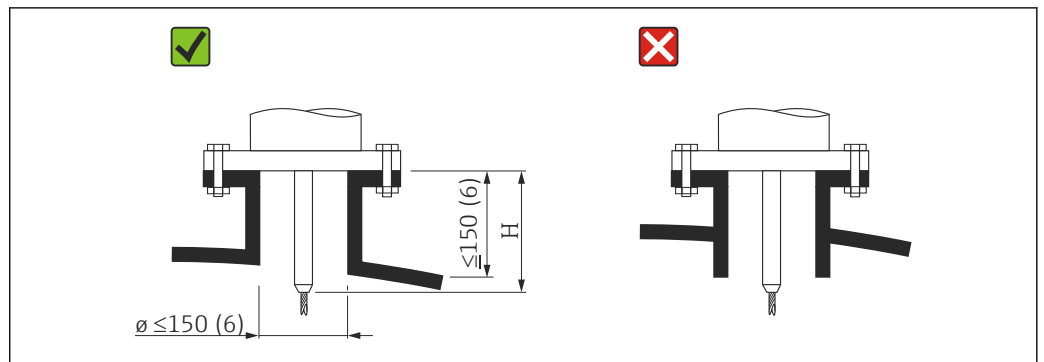

A0015122

*H* Length of the center rod or the rigid part of the rope probe

- Permissible nozzle diameter:  $\leq 150$  mm (6 in).  
For larger diameters the near range measuring capability may be reduced.  
For nozzles  $\geq \text{DN}300$ : → 54.
  - Permissible nozzle height<sup>6)</sup>:  $\leq 150$  mm (6 in).  
For a larger height the near range measuring capability may be reduced.  
Larger nozzle heights may be possible in special cases (see sections "Center rod for FMP51 and FMP52" and "Rod extension/centering HMP40 for FMP54").
  - The end of the nozzle should be flush with the tank ceiling in order to avoid ringing effects.
- i** With thermally insulated vessels the nozzle should also be insulated in order to prevent condensate formation.


6) Larger nozzle heights on request

*Center rod for FMP51 and FMP52*

For rope probes it may be necessary to use a version with center rod in order to prevent the probe rod from coming into contact with the nozzle wall. Probes with center rod are available for FMP51 and FMP52.

Probe	Max. nozzle height (= length of the center rod)	Option to be selected in feature 060 ("Probe")
FMP51	150 mm	LA
	6 inch	LB
	300 mm	MB
	12 inch	MD
FMP52	150 mm	OA
	6 inch	OC
	300 mm	OB
	12 inch	OD

*Rod extension/centering HMP40 for FMP54*

For FMP54 with rope probes the rod extension/centering HMP 40 is available as an accessory →  125. It has to be used if otherwise the probe rope comes into contact with the lower edge of the nozzle.

For FMP54 with rope probes the rod extension/centering HMP 40 is available as an accessory. It has to be used if otherwise the probe rope comes into contact with the lower edge of the nozzle.




This accessory consists of the extension rod corresponding to the nozzle height, on which a centering disk is also mounted if the nozzles are narrow or when working in bulk solids. This component is delivered separately from the device. Please order the probe length correspondingly shorter.

Centering disks with small diameters (DN40 and DN50) may only be used if there is no significant build-up in the nozzle above the disk. The nozzle must not become clogged by the product.

*Installation in nozzles  $\geq DN300$*

If installation in  $\geq 300\text{mm}/12''$  nozzles is unavoidable, installation must be carried out in accordance with the following sketch.

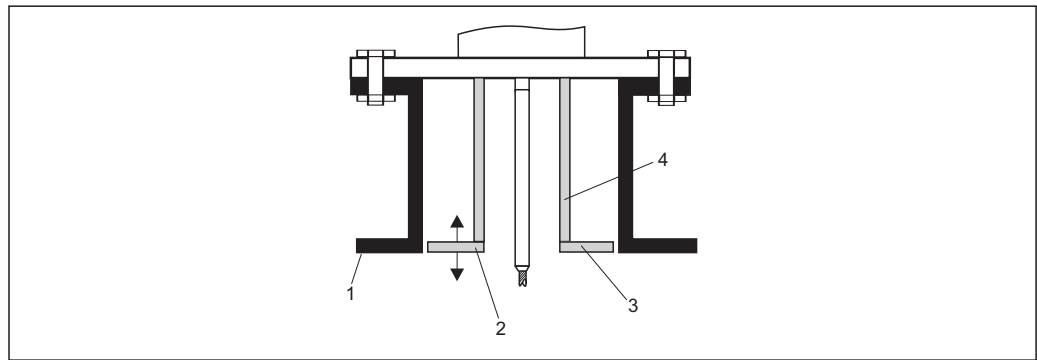

A0014199

- 1 Lower edge of the nozzle
- 2 Approx. flush with the lower edge of the nozzle ( $\pm 50\text{ mm}/2''$ )
- 3 Plate
- 4 Pipe  $\phi$  150 to 180 mm (6 to 7 inch)

Nozzle diameter	Plate diameter
300 mm (12")	280 mm (11")
$\geq 400\text{ mm}$ (16")	$\geq 350\text{ mm}$ (14")

**Mounting cladded flanges**



For cladded flanges of FMP52, observe the following:

- Use flange screws according to the number of flange holes.
- Tighten the screws with the required torque (see table).
- Retighten the screws after 24 hours or after the first temperature cycle.
- Depending on process pressure and process temperature check and retighten the screws at regular intervals.




Usually, the PTFE flange cladding also serves as a seal between the nozzle and the device flange.

Flange size	Number of screws	Recommended torque [Nm]	
		minimum	maximum
<b>EN</b>			
DN40/PN40	4	35	55
DN50/PN16	4	45	65
DN50/PN40	4	45	65
DN80/PN16	8	40	55
DN80/PN40	8	40	55
DN100/PN16	8	40	60
DN100/PN40	8	55	80
DN150/PN16	8	75	115
DN150/PN40	8	95	145
<b>ASME</b>			
1½"/150lbs	4	20	30
1½"/300lbs	4	30	40
2"/150lbs	4	40	55
2"/300lbs	8	20	30
3"/150lbs	4	65	95
3"/300lbs	8	40	55
4"/150lbs	8	45	70
4"/300lbs	8	55	80
6"/150lbs	8	85	125
6"/300lbs	12	60	90
<b>JIS</b>			
10K 40A	4	30	45
10K 50A	4	40	60
10K 80A	8	25	35
10K 100A	8	35	55
10K 100A	8	75	115

## Securing the probe

### Securing rope probes

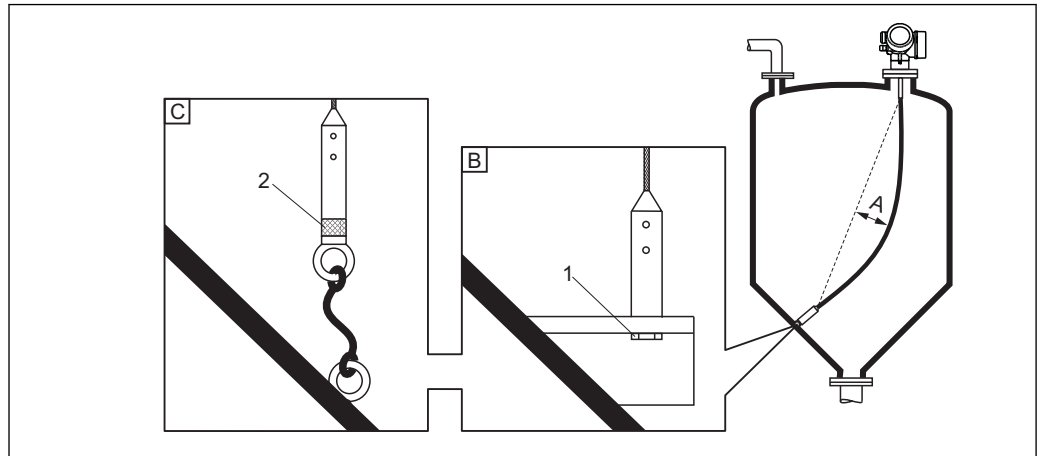

A0012609

- A Sag of the rope:  $\geq 1$  cm per 1m of the probe length (0.12 inch per 1 ft of the probe length)  
 B Reliably grounded end of probe  
 C Reliably isolated end of probe  
 1: Mounting and contact with a bolt  
 2 Mounting kit isolated


- The end of the probe needs to be secured under the following conditions:  
 if otherwise the probe sporadically comes into contact with the wall of the vessel, the outlet cone, internal fittings or other parts of the installation.
- The end of probe can be secured at its internal thread  
 rope 4 mm (1/6"), 316: M 14
- The fixing must be either reliably grounded or reliably insulated. If it is not possible to mount the probe weight with a reliably insulated connection, it can be secured using an isolated eyelet, which is available as an accessory.
- In order to prevent an extremely high tensile load (e.g. due to thermal expansion) and the risk of rope crack, the rope has to be slack. Make the rope longer than the required measuring range such that there is a sag in the middle of the rope that is  $\geq 1\text{cm}/(1\text{ m rope length})$  [0.12 inch/(1 ft rope length)].

Tensile load limit of rope probes: → 48



*Securing rod probes*

- For WHG approvals: For probe lengths  $\geq 3$  m (10 ft) a support is required.
- In general, rod probes must be supported if there is a horizontal flow (e.g. from an agitator) or in the case of strong vibrations.
- Rod probes may only be supported at the end of the probe.

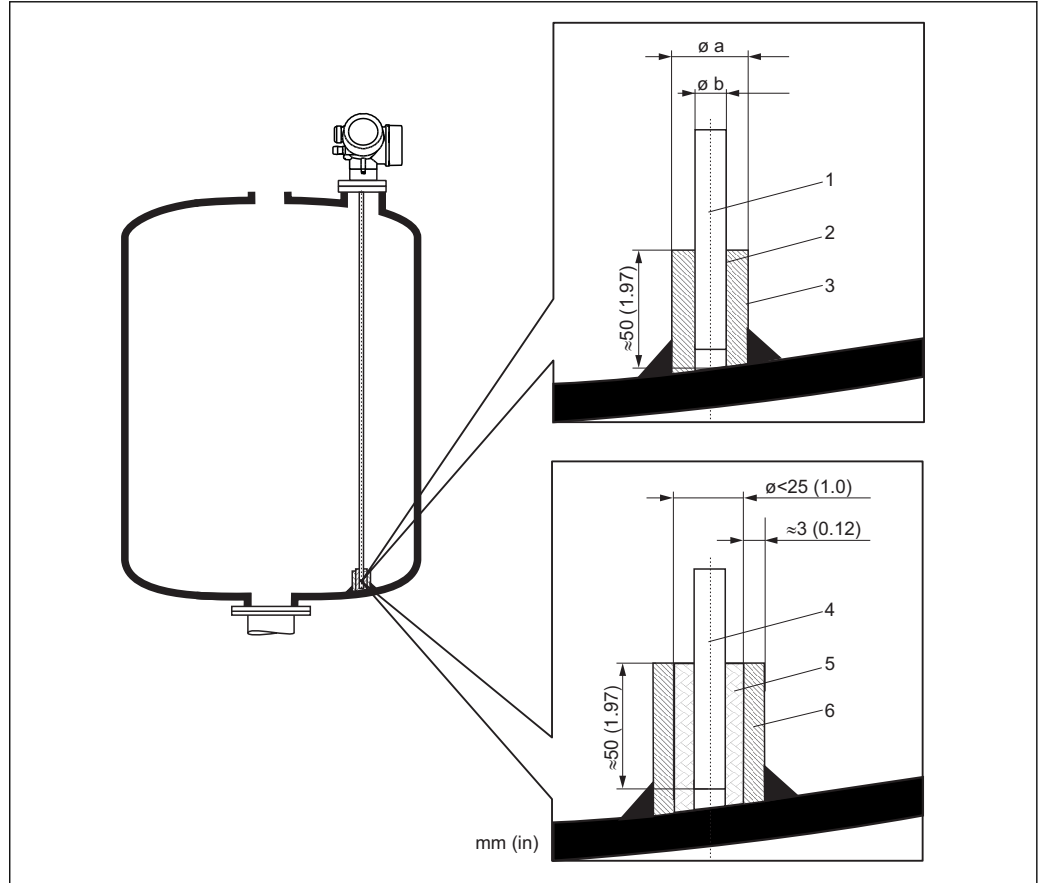

A0012607

- 1 Probe rod, uncoated
- 2 Sleeve bored tight to ensure electrical contact between the rod and sleeve!
- 3 Short metal pipe, e.g. welded in place
- 4 Probe rod, coated
- 5 Plastic sleeve, e.g. PTFE, PEEK or PPS
- 6 Short metal pipe, e.g. welded in place

$\phi$ probe	$\phi$ a [mm (inch)]	$\phi$ b [mm (inch)]
8 mm (1/3")	< 14 (0.55)	8.5 (0.34)
12 mm (1/2")	< 20 (0.78)	12.5 (0.52)
16 mm (0.63in)	< 26 (1.02)	16.5 (0.65)

**NOTICE**

**Poor grounding of the end of probe may cause measuring errors.**

- ▶ Apply a narrow sleeve which has good electrical contact to the probe.


**NOTICE**

**Welding may damage the main electronics module.**

- ▶ Before welding: Ground the probe and dismount electronics.

*Securing coax probes*

For WHG approvals: For probe lengths  $\geq 3$  m (10 ft) a support is required.

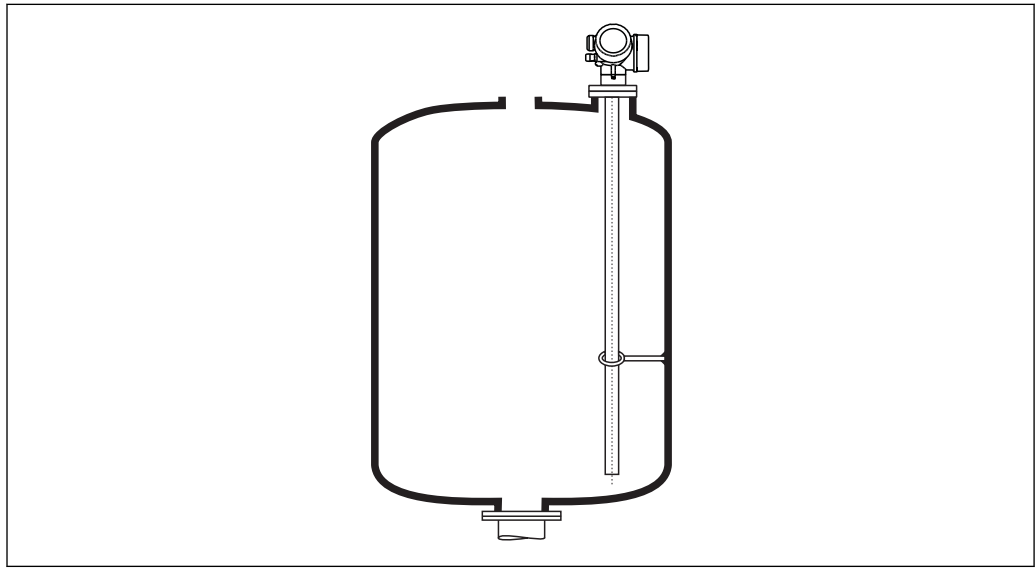


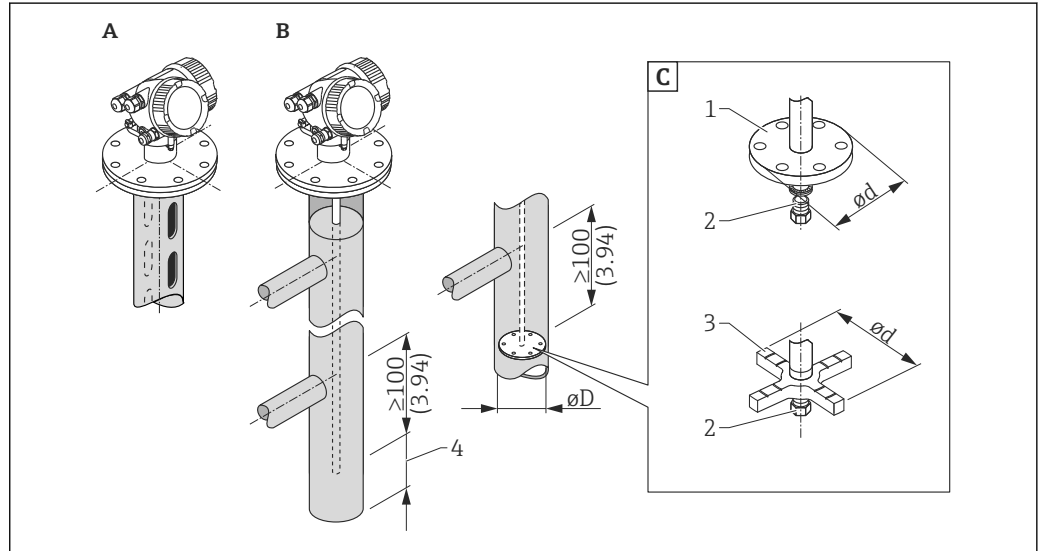
A0012608

Coax probes can be supported at any point of the outer tube.


**Special mounting conditions**

*Bypasses and stilling wells*

 In bypass and stilling well applications it is recommended to use a centering disks or stars.



A0012615

 20 Dimensions: mm (in)

- A Mounting in a stilling well
- B Mounting in a bypass
- C Center washer or centering star
- 1 Metallic center washer (316L) for level measurement
- 2 Fixing screw; torque: 25 Nm ± 5 Nm
- 3 Non-metallic centering star (PEEK, PFA) for interface measurement
- 4 Minimum distance between end of probe and lower edge of the bypass; see table below

*Allocation of probe type and center washer or centering star to pipe diameter*

Feature 610 - Accessory mounted					
Application	Option	Type of probe	Center washer Centering star		Pipe
			$\phi d$ [mm (in)]	Material	$\phi D$ [mm (in)]
Level measurement	OA	Rod probe	75 (2,95)	316L	DN80/3" to DN100/4"
	OB	Rod probe	45 (1,77)	316L	DN50/2" to DN65/2½"
	OC	Rope probe	75 (2,95)	316L	DN80/3" to DN100/4"
Level or interface measurement	OD	Rod probe	48...95 (1,89...3,74)	PEEK <sup>1)</sup>	≥ 50 mm (2")
	OE	Rod probe	37 (1,46)	PFA <sup>2)</sup>	≥ 40 mm (1.57")


1) Operation temperature: -60 to +250 °C (-76 to 482 °F)

2) Operation temperature: -200 to +250 °C (-328 to +482 °F)


*Minimum distance between end of probe and lower edge of the bypass*


Type of probe	Minimum distance
Rope	10 mm (0.4 in)
Rod	10 mm (0.4 in)
Coax	10 mm (0.4 in)

- Pipe diameter: > 40 mm (1.6") for rod probes
- Rod probe installation can take place up to a diameter size of 150 mm (6 in). In the event of larger diameters, a coax probe is recommended.
- Side disposals, holes or slits and welded joints that protrude up to approx. 5 mm (0.2") inwards do not influence the measurement.
- The pipe may not exhibit any steps in diameter.
- The probe must be 100 mm longer than the lower disposal.
- Within the measuring range, the probe must not get into contact with the pipe wall. If necessary, secure the probe by retaining or tensioning. All rope probes are prepared for tensioning in containers (tensioning weight with anchor hole).
- If a metallic center washer is mounted at the end of the probe, it enables a reliable recognition of the end-of-probe signal (see feature 610 of the product structure).  
**Note:** For interface measurements only use the nonmetallic centering star made of PEEK or PFA (feature 610, options OD or OE).
- Coax probes can always be applied if there is enough mounting space.


 For bypasses with condensate formation (water) and a medium with low dielectric constant (e.g. hydrocarbons):

In the course of time the bypass is filled with condensate up to the lower disposal and for low levels the the level echo is superimposed by the condensate echo. Thus in this range the condensate level is measured instead of the correct level. Only higher levels are measured correctly. To prevent this, position the lower disposal 100 mm (4 in) below the lowest level to be measured and apply a metallic centering disk at the height of the lower edge of the lower disposal.

 With heat insulated tanks the bypass should also be insulated in order to prevent condensate formation.


 For information on bypass solutions from Endress+Hauser please contact your Endress+Hauser sales representative.

*Installation in horizontal and upright cylindrical tanks*

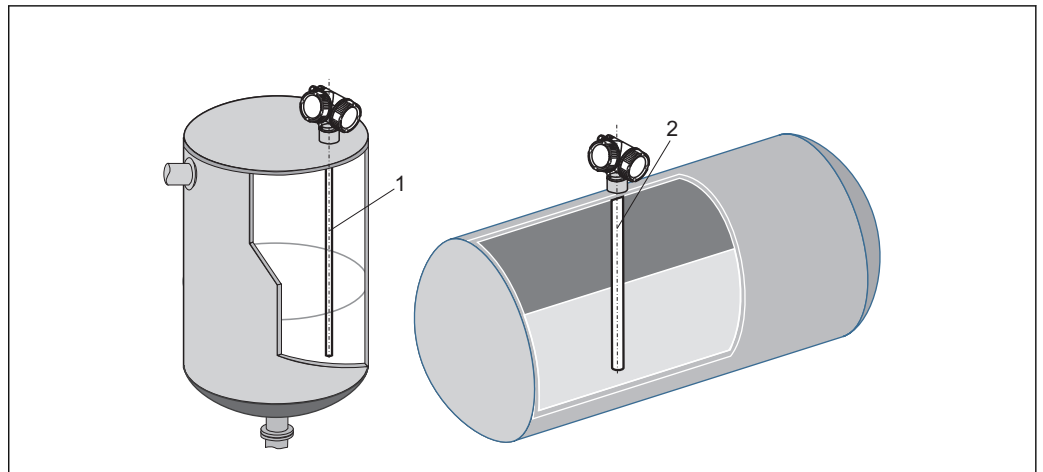

A0014141


- Any distance from wall, as long as occasional contact is prevented.
- When installing in tanks with a lot of internals or internals situated close to the probe: use a coax probe.

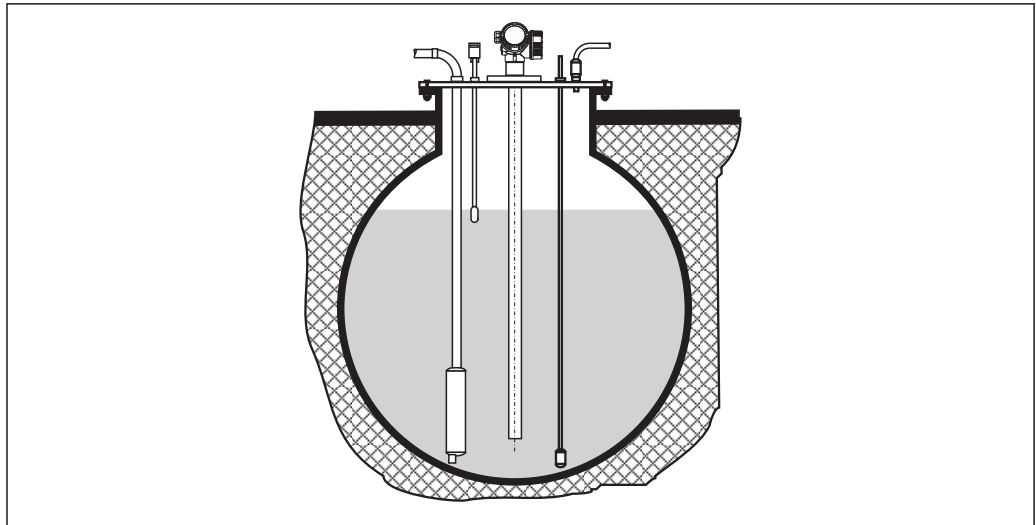*Underground tanks*

A0014142


Use a coax probe for nozzles with large diameters in order to avoid reflections at the nozzle wall.

*Installation at an angle*

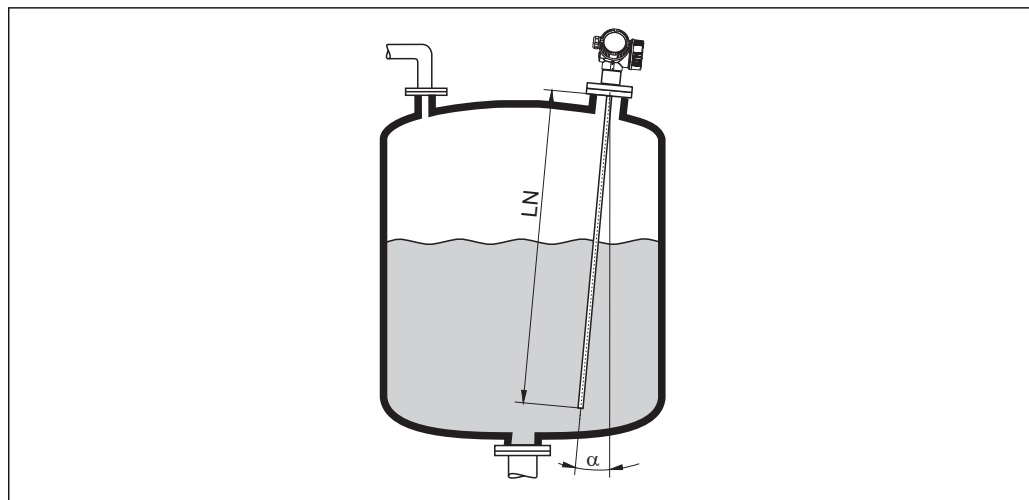

A0014145

- For mechanical reasons, the probe should be installed as vertically as possible.
- With inclined installations the probe length has to be adjusted in dependence to the installation angle.
  - Up to LN = 1 m (3.3 ft):  $\alpha = 30^\circ$
  - Up to LN = 2 m (6.6 ft):  $\alpha = 10^\circ$
  - Up to LN = 4 m (13.1 ft):  $\alpha = 5^\circ$

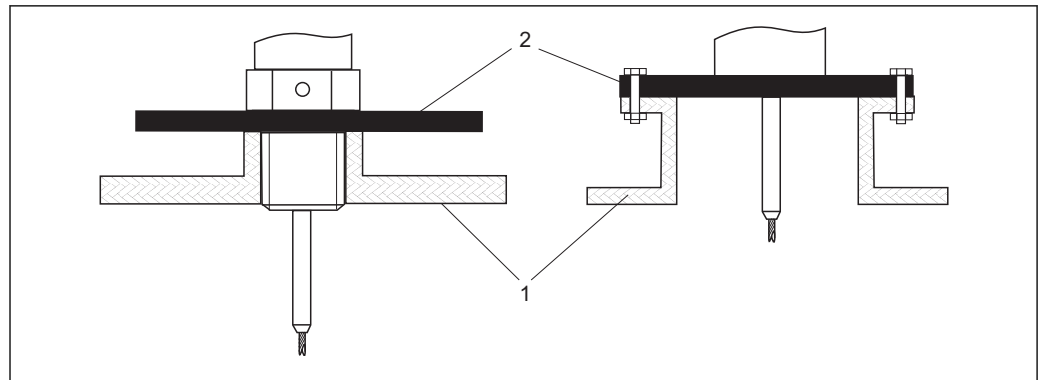*Non-metallic vessels*

A0012527

- 1 *Non-metallic vessel*  
2 *Metal sheet or metal flange*


To ensure reliable measurements in non-metallic vessels:

- Select an instrument version with metal flange (minimum size DN50/2").
- Or: mount a metal sheet with a diameter of at least 200 mm (8 in) to the probe at the process connection. Its orientation must be perpendicular to the probe.

**i** A metallic surface is not required for coax probes.



*Plastic or glass tanks: Mounting the probe externally at the wall*

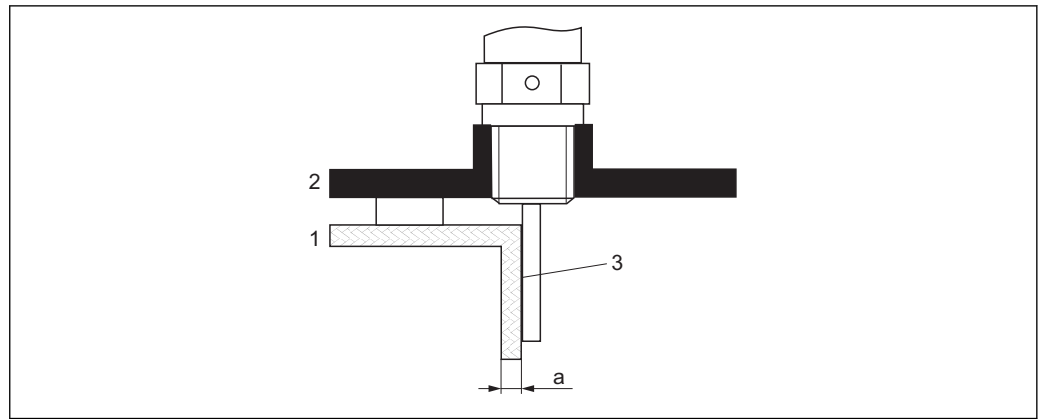

- 1 Plastic or glass tank
- 2 Metall sheet with threaded sleeve
- 3 No free space between tank wall and probe!

**Requirements**


- The dielectric constant of the medium must be at least  $DC > 7$ .
- The tank wall must be non-conductvie.
- Maximum wall thickness (a):
  - Plastic: < 15 mm (0.6")
  - Glass: < 10 mm (0.4")
- There may be no metallic reinforcements fixed to the tank.

**Mounting conditions:**

- The probe must be mounted directly to the tank wall (no open space)
- A plastic half pipe with a diameter of approx. 200 mm (8"), or some other protective unit, must be affixed externally to the probe to prevent any influences on the measurement.
- If the tank diameter is less than 300 mm (12"):
  - A metallic grounding sheet must be installed at the opposite side of the tank. The sheet must be conductively connected to the process connection and cover about the half of the vessel's circumference.
- If the tank diameter exceeds 300 mm (12"):
  - A metal sheet with a diameter of at least 200 mm (8") must be mounted to the probe at the process connection. Its orientation must be perpendicular to the probe (see above).

Vessels with heat insulation


**i** If process temperatures are high, the device must be included in normal tank insulation to prevent the electronics heating up as a result of heat radiation or convection. The insulation may not exceed beyond the points labeled "MAX" in the drawings.

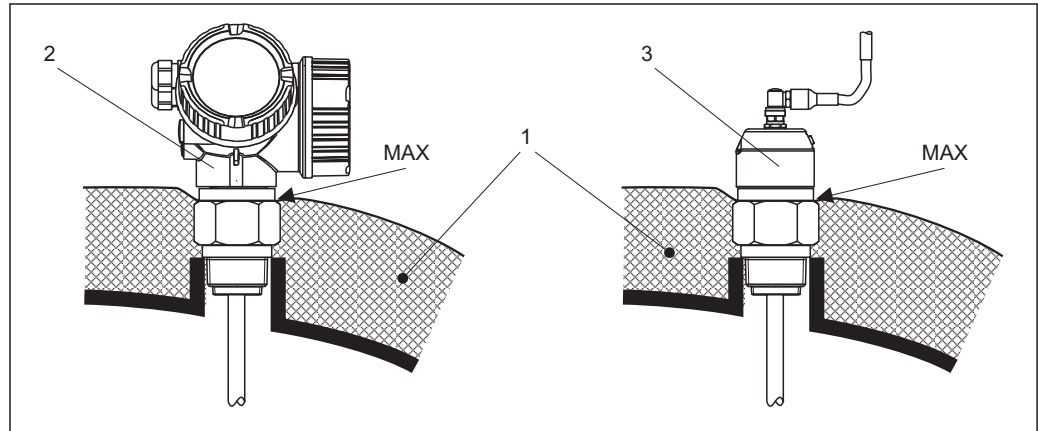

A0014653

**21** Process connection with thread - FMP51


- 1 Tank insulation
- 2 Compact device
- 3 Sensor remote (feature 600)

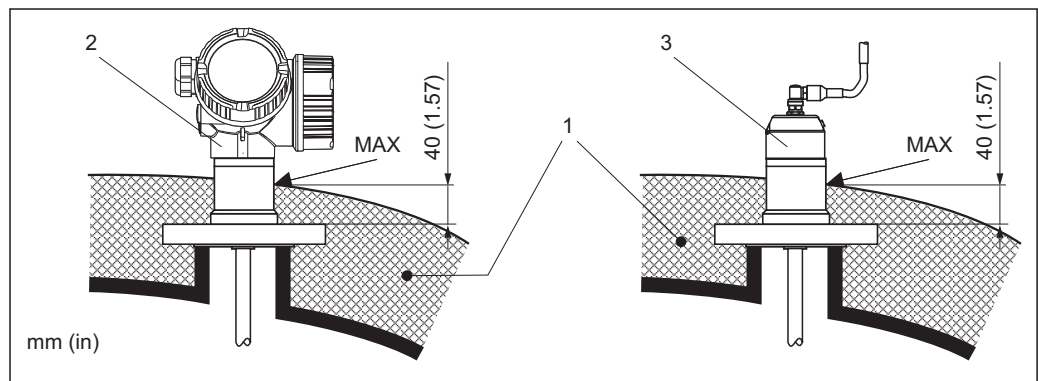

A0014654

**22** Process connection with flange - FMP51, FMP52


- 1 Tank insulation
- 2 Compact device
- 3 Sensor remote (feature 600)

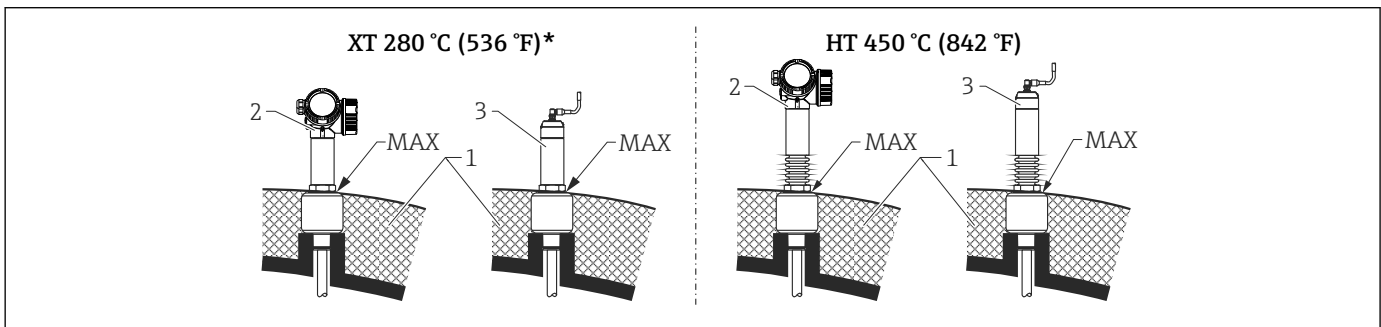

A0014657

**23** Process connection with thread - FMP54, sensor version XT and HT

- 1 Tank insulation
- 2 Compact device
- 3 Sensor remote (feature 600)
- \* The XT version is not recommended for saturated steam above 200 °C (392 °F). Use the HT version instead.

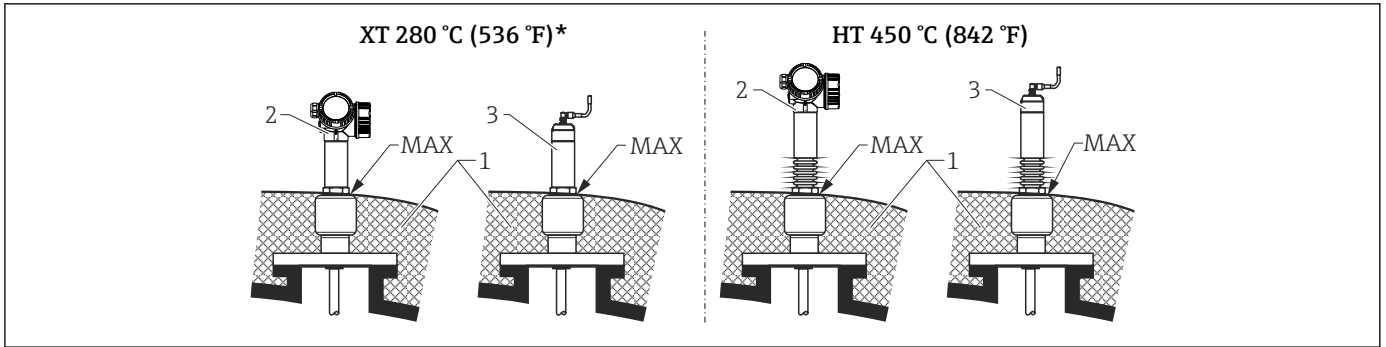

A0014658

24 Process connection with flange - FMP54, sensor version XT and HT

1 Tank insulation

2 Compact device

3 Sensor remote (feature 600)


\* The XT version is not recommended for saturated steam above 200 °C (392 °F). Use the HT version instead.

*Replacing a displacer system in an existing displacer chamber*

FMP51 and FMP54 are a perfect replacement for a conventional displacer system in an existing displacer chamber. Endress+Hauser offers flanges that suit Fisher and Masoneilan displacer chamber for this purpose (special product for FMP51; feature 100, options LNJ, LPJ, LQJ for FMP54). Thanks to menu-guided local operation, commissioning the Levelflex only takes a few minutes. Replacement is also possible when partially filled, and wet calibration is not required.

Your benefits:

- No moving parts, thus zero-maintenance operation.
- Not sensitive to process influences such as temperature, density, turbulence and vibrations.
- The rod probes can be shortened or replaced easily. In this way, the probe can be easily adjusted on site.

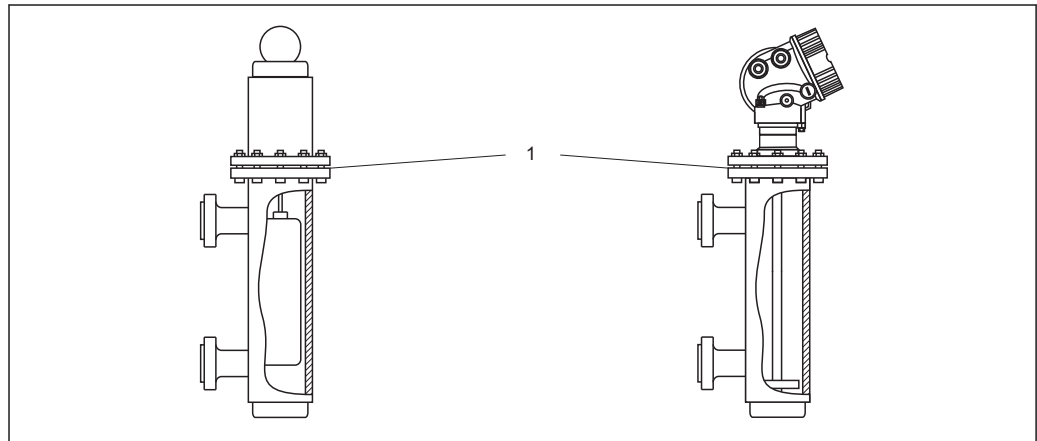

A0014153

1 Flange of the displacer chamber

Planning instructions:

- In normal cases, use a rod probe. When installing into a metallic displacer chamber up to 150 mm, you have all the advantages of a coax probe.
- It must be ensured that the probe does not come into contact with the side wall. Where necessary, use a center washer or centering star at the lower end of the probe (feature 610 of the product structure).
- The center washer or centering star must be adapted as accurately as possible to the internal diameter of the displacer chamber to also ensure perfect operation in the area of the probe end.

Additional information on interface measurement

- In the case of oil and water the centering disk or centering star should be positioned at the lower edge of the lower disposal (water level).
- The pipe may not exhibit any steps in diameter. Use the coax probe where necessary.
- In the case of rod probes, it must be ensured that the probe does not come into contact with the wall. If necessary, use a center washer or centering star at the end of the probe.
- A plastic centering star has to be used for interface measurement (feature 610, options OD and OE).


## Operating conditions: Environment

<b>Ambient temperature range</b>	<b>Measuring device</b>	-40 to +80 °C (-40 to +176 °F)
	<b>Measuring device (option for FMP51 and FMP54)</b>	-50 to +80 °C (-58 to +176 °F)
	<b>Local display</b>	-20 to +70 °C (-4 to +158 °F), the readability of the display may be impaired at temperatures outside the temperature range.
	<b>Connection cable (for "Probe Design" = "Sensor remote")</b>	max. 100 °C (212 °F)
	<b>Remote display FHX50</b>	-40 to 80 °C (-40 to 176 °F)
	<b>Remote display FHX50 (option)</b>	-50 to 80 °C (-58 to 176 °F) <sup>1)</sup>

- 1) This range is valid if option JN "Ambient temperature transmitter -50 °C (-58 °F)" has been selected in ordering feature 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), failure rates may be increased.


When operating the device in the open with strong sunlight:

- Mount the device in a shady position.
- Avoid direct sunlight, especially in warmer regions.
- Use a weather protection cover (see accessories).

**Ambient temperature limits** The following diagrams take into account only function requirements. There may be further restrictions for certified device versions. Please refer to the separate Safety Instructions →  134.

With a temperature ( $T_p$ ) at the process connection the admissible ambient temperature ( $T_a$ ) is reduced according to the following diagram (temperature derating):

Temperature derating for FMP51 with threaded connection G $\frac{3}{4}$  or NPT $\frac{3}{4}$

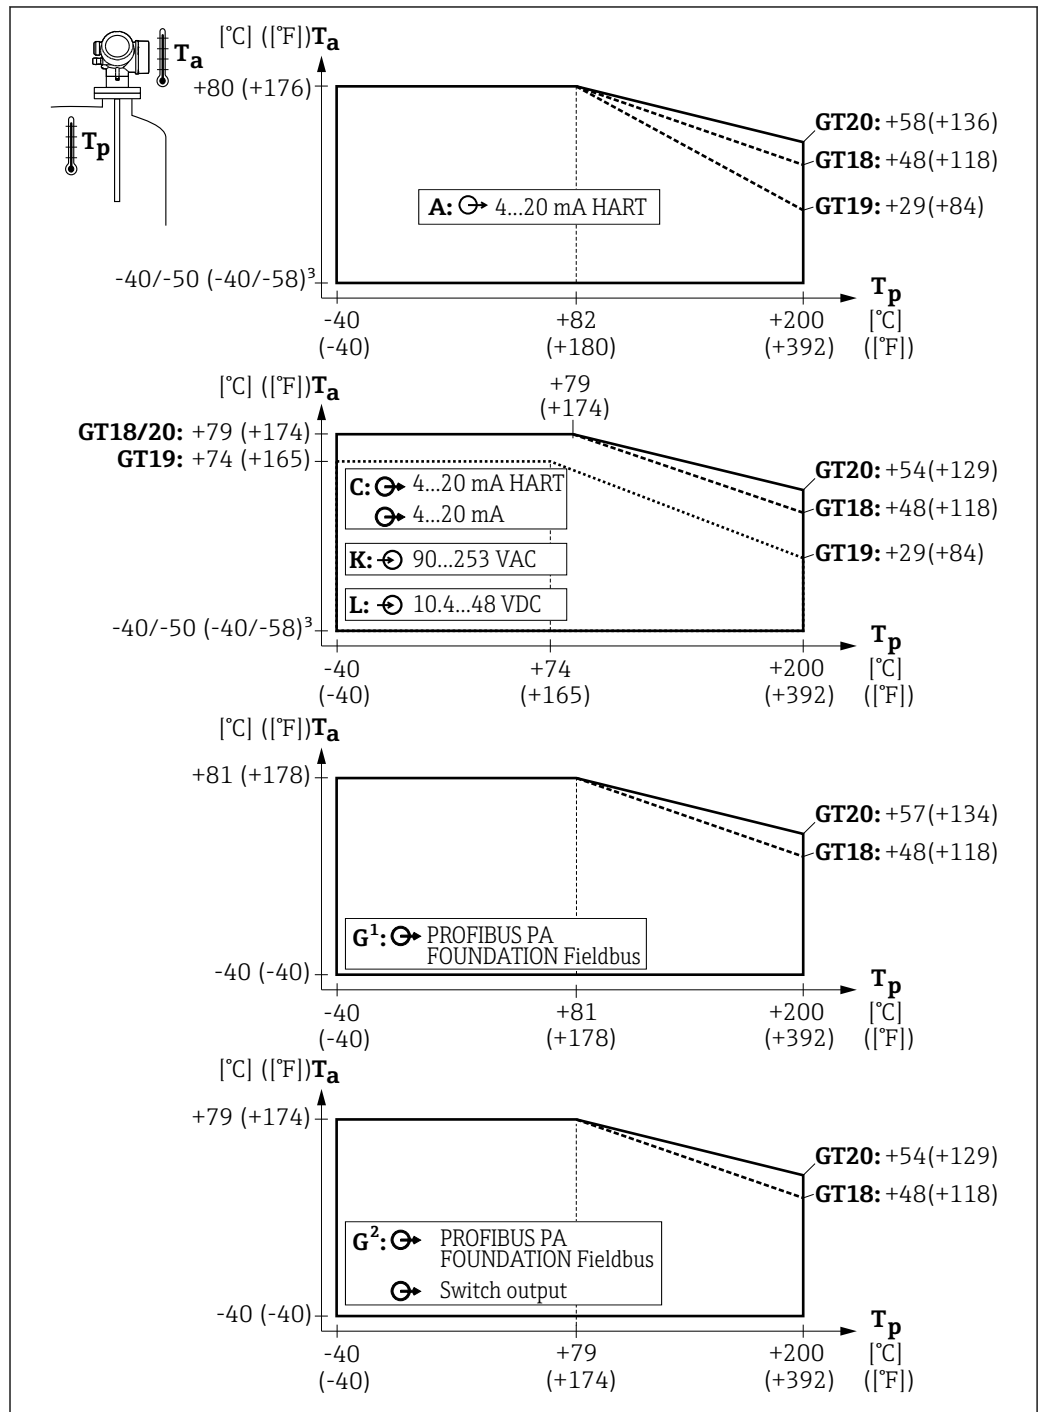

A0013687


GT18 = stainless steel housing  
GT19 = plastic housing  
GT20 = aluminum housing

A = 1 current output  
C = 2 current outputs  
G<sup>1</sup>, G<sup>2</sup> = PROFIBUS PA<sup>1) 2)</sup>  
K, L = 4-wire

$T_a$  = ambient temperature<sup>3)</sup>  
 $T_p$  = temperature at the process connection

- 1) G<sup>1</sup>: switch output not used
- 2) G<sup>2</sup>: Switch output used
- 3)  $T_a$  may be as low as -50 °C (-58 °F) for ordering feature 580 "Test,Certificate" = JN "Ambient temperature transmitter -50 °C (-58 °F)"; only available for 2-wire HART devices

Temperature derating for FMP51 with threaded connection G1½ or NPT1½

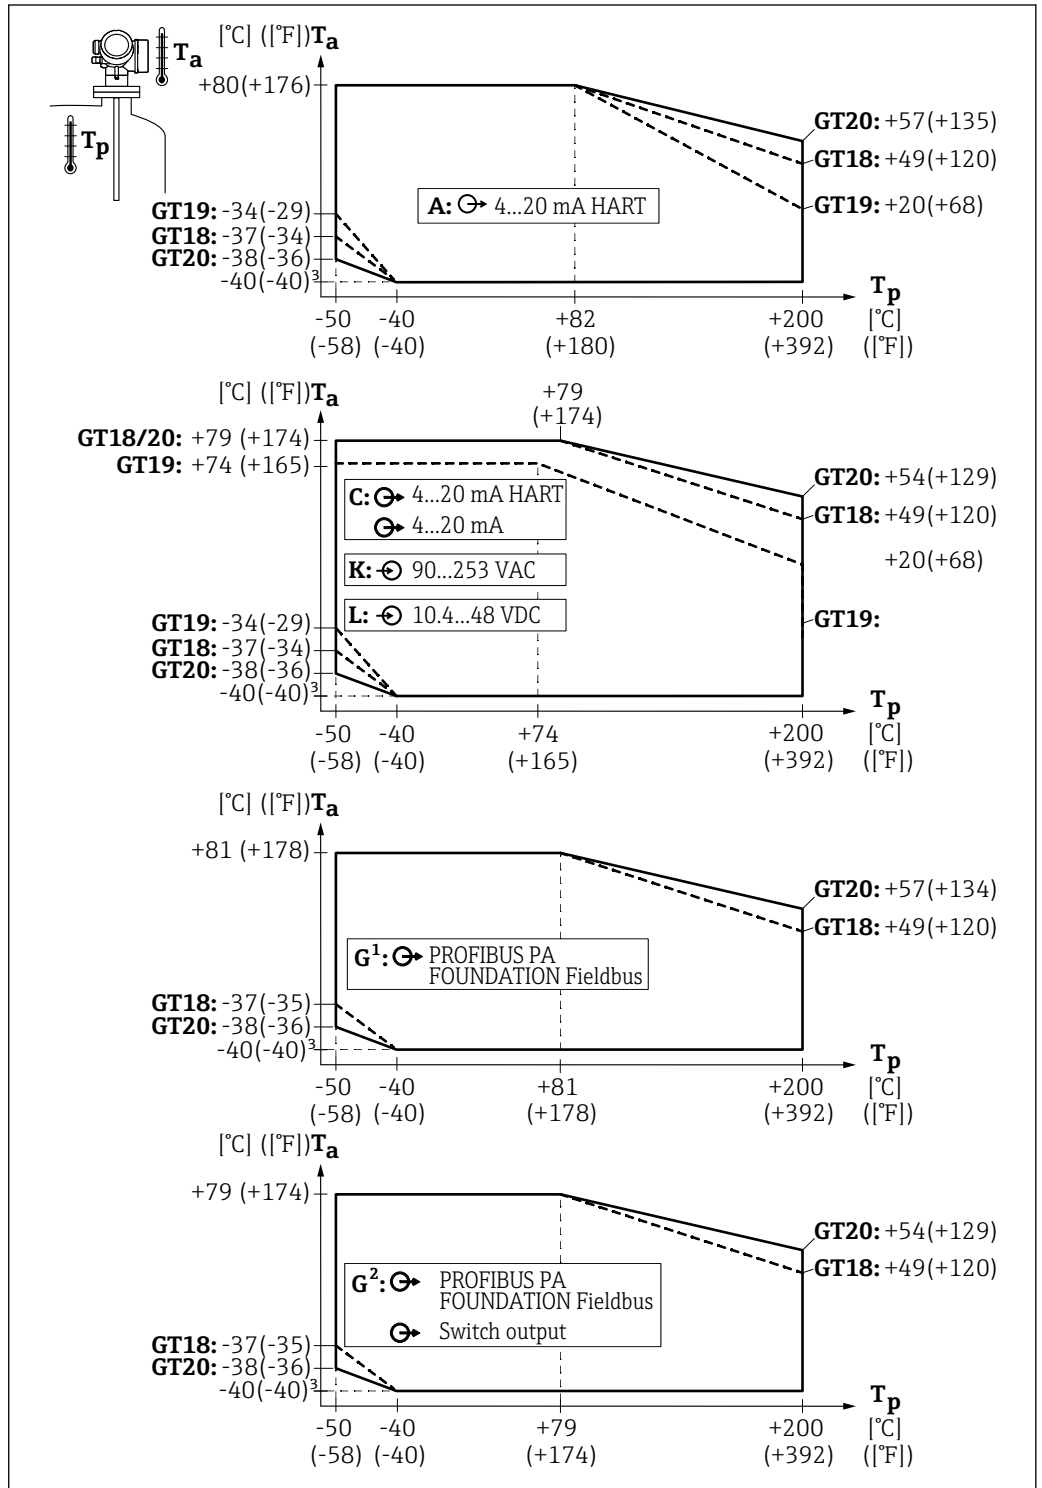

A0014121


GT18 = stainless steel housing  
 GT19 = plastic housing  
 GT20 = aluminum housing

A = 1 current output  
 C = 2 current outputs  
 G<sup>1</sup>, G<sup>2</sup> = PROFIBUS PA <sup>1) 2)</sup>  
 K, L = 4-wire

$T_a$  = ambient temperature <sup>3)</sup>  
 $T_p$  = temperature at the process connection

- 1) G<sup>1</sup>: switch output not used
- 2) G<sup>2</sup>: switch output used
- 3)  $T_a$  may be as low as -50 °C (-58 °F) for ordering feature 580 "Test,Certificate" = JN "Ambient temperature transmitter -50 °C (-58 °F)"; only available for 2-wire HART devices

Temperature derating for FMP51 with flange

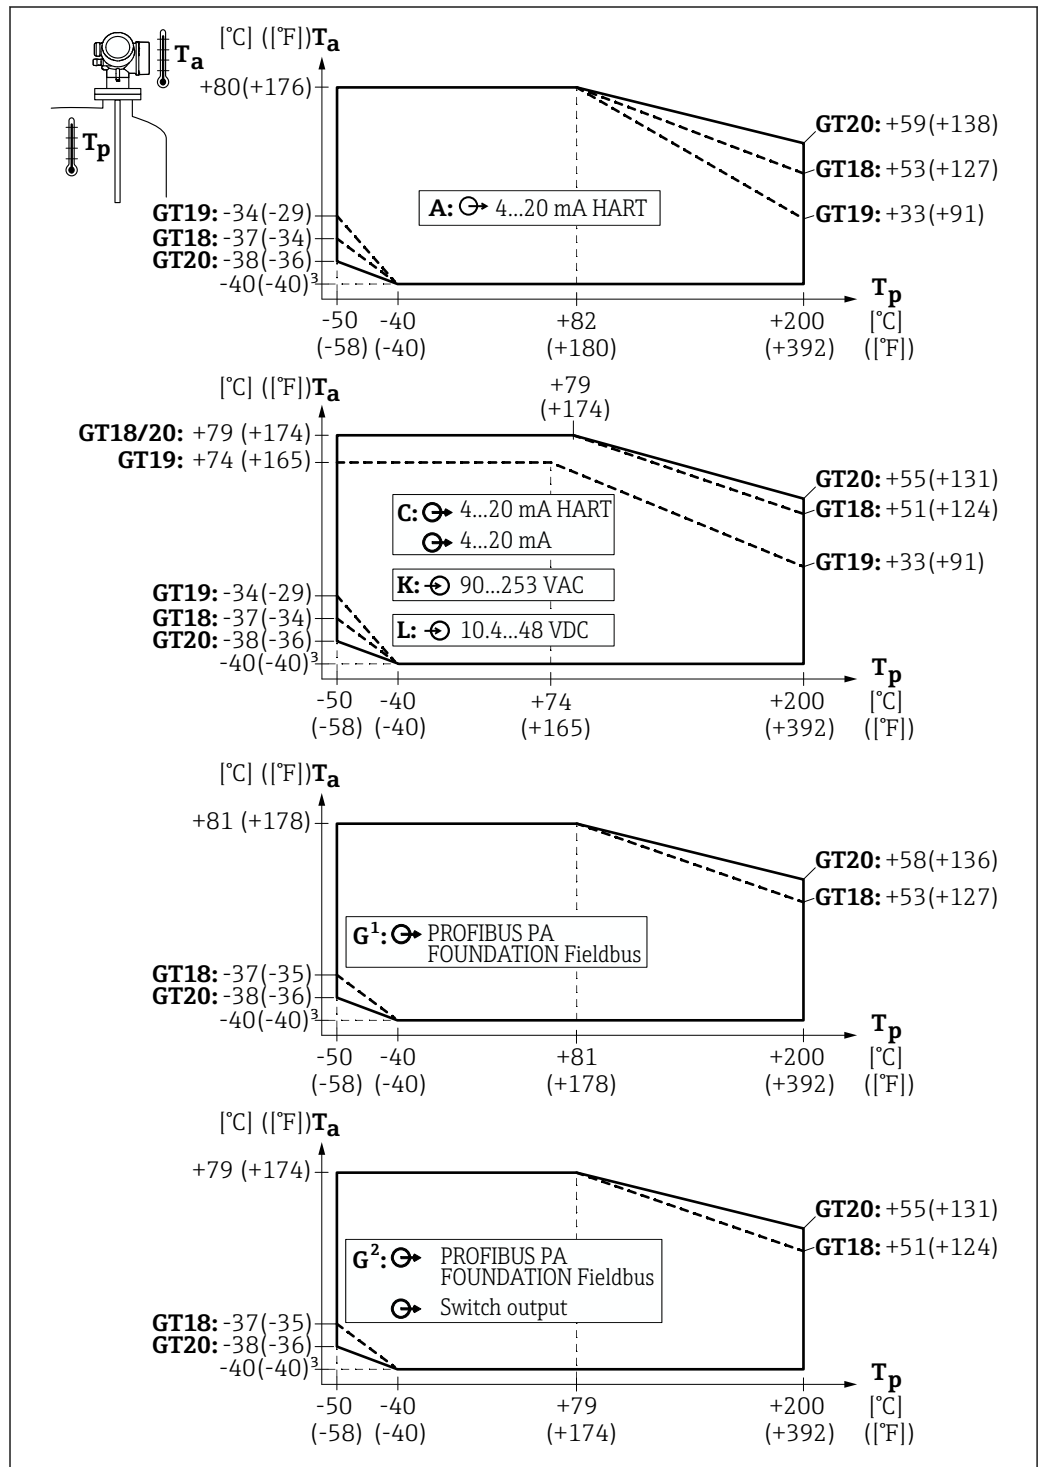

A0013689

GT18 = stainless steel housing  
 GT19 = plastic housing  
 GT20 = aluminum housing


A = 1 current output  
 C = 2 current outputs  
 G<sup>1</sup>, G<sup>2</sup> = PROFIBUS PA <sup>1) 2)</sup>  
 K, L = 4-wire

$T_a$  = ambient temperature <sup>3)</sup>  
 $T_p$  = temperature at the process connection

- 1) G<sup>1</sup>: switch output not used
- 2) G<sup>2</sup>: Switch output used
- 3)  $T_a$  may be as low as -50 °C (-58 °F) for ordering feature 580 "Test,Certificate" = JN "Ambient temperature transmitter -50 °C (-58 °F)"; only available for 2-wire HART devices



Temperature derating for FMP52

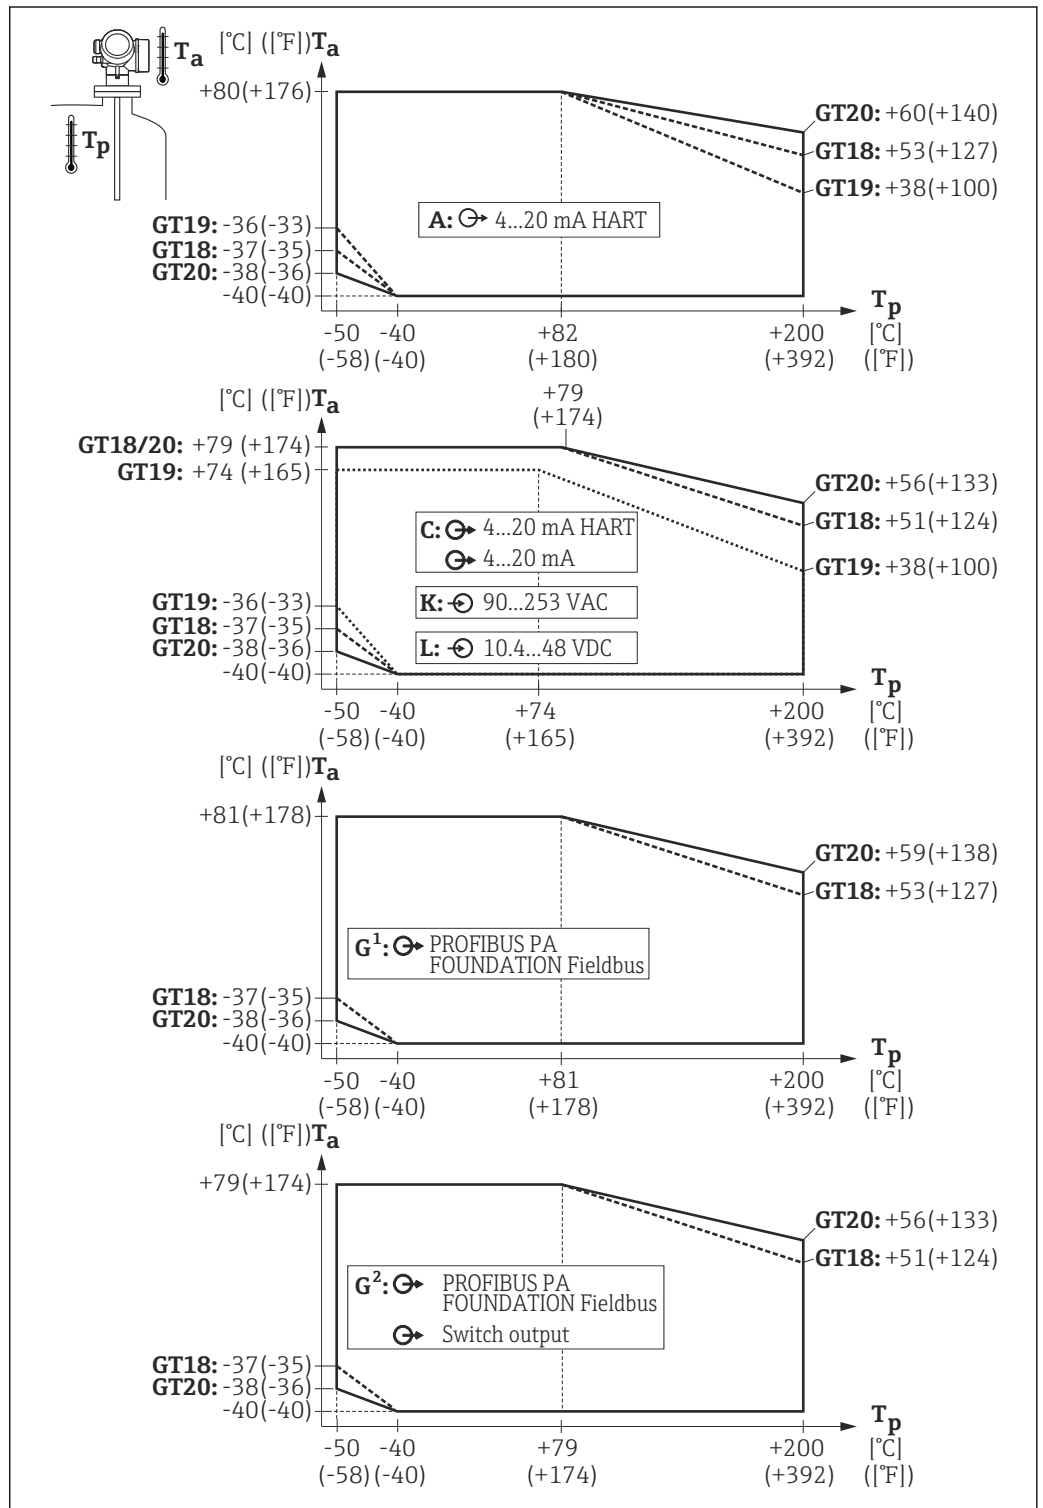

GT18 = stainless steel housing  
 GT19 = plastic housing  
 GT20 = aluminum housing


A = 1 current output  
 C = 2 current outputs  
 G<sup>1</sup>, G<sup>2</sup> = PROFIBUS PA<sup>1)</sup>  
 K, L = 4-wire

$T_a$  = ambient temperature  
 $T_p$  = temperature at the process connection<sup>2)</sup>

- 1) For PROFIBUS PA and FOUNDATION Fieldbus the temperature derating depends on the usage of the switch output. (G<sup>1</sup>: switch output not connected; G<sup>2</sup>: switch output connected).
- 2) For saturated steam applications the process temperature should not exceed 150 °C (302 °F). For higher process temperatures use FMP54.

A0013633

Temperature derating for FMP54 - version XT up to +280 °C (+536 °F)

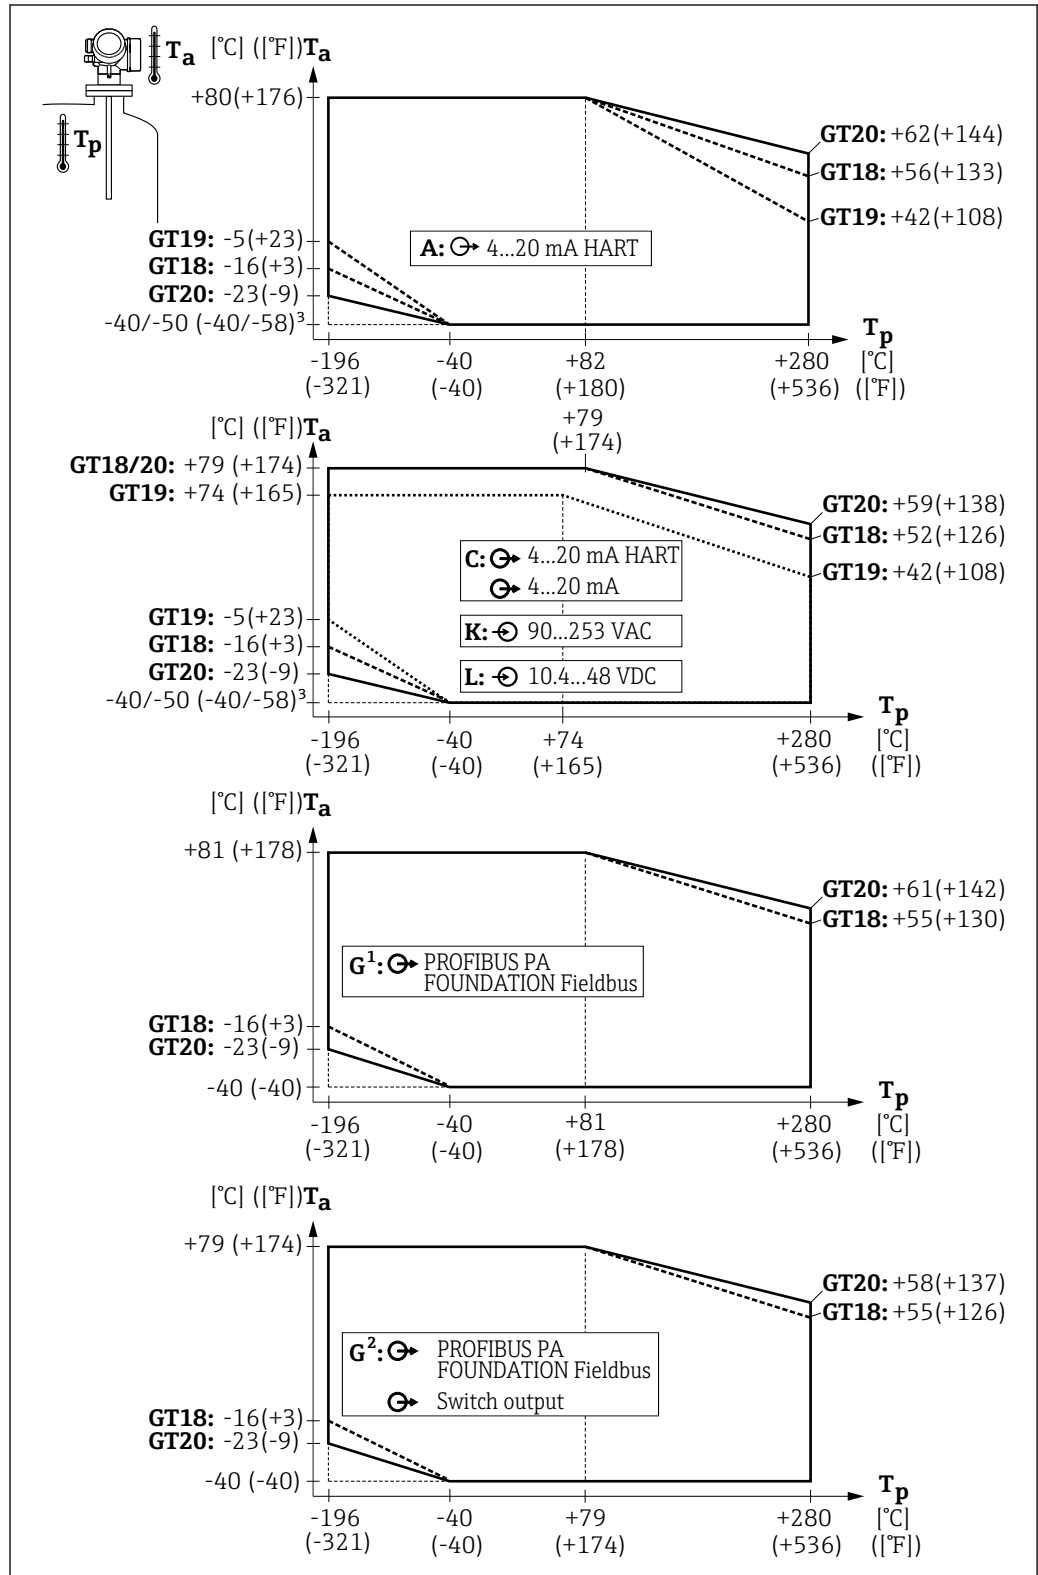

A0013631


GT18 = stainless steel housing  
 GT19 = plastic housing  
 GT20 = aluminum housing

A = 1 current output  
 C = 2 current outputs  
 G<sup>1</sup>, G<sup>2</sup> = PROFIBUS PA <sup>1) 2)</sup>  
 K, L = 4-wire

$T_a$  = ambient temperature <sup>3)</sup>  
 $T_p$  = temperature at the process connection

- 1) G<sup>1</sup>: switch output not used
- 2) G<sup>2</sup>: switch output used
- 3)  $T_a$  may be as low as -50 °C (-58 °F) for ordering feature 580 "Test, Certificate" = JN "Ambient temperature transmitter -50 °C (-58 °F)"; only available for 2-wire HART devices

Temperature derating for FMP54 - version HT up to +450 °C (+842 °F)

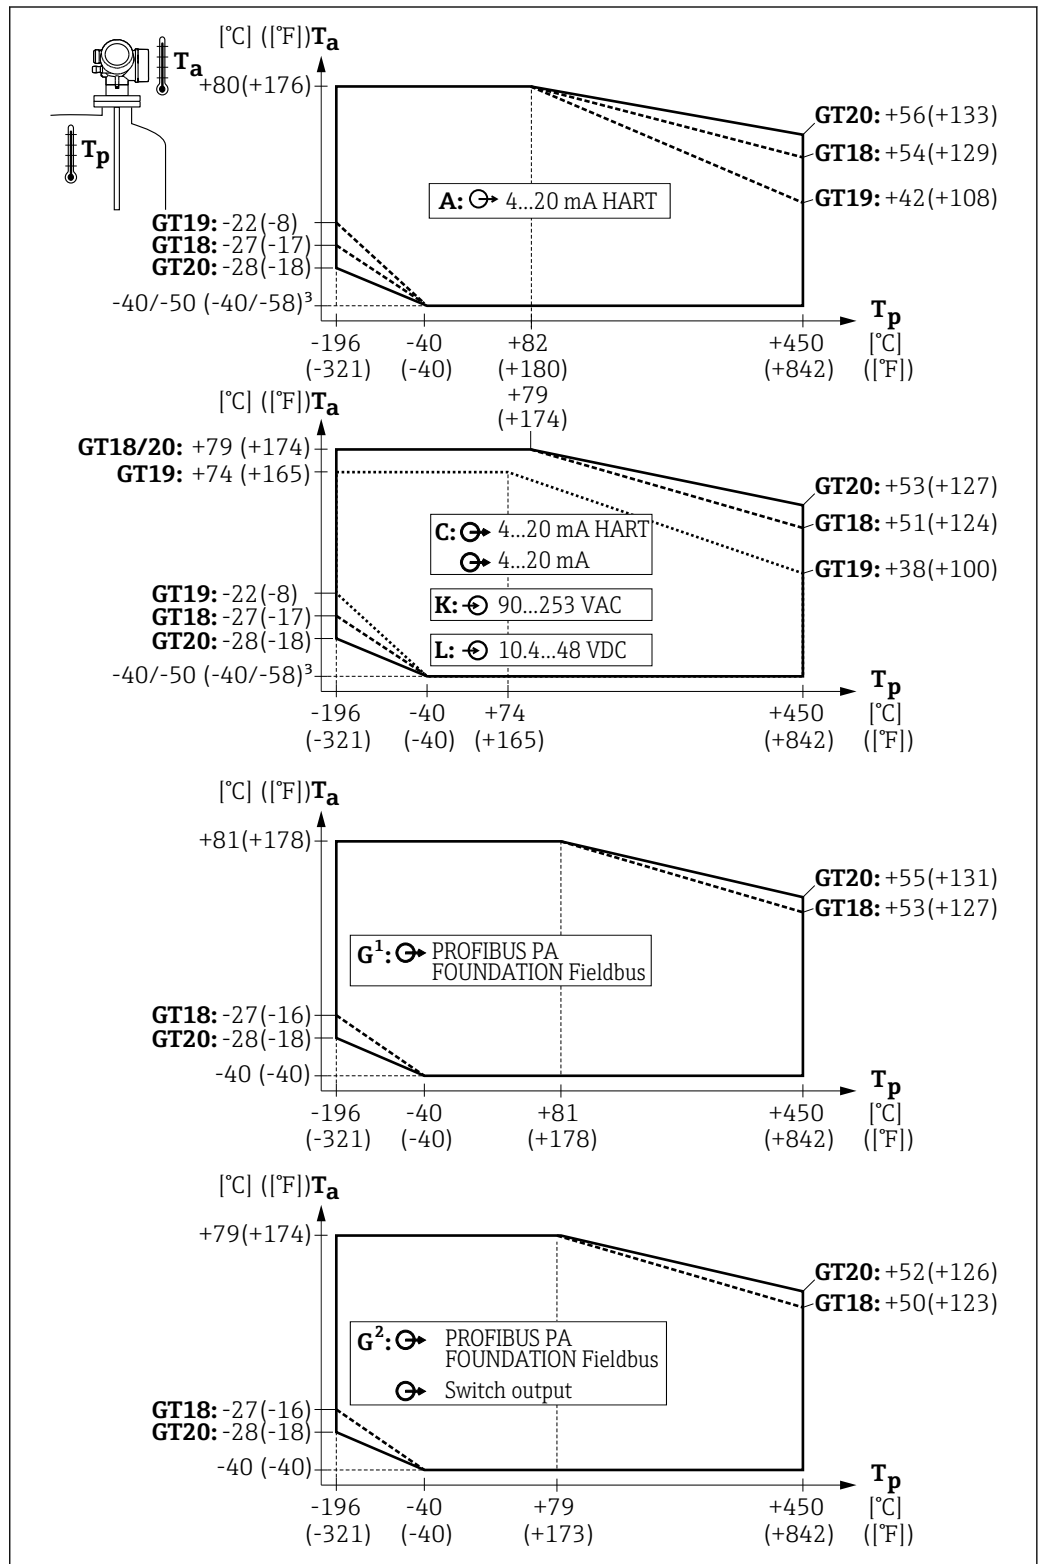


A0013632

GT18 = stainless steel housing  
 GT19 = plastic housing  
 GT20 = aluminum housing

A = 1 current output  
 C = 2 current outputs  
 G<sup>1</sup>, G<sup>2</sup> = PROFIBUS PA <sup>1) 2)</sup>  
 K, L = 4-wire

$T_a$  = ambient temperature <sup>3)</sup>  
 $T_p$  = temperature at the process connection

- 1) G<sup>1</sup>: switch output not used
- 2) G<sup>2</sup>: Switch output used
- 3)  $T_a$  may be as low as -50 °C (-58 °F) for ordering feature 580 "Test,Certificate" = JN "Ambient temperature transmitter -50 °C (-58 °F)"; only available for 2-wire HART devices

<b>Storage temperature</b>	-40 to +80 °C (-40 to +176 °F) Option for FMP51 and FMP54: -50 to +80 °C (-58 to +176 °F) <sup>7)</sup>
<b>Climate class</b>	DIN EN 60068-2-38 (test Z/AD)
<b>Altitude according to IEC61010-1 Ed.3</b>	<ul style="list-style-type: none"> <li>■ Generally up to 2 000 m (6 600 ft) above MSL.</li> <li>■ Above 2 000 m (6 600 ft) if the following conditions are met: <ul style="list-style-type: none"> <li>- Ordering feature 020 "Power supply; Output" = A, B, C, E or G (2-wire versions)</li> <li>- Supply voltage U &lt; 35 V</li> <li>- Supply voltage of overvoltage category 1</li> </ul> </li> </ul>
<b>Degree of protection</b>	<ul style="list-style-type: none"> <li>■ With closed housing tested according to: <ul style="list-style-type: none"> <li>- IP68, NEMA6P (24 h at 1.83 m under water surface) <sup>8)</sup></li> <li>- For plastic housing with transparent cover (display module): IP68 (24 h at 1.00 m under water surface) <sup>9)</sup></li> <li>- IP66, NEMA4X</li> </ul> </li> <li>■ With open housing: IP20, NEMA1</li> <li>■ Display module: IP22, NEMA2</li> </ul> <p> Degree of protection IP68 NEMA6P applies for M12 PROFIBUS PA plugs only when the PROFIBUS cable is plugged in and is also rated IP68 NEMA6P.</p>
<b>Vibration resistance</b>	DIN EN 60068-2-64 / IEC 60068-2-64: 20 to 2 000 Hz, 1 (m/s <sup>2</sup> ) <sup>2</sup> /Hz
<b>Cleaning the probe</b>	Depending on the application, contamination or buildup can accumulate on the probe. A thin, even layer only influences measurement slightly. Thick layers can dampen the signal and then reduce the measuring range. Severe, uneven buildup, adhesion e.g. through crystallization, can lead to incorrect measurement. In this case, we recommend that you use a non-contact measuring principle, or check the probe regularly for soiling.
<b>Electromagnetic compatibility (EMC)</b>	<p>Electromagnetic compatibility to all relevant requirements of the EN 61326- series and NAMUR recommendation EMC (NE21). For details see declaration of conformity. <sup>10)</sup>. If only the analogue signal is used, unshielded interconnection lines are sufficient for the installation. In case of using the digital signal (HART/ PA/ FF) use shielded interconnection lines.</p> <p>Use a shielded cable when working with a digital communications signal.</p> <p>Max. fluctuations during EMC- tests: &lt; 0.5 % of the span.</p> <p>When installing the probes in metal and concrete tanks and when using a coax probe:</p> <ul style="list-style-type: none"> <li>■ Interference emission to EN 61326 - x series, electrical equipment Class B.</li> <li>■ Interference immunity to EN 61326 - x series, requirements for industrial areas and NAMUR Recommendation NE 21 (EMC)</li> </ul> <p>The measured value can be affected by strong electromagnetic fields when installing rod and rope probes without a shielding/metallic wall, e.g. in plastic and wooden silos.</p> <ul style="list-style-type: none"> <li>■ Interference emission to EN 61326 - x series, electrical equipment Class A.</li> <li>■ Interference immunity: the measured value can be affected by strong electromagnetic fields.</li> </ul>

7) This range is valid if option JN "Ambient temperature transmitter -50 °C (-58 °F)" has been selected in ordering features 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), failure rates may be increased.

8) also valid for the "Sensor remote" version

9) This restriction is valid if the following options of the product structure have been selected at the same time: 030 ("Display, Operation") = C ("SD02") or E ("SD03"); 040 ("Housing") = A ("GT19").

10) Can be downloaded from [www.endress.com](http://www.endress.com).




## Process

### Process temperature range

The maximum permitted temperature at the process connection is determined by the O-ring version ordered:

Device	O-ring material	Process temperature	Approval
FMP51	FKM (Viton GLT 37559)	-30 to +150 °C (-22 to +302 °F)	
		-40 to +150 °C (-40 to +302 °F) only in combination with feature 610 "Accessory Mounted" option model NC "Gas-tight feed through"	
	EPDM (70C4 pW FKN or E7515)	-40 to +120 °C (-40 to +248 °F)	
	FFKM (Kalrez 6375) <sup>1)</sup>	-20 to +200 °C (-4 to +392 °F) <sup>2)</sup>	
	FVMQ (FVMQ 70C79)	-50 to 130 °C (-58 to 260 °F)	
FMP52	—	-50 to +200 °C (-58 to +392 °F); completely coated	FDA, 3A, EHEDG, USP Cl. VI <sup>3)</sup>
FMP54	Graphite	Version XT: -196 to +280 °C (-321 to +536 °F) <sup>4)</sup>	
		Version HT: -196 to +450 °C (-321 to +842 °F)	

- 1) Recommended for steam applications
- 2) Not recommended for saturated steam above 150 °C (302 °F). Use FMP54 instead.
- 3) Plastic parts in contact with process have been tested according to USP <88> Class VI-70°C.
- 4) Not recommended for saturated steam above 200 °C (392 °F). Use the HT version instead.


-  For FMP52: High process temperatures (> 150 °C (302 °F)) may possibly accelerate diffusion of the process medium through the probe coating, which may reduce the operating time.
-  The sensor material 1.4404/316L is resistant against attacks by internal corrosion according to AD 2000 - instruction sheet W2 for operating temperatures up to 400 °C (752 °F) and operating times of 100,000 hours (11.4 years). In case of higher temperatures the suitability of the material must be checked by the operator. Acids, in particular, may cause corrosion attacks.
-  With uncoated probes, the medium temperature may be higher, under the condition that the maximum process temperature specified in the table above is not exceeded at the process connection.

However, when using rope probes, the stability of the probe rope is reduced by structural changes at temperatures above 350 °C (662 °F).

### Process pressure range

Device	Process pressure
FMP51	-1 to 40 bar (-14.5 to 580 psi)
FMP52	-1 to 40 bar (-14.5 to 580 psi)
FMP54	-1 to 400 bar (-14.5 to 5800 psi)

FMP54 - process pressure depending on the process temperature

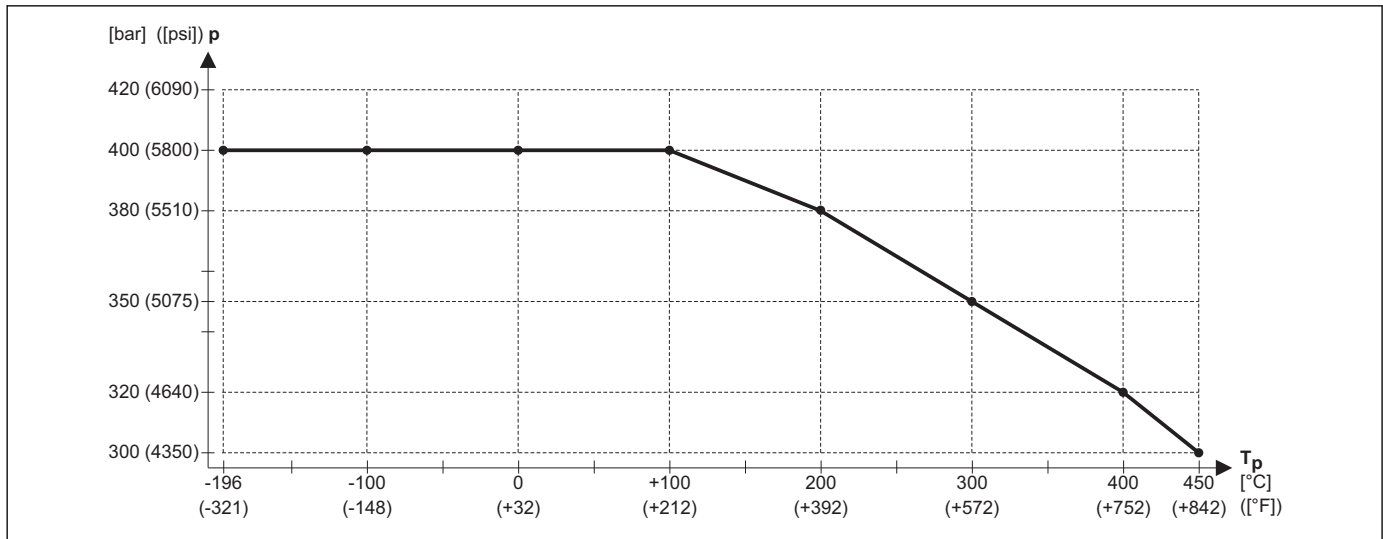

A0014005

$p$  = process pressure

$T_p$  = process temperature



This range may be reduced by the selected process connection. The pressure rating (PN) specified on the flanges refers to a reference temperature of 20 °C, for ASME flanges 100 °F. Pay attention to pressure-temperature dependencies.

Please refer to the following standards for the pressure values permitted for higher temperatures:

- EN 1092-1: 2007 Tab. G.4.1-x  
With regard to their temperature stability properties, the materials 1.4435 and 1.4404 are grouped under 13E0 in EN 1092-1:2007 Tab. G.3.1-1. The chemical composition of the two materials can be identical.
- ASME B 16.5a - 2013 Tab. 2-2.2 F316
- ASME B 16.5a - 2013 Tab. 2.3.8 N10276
- JIS B 2220

**Dielectric constant (DC)**

- Coax probes: DC ( $\epsilon_r$ )  $\geq$  1.4
- Rod and rope probe: DC ( $\epsilon_r$ )  $\geq$  1.6 (when installing in pipes DN  $\leq$  150 mm (6 in): DC ( $\epsilon_r$ )  $\geq$  1.4)


**Expansion of the rope probes through temperature**

Elongation through temperature increase from 30 °C (86 °F) to 150 °C (302 °F): 2 mm / m rope length

## Mechanical construction

### Dimensions


#### Dimensions of the electronics housing

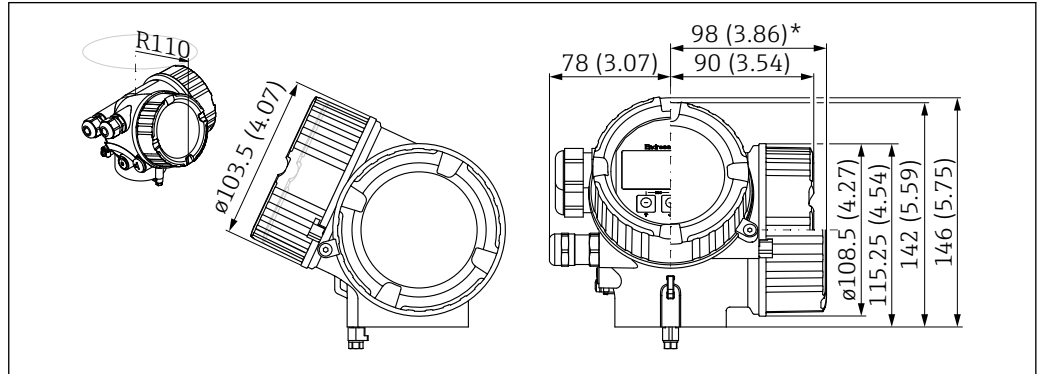

A0011666

25 Housing GT18 (316L); Dimensions in mm (in)


\*for devices with integrated overvoltage protection.

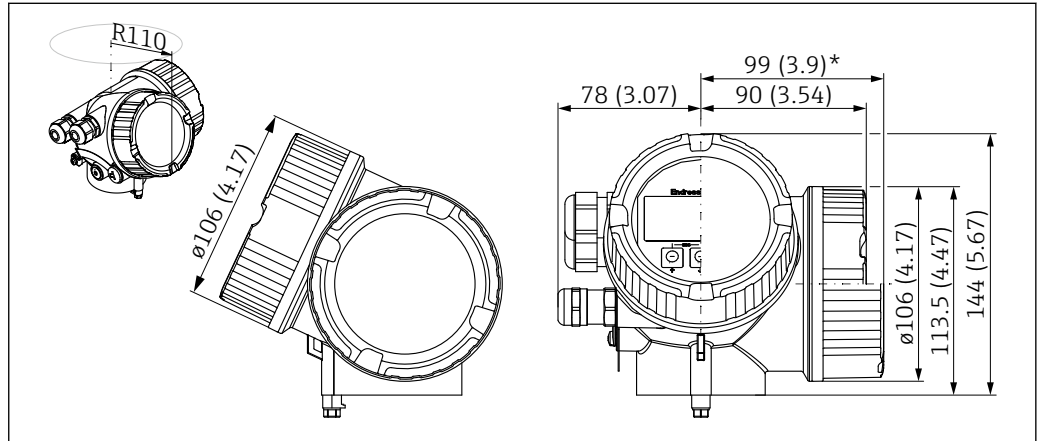

A0011346

26 Housing GT19 (Plastics PBT); Dimensions in mm (in)

\*for devices with integrated overvoltage protection.

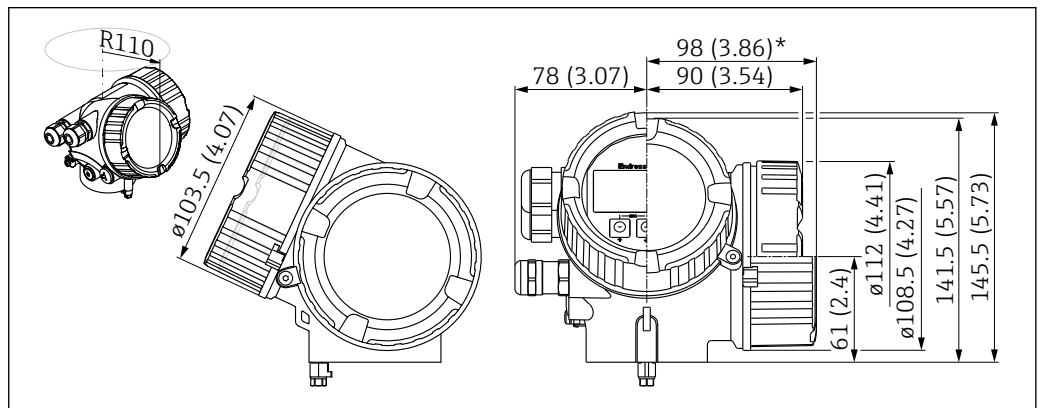


A0020751

27 Housing GT20 (Alu coated); Dimensions in mm (in)

\*for devices with integrated overvoltage protection.

**Dimensions of the mounting bracket**

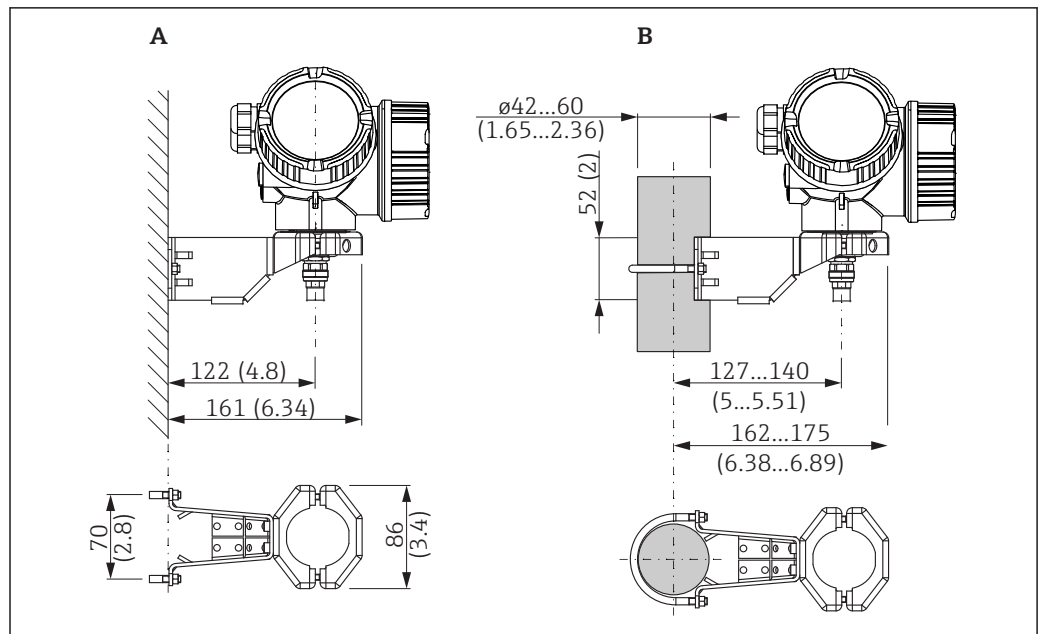

A0014793


28 Mounting bracket for the electronics housing: dimensions: mm (in)

A Wall mounting

B Pipe mounting

**i** For the "Sensor remote" device version (see feature 060 of the product structure), the mounting bracket is part of the delivery. If required, it can also be ordered as an accessory (order code 71102216).

**Dimensions of the connection piece for the remote probe**

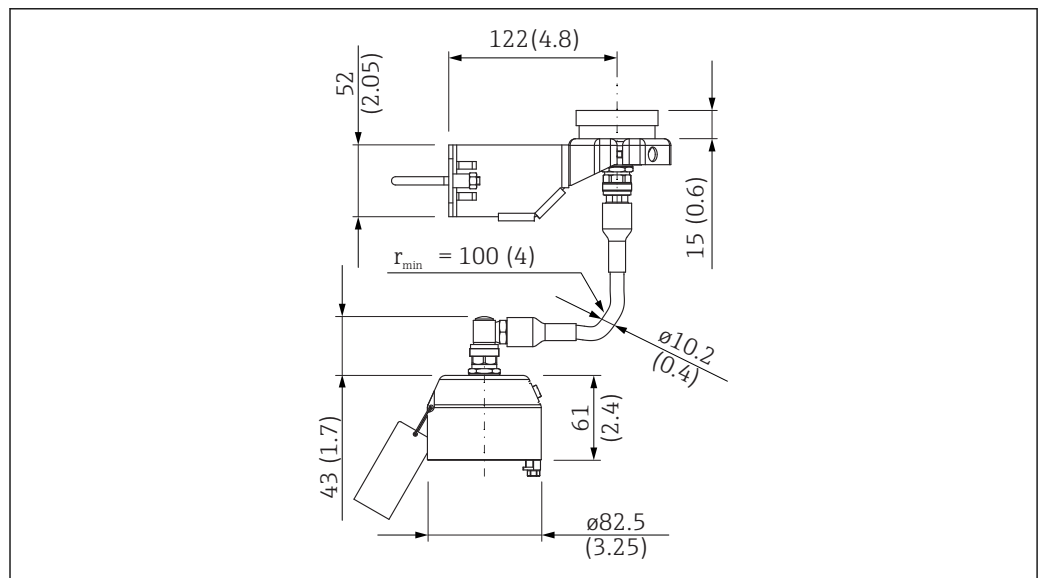


A0023856

29 Connection piece for the remote probe; dimensions: mm (in); Length of the connecting cable: as ordered



FMP51: Dimensions of process connection (G<sup>3/4</sup>,NPT<sup>3/4</sup>) and probe

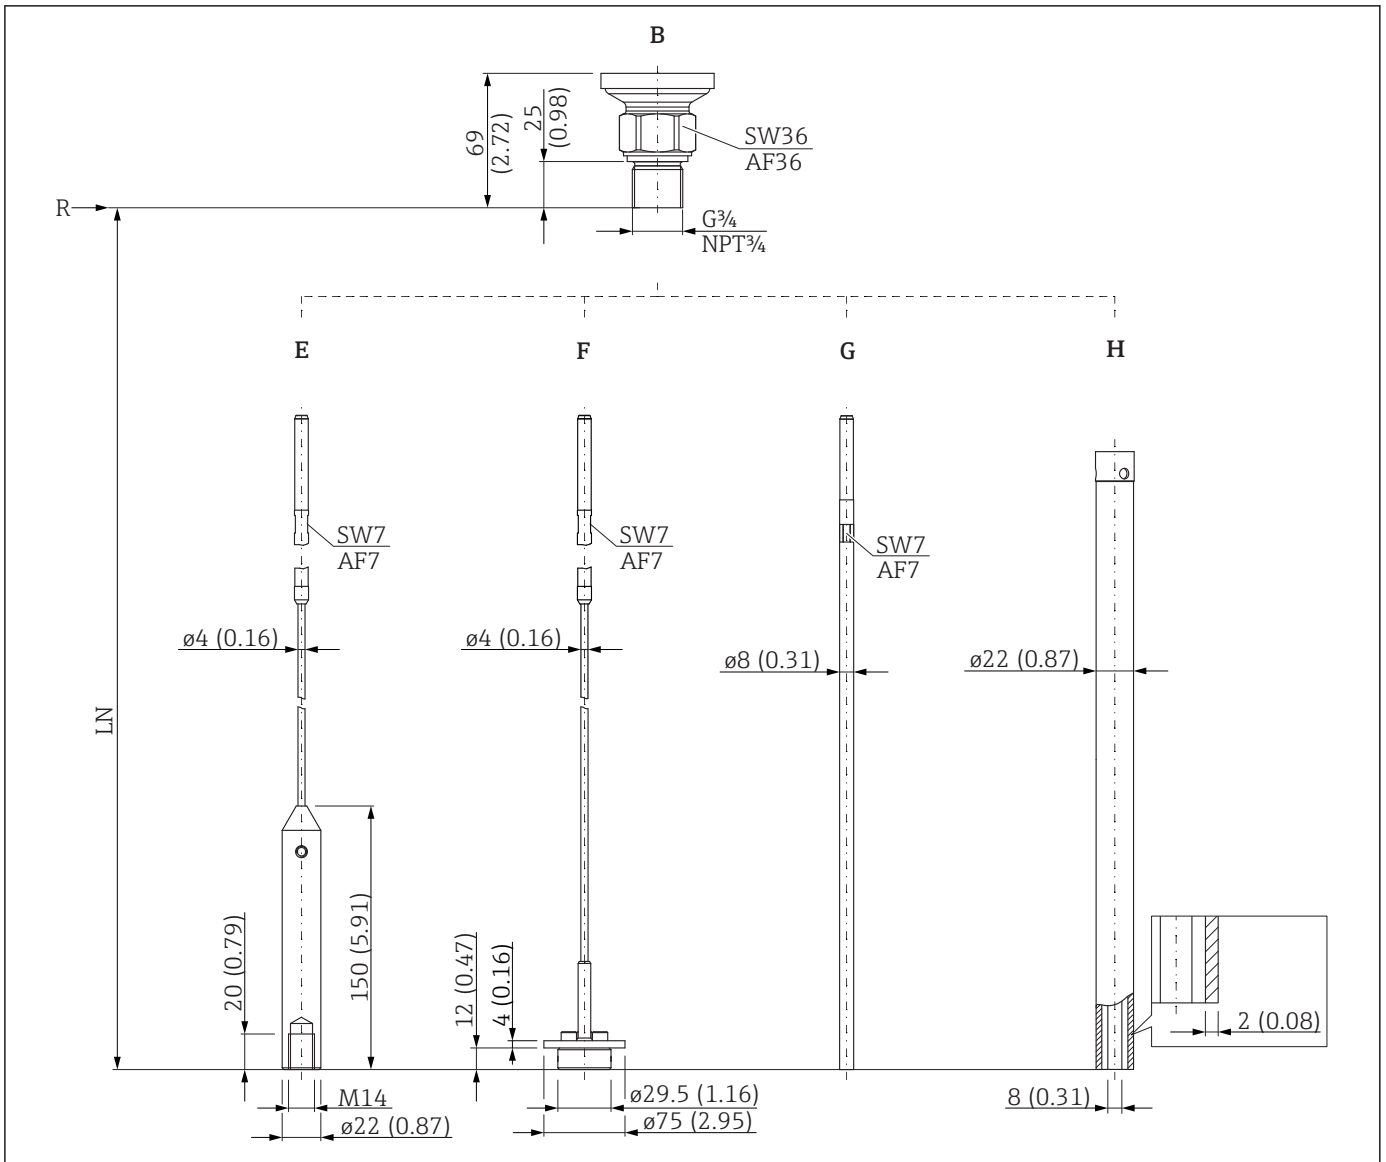


A0012645

30 FMP51: Process connection / probe; dimensions: mm (in). Unit of measurement mm (in)

- B Thread ISO G3/4 or ANSI MNPT3/4 (Feature 100)
- E Rope probe 4mm or 1/6" (Feature 060)
- F Rope probe 4 mm or 1/6"; centering disk optional (Features 060 and 610)
- G Rod probe 8mm or 1/3" (Feature 060)
- H Coax probe (Feature 060); with venting hole  $\varnothing$  approx. 6 mm (0.24 in)
- LN Length of probe
- R Reference point of the measurement

FMP51: Dimensions of process connection (G1½,NPT1½,flange) and probe

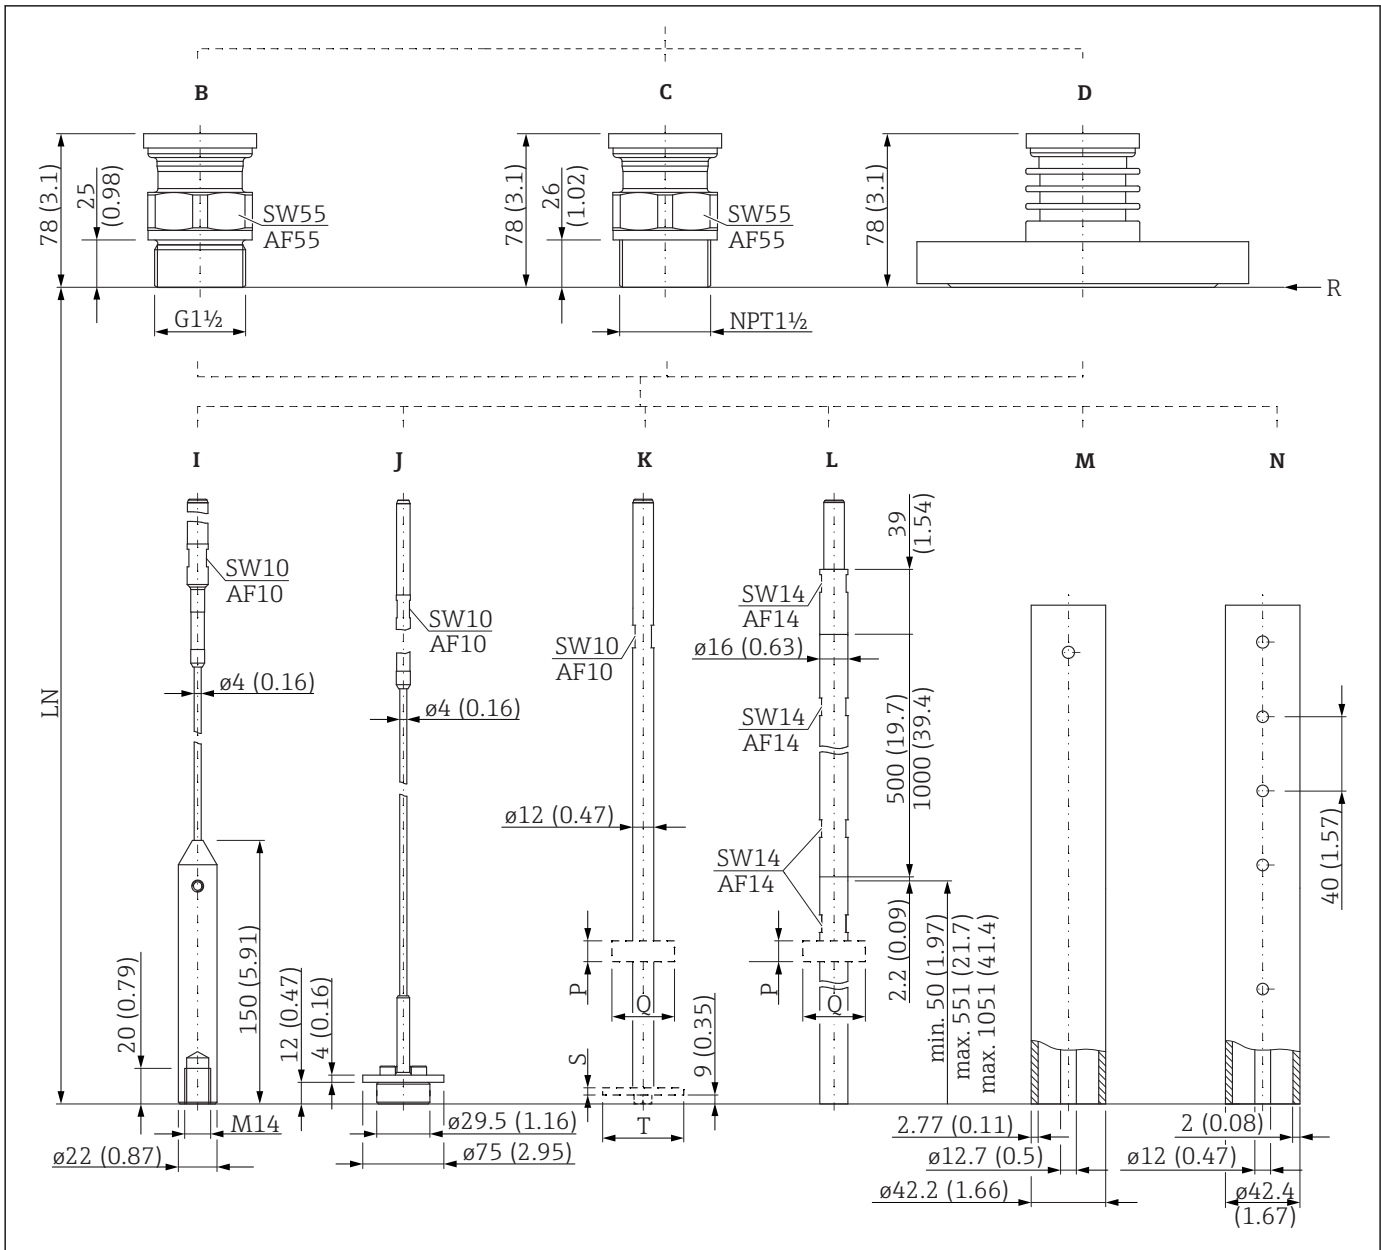

A0012756

31 FMP51: Process connection / probe; dimensions: mm (in). Unit of measurement mm (in)

- B Thread ISO228 G1-1/2 (Feature 100)
- C Thread ANSI MNPT1-1/2 (Feature 100)
- D Flange ANSI B16.5, EN1092-1, JIS B2220 (Feature 100)
- I Rope probe 4mm or 1/6" (Feature 060)
- J Rope probe 4mm or 1/6"; centering disk optional (Features 060 and 610)
- K Rod probe 12mm or 1/2"; centering disk optional, see table below (Features 060 and 610)
- L Rod probe 16 mm or 0.63in, 20" or 40" divisible; centering disk optional, see table below (Feature 060 and 610)
- M Coax probe; AlloyC (Feature 060); with venting hole Ø approx. 8 mm (0.3 in)
- N Coax probe; 316L (Feature 060); with venting holes Ø approx. 10 mm (0.4 in)
- LN Length of probe
- P Thickness of the centering star; table of values: see below
- Q Diameter of the centering star; table of values: see below
- R Reference point of the measurement
- S Thickness of the center washer or centering star; table of values: see below
- T Diameter of the center washer or centering star; table of values: see below


Center washer or centering star

Ordering feature 610 "Accessory mounted"	Meaning	Thickness	Diameter
OA	Rod center washer 316L; pipe diameter DN80/3" + DN100/4"	S = 4 mm (0.16 in)	T = 75 mm (2.95 in)
OB	Rod center washer 316L; pipe diameter DN50/2" + DN65/2-1/2"	S = 4 mm (0.16 in)	T = 45 mm (1.77 in)
OC	Rod center washer 316L; pipe diameter DN80/3" + DN100/4"	S = 4 mm (0.16 in)	T = 75 mm (2.95 in)
OD	Rod centering star PEEK; interface measurement; pipe diameter DN50/2" + DN100/4"	S = 7 mm (0.28 in)	T = 48 to 95 mm (1.9 to 3.7 in)
OE	Rod centering star PFA; interface measurement; pipe diameter DN40/1-1/2" + DN50/2"	P = 10 mm (0.39 in)	Q = 37 mm (1.46 in)

Note on AlloyC flanges

AlloyC flanges always have an additional thread, even if they are not used with a coax probe.


Affected options of ordering feature 100 "Process connection": AEM, AFM, AGM, AQM, ARM, ASM, ATM, CEM, CFM, CGM, CQM, CRM, CSM, CTM.

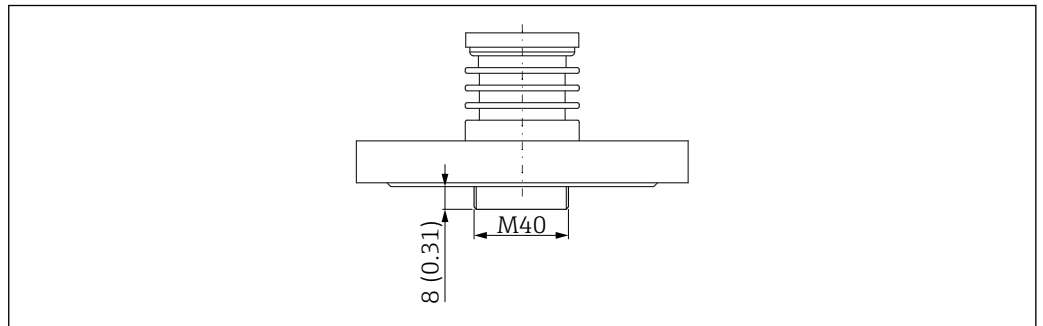

A0035223

32 Dimensions of AlloyC flanges; Dimensions: mm (in)

FMP52: Dimensions of process connection and probe

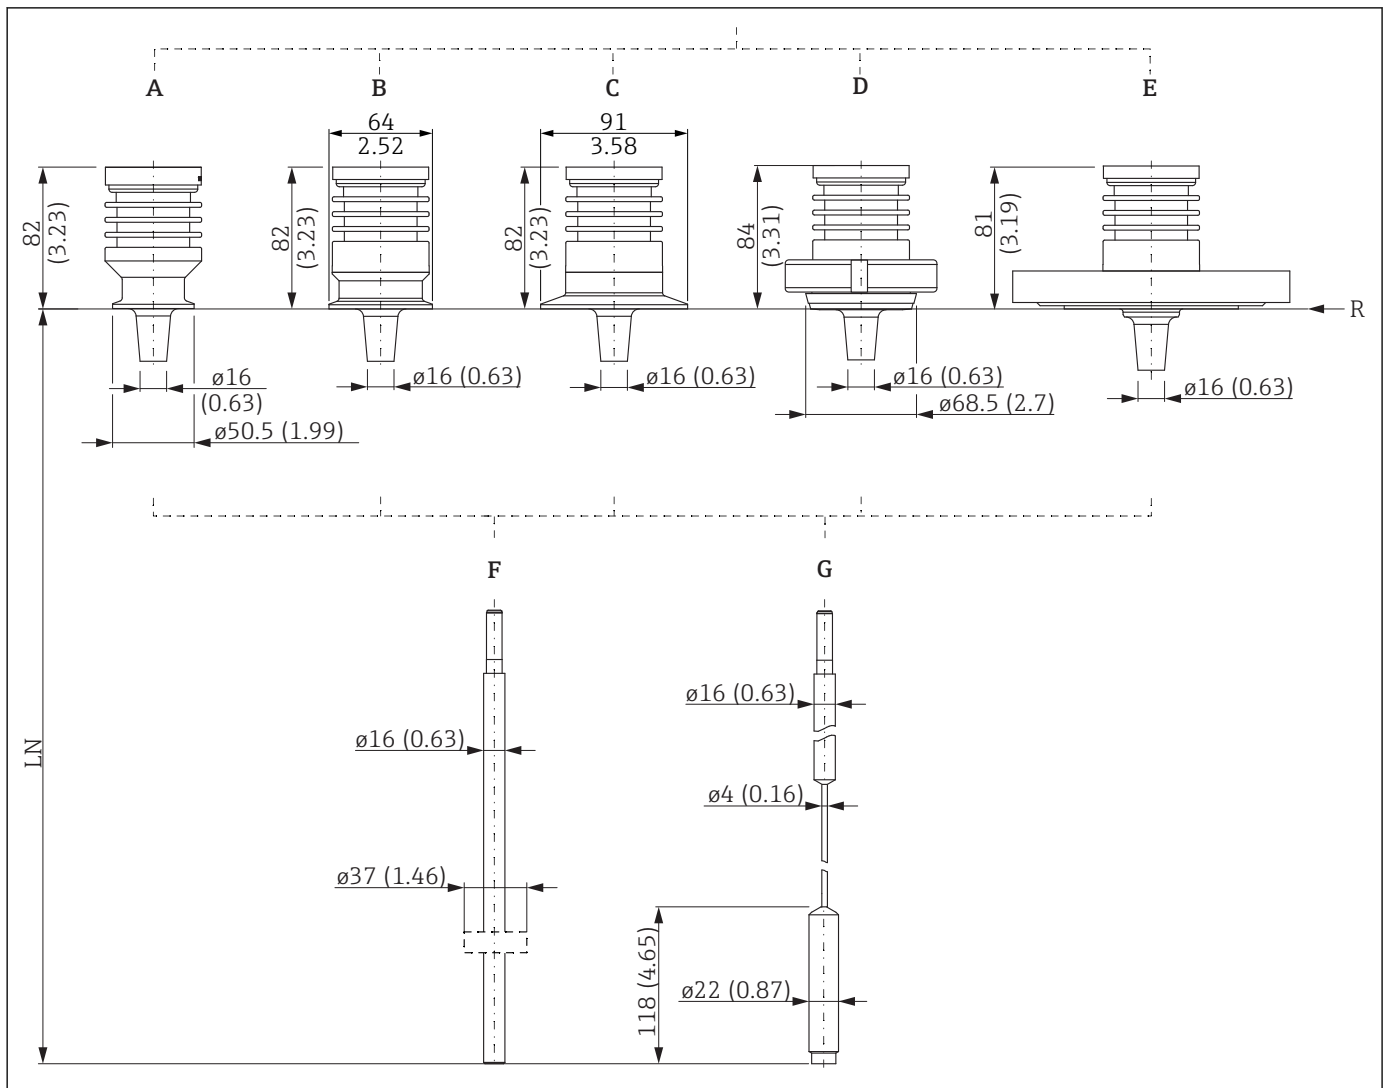


A0012757

33 FMP52: Process connection / probe; dimensions: mm (in). Unit of measurement mm (in)

- A Tri-Clamp 1-1/2" (Feature 100)
- B Tri-Clamp 2" (Feature 100)
- C Tri-Clamp 3" (Feature 100)
- D DIN 11851 (Dairy coupling) DN50 (Feature 100)
- E Flange ANSI B16.5, EN1092-1, JIS B2220 (Feature 100)
- F Rod probe 16mm or 0.63 in, PFA>316L (Feature 060); optionally with centering star (Feature 610)
- G Rope probe 4mm or 1/6", PFA>316 (Feature 060)
- LN Length of probe
- R Reference point of the measurement

FMP54: Dimensions of process connection and probe

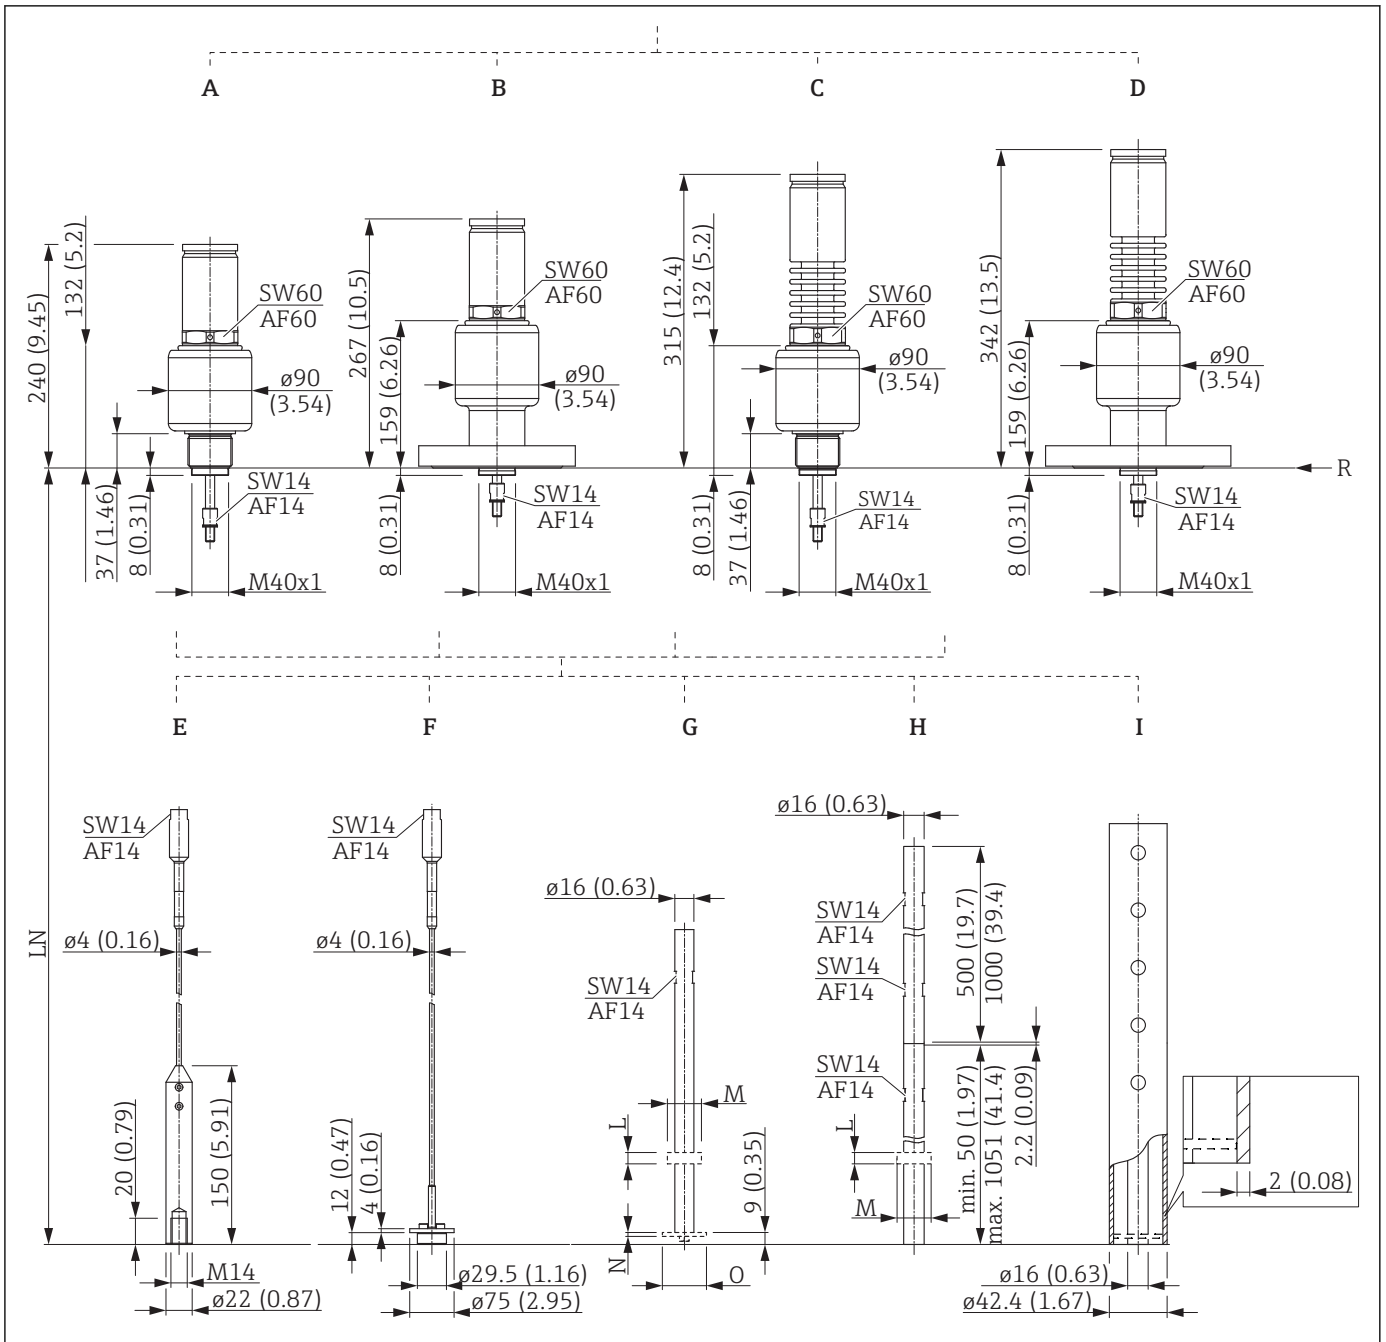

A0012778

34 FMP54: Process connection / probe; dimensions: mm (in). Unit of measurement mm (in)

- A Thread ISO228 G1-1/2 or ANSI MNPT1-1/2; XT 280 °C (Features 100 and 090)
- B Flange ANSI B16.5, EN1092-1, JIS B2220; XT 280 °C (Features 100 and 090)
- C Thread ISO228 G1-1/2 or ANSI MNPT1-1/2; HT 450 °C (Features 100 and 090)
- D Flange ANSI B16.5, EN1092-1, JIS B2220; HT 450°C (Features 100 and 090)
- E Rope probe 4mm or 1/6" (Feature 060)
- F Rope probe 4mm (1/6"), centering disk optional (Features 060 and 610)
- G Rod probe 16mm or 0.63in; centering disk optional, see table below (Features 060 and 610)
- H Rod probe 16mm or 0.63in; 20° or 40° divisible; centering disk optional, see table below (Feature 060 and 610)
- I Coax probe (Feature 060); with venting holes Ø approx. 10 mm (0.4 in); with centering disc for devices with the "Gas Phase Compensation" application package (ordering feature 540, options EF or EG)
- LN Length of probe
- L Thickness of the centering star; table of values: see below
- M Diameter of the centering star; table of values: see below

- N* Thickness of the center washer or centering star; table of values: see below  
*O* Diameter of the center washer or centering star; table of values: see below  
*R* Reference point of the measurement

## Center washer or centering star

Ordering feature 610 "Accessory mounted"	Meaning	Thickness	Diameter
OA	Rod center washer 316L; pipe diameter DN80/3" + DN100/4"	N = 4 mm (0.16 in)	O = 75 mm (2.95 in)
OB	Rod center washer 316L; pipe diameter DN50/2" + DN65/2-1/2"	N = 4 mm (0.16 in)	O = 45 mm (1.77 in)
OC	Rod center washer 316L; pipe diameter DN80/3" + DN100/4"	N = 4 mm (0.16 in)	O = 75 mm (2.95 in)
OD	Rod centering star PEEK; interface measurement; pipe diameter DN50/2" + DN100/4"	N = 7 mm (0.28 in)	O = 48 to 95 mm (1.9 to 3.7 in)
OE	Rod centering star PFA; interface measurement; pipe diameter DN40/1-1/2" + DN50/2"	L = 10 mm (0.39 in)	M = 37 mm (1.46 in)

**Tolerance of probe length**

Rod and coax probes				
Over [m (ft)]	–	1 (3,3)	3 (9,8)	6 (20)
Up to [m (ft)]	1 (3,3)	3 (9,8)	6 (20)	–
Admissible tolerance [mm (in)]	-5 (-0,2)	-10 (-0,39)	-20 (-0,79)	-30 (-1,18)

Rope probes				
Over [m (ft)]	–	1 (3,3)	3 (9,8)	6 (20)
Up to [m (ft)]	1 (3,3)	3 (9,8)	6 (20)	–
Admissible tolerance [mm (in)]	-10 (-0,39)	-20 (-0,79)	-30 (-1,18)	-40 (-1,57)

**Surface roughness of AlloyC-coated flanges**


Ra = 3.2 µm; lower surface roughness levels are available on request.  
 This value is valid for flanges with "AlloyC>316/316L"; see product structure, feature 100 "Process connection". For other flanges the surface roughness matches the corresponding flange standard.

**Shortening probes**

If necessary, probes can be shortened. When doing so, the following must be observed:


**Shortening rod probes**

Rod probes must be shortened if the distance to the container floor or outlet cone is less than 10 mm (0.4 in). The rods of a rod probe are shortened by sawing at the bottom end.

 Rod probes of FMP52 can **not** be shortened as they are coated.


**Shortening rope probes**

Rope probes must be shortened if the distance to the container floor or outlet cone is less than 150 mm (6 in).

 Rope probes of FMP52 can **not** be shortened as they are coated.

**Shortening coax probes**

Coax probes must be shortened if the distance to the container floor or outlet cone is less than 10 mm (0.4 in).

 Coax probes can be shortened max. 80 mm (3.2 in) from the end. They have centering units inside, which fix the rod centrally in the pipe. The centerings are held with borders on the rod. Shortening is possible up to approx. 10 mm (0.4 in) below the centering unit.

**Weight**

*Housing*

Part	Weight
Housing GT18 - stainless steel	approx. 4.5 kg
Housing GT19 - plastic	approx. 1.2 kg
Housing GT20 - aluminium	approx. 1.9 kg

*FMP51 with threaded connection G $\frac{3}{4}$  or NPT $\frac{3}{4}$*

Part	Weight	Part	Weight
Sensor	approx. 0.8 kg	Rod probe 8 mm	approx. 0.4 kg/m probe length
Rope probe 4 mm	approx. 0.1 kg/m probe length	Coax probe	approx. 1.2 kg/m probe length

*FMP51 with threaded connection G1 $\frac{1}{2}$ /NPT1 $\frac{1}{2}$  or flange*

Part	Weight	Part	Weight
Sensor	approx. 1.2 kg + weight of flange	Rod probe 16 mm	approx. 1.1 kg/m probe length
Rope probe 4 mm	approx. 0.1 kg/m probe length	Coax probe	approx. 3.0 kg/m probe length
Rod probe 12 mm	approx. 0.9 kg/m probe length		

*FMP52*


Part	Weight	Part	Weight
Sensor	approx. 1.2 kg + weight of flange	Rope probe 4 mm	approx. 0.5 kg/m probe length
		Rod probe 16 mm	approx. 1.1 kg/m probe length

*FMP54*

Part	Weight	Part	Weight
Sensor - version XT	approx. 6.7 kg + weight of flange	Rope probe 4 mm	approx. 0.1 kg/m probe length
Sensor - version HT	approx. 7.7 kg + weight of flange	Rod probe 16 mm	approx. 1.6 kg/m probe length
		Coax probe	approx. 3.5 kg/m probe length



**Materials: GT18 housing  
(stainless steel, corrosion-resistant)**

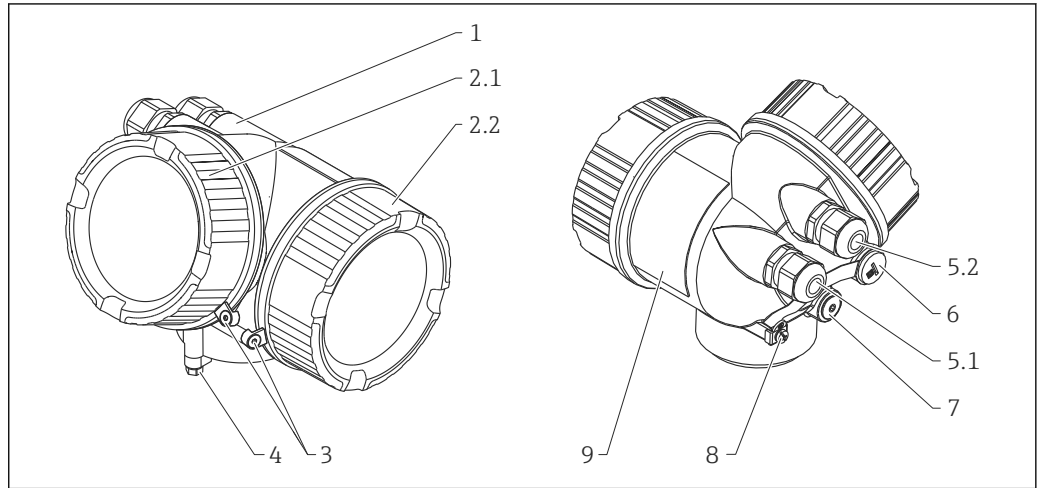


A0013788

No.	Part	Material
1	Housing	CF3M similar to 316L/1.4404
2.1	Cover of the electronics compartment	<ul style="list-style-type: none"> <li>▪ Cover: CF3M (similar to 316L/1.4404)</li> <li>▪ Window: glass</li> <li>▪ Cover seal: NBR</li> <li>▪ Seal of the window: NBR</li> <li>▪ Thread-coating: Graphite-based lubricant varnish</li> </ul>
2.2	Cover of the terminal compartment	<ul style="list-style-type: none"> <li>▪ Cover: CF3M (similar to 316L/1.4404)</li> <li>▪ Cover seal: NBR</li> <li>▪ Thread-coating: Graphite-based lubricant varnish</li> </ul>
3	Cover lock	<ul style="list-style-type: none"> <li>▪ Screw: A4</li> <li>▪ Clamp: 316L (1.4404)</li> </ul>
4	Lock at the housing neck	<ul style="list-style-type: none"> <li>▪ Screw: A4-70</li> <li>▪ Clamp: 316L (1.4404)</li> </ul>
5.1	Dummy plug, cable gland, adapter or plug (depending on the device version)	<ul style="list-style-type: none"> <li>▪ Dummy plug, depending on the device version:                             <ul style="list-style-type: none"> <li>- PE</li> <li>- PBT-GF</li> </ul> </li> <li>▪ Cable gland: 316L (1.4404) or nickel-plated brass</li> <li>▪ Adapter: 316L (1.4404/1.4435)</li> <li>▪ Seal: EPDM</li> <li>▪ M12 plug: Nickel-plated brass <sup>1)</sup></li> <li>▪ 7/8" plug: 316 (1.4401) <sup>2)</sup></li> </ul>
5.2	Dummy plug, cable gland or adapter (depending on the device version)	<ul style="list-style-type: none"> <li>▪ Dummy plug: 316L (1.4404)</li> <li>▪ Cable gland: 316L (1.4404) or nickel-plated brass</li> <li>▪ Adapter: 316L (1.4404/1.4435)</li> <li>▪ Seal: EPDM</li> </ul>
6	Dummy plug or M12 socket (depending on the device version)	<ul style="list-style-type: none"> <li>▪ Dummy plug: 316L (1.4404)</li> <li>▪ M12 socket: 316L (1.4404)</li> </ul>
7	Pressure relief stopper	316L (1.4404)
8	Ground terminal	<ul style="list-style-type: none"> <li>▪ Screw: A4</li> <li>▪ Spring washer: A4</li> <li>▪ Clamp: 316L (1.4404)</li> <li>▪ Holder: 316L (1.4404)</li> </ul>
9	Nameplate	<ul style="list-style-type: none"> <li>▪ Plate: 316L (1.4404)</li> <li>▪ Groove pin: A4 (1.4571)</li> </ul>

1) For the version with M12 plug the sealing material is Viton.

2) For the version with 7/8" plug, the sealing material is NBR.

**Materials: GT19 housing (plastic)**

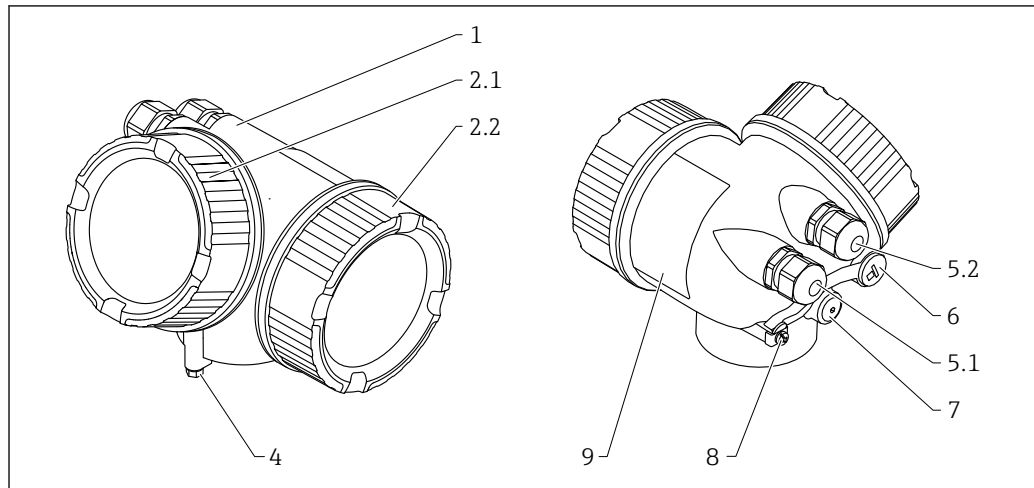


A0013788

No.	Part	Material
1	Housing	PBT
2.1	Cover of the electronics compartment	<ul style="list-style-type: none"> <li>■ Cover glass: PC</li> <li>■ Cover frame: PBT-PC</li> <li>■ Cover seal: EPDM</li> <li>■ Thread-coating: Graphite-based lubricant varnish</li> </ul>
2.2	Cover of the terminal compartment	<ul style="list-style-type: none"> <li>■ Cover: PBT</li> <li>■ Cover seal: EPDM</li> <li>■ Thread-coating: Graphite-based lubricant varnish</li> </ul>
4	Lock at the housing neck	<ul style="list-style-type: none"> <li>■ Screw: A4-70</li> <li>■ Clamp: 316L (1.4404)</li> </ul>
5.1	Dummy plug, cable gland, adapter or plug (depending on the device version)	<ul style="list-style-type: none"> <li>■ Dummy plug, depending on the device version:                             <ul style="list-style-type: none"> <li>- PE</li> <li>- PBT-GF</li> </ul> </li> <li>■ Cable gland, depending on the device version:                             <ul style="list-style-type: none"> <li>- Nickel-plated brass (CuZn)</li> <li>- PA</li> </ul> </li> <li>■ Adapter: 316L (1.4404/1.4435)</li> <li>■ Seal: EPDM</li> <li>■ M12 plug: Nickel-plated brass <sup>1)</sup></li> <li>■ 7/8" plug: 316 (1.4401) <sup>2)</sup></li> </ul>
5.2	Dummy plug, cable gland or adapter (depending on the device version)	<ul style="list-style-type: none"> <li>■ Dummy plug, depending on the device version:                             <ul style="list-style-type: none"> <li>- PE</li> <li>- PBT-GF</li> <li>- Nickel-plated steel</li> </ul> </li> <li>■ Cable gland, depending on the device version:                             <ul style="list-style-type: none"> <li>- Nickel-plated brass (CuZn)</li> <li>- PA</li> </ul> </li> <li>■ Adapter: 316L (1.4404/1.4435)</li> <li>■ Seal: EPDM</li> </ul>
6	Dummy plug or M12 socket (depending on the device version)	<ul style="list-style-type: none"> <li>■ Dummy plug: Nickel-plated brass (CuZn)</li> <li>■ M12 socket: Nickel-plated GD-Zn</li> </ul>
7	Pressure relief stopper	Nickel-plated brass (CuZn)
8	Ground terminal	<ul style="list-style-type: none"> <li>■ Screw: A2</li> <li>■ Spring washer: A4</li> <li>■ Clamp: 304 (1.4301)</li> <li>■ Holder: 304 (1.4301)</li> </ul>
9	Adhesive nameplate	Plastic

1) For the version with M12 plug the sealing material is Viton.  
 2) For the version with 7/8" plug, the sealing material is NBR.

**Materials: GT20 housing  
(die-cast aluminum, powder-coated)**

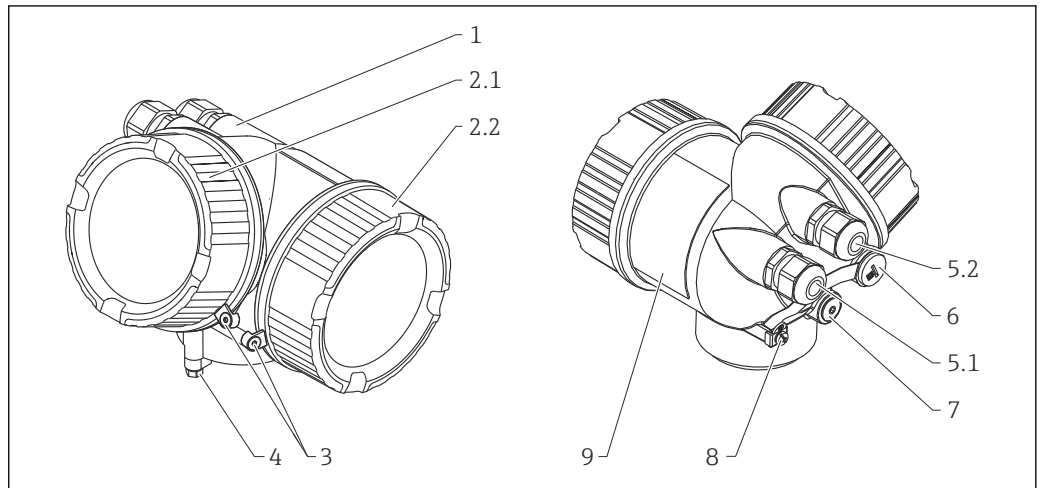

A0013788

Nr.	Part	Material
1	Housing, RAL 5012 (blue)	<ul style="list-style-type: none"> <li>▪ Housing: AlSi10Mg(&lt;0,1% Cu)</li> <li>▪ Coating: Polyester</li> </ul>
2.1	Cover of the electronics compartment; RAL 7035 (gray)	<ul style="list-style-type: none"> <li>▪ Cover: AlSi10Mg(&lt;0,1% Cu)</li> <li>▪ Window: Glass</li> <li>▪ Cover seal: NBR</li> <li>▪ Seal of the window: NBR</li> <li>▪ Thread-coating: Graphite-based lubricant varnish</li> </ul>
2.2	Cover of the terminal compartment; RAL 7035 (gray)	<ul style="list-style-type: none"> <li>▪ Cover: AlSi10Mg(&lt;0,1% Cu)</li> <li>▪ Cover seal: NBR</li> <li>▪ Thread-coating: Graphite-based lubricant varnish</li> </ul>
3	Cover lock	<ul style="list-style-type: none"> <li>▪ Screw: A4</li> <li>▪ Clamp: 316L (1.4404)</li> </ul>
4	Lock at the housing neck	<ul style="list-style-type: none"> <li>▪ Screw: A4-70</li> <li>▪ Clamp: 316L (1.4404)</li> </ul>
5.1	Dummy plug, cable gland, adapter or plug (depending on the device version)	<ul style="list-style-type: none"> <li>▪ Dummy plug, depending on the device version:                             <ul style="list-style-type: none"> <li>- PE</li> <li>- PBT-GF</li> </ul> </li> <li>▪ Cable gland, depending on the device version:                             <ul style="list-style-type: none"> <li>- Nickel-plated brass (CuZn)</li> <li>- PA</li> </ul> </li> <li>▪ Adapter: 316L (1.4404/1.4435)</li> <li>▪ Seal: EPDM</li> <li>▪ M12 plug: Nickel-plated brass<sup>1)</sup></li> <li>▪ 7/8" plug: 316 (1.4401)<sup>2)</sup></li> </ul>
5.2	Dummy plug, cable gland or adapter (depending on the device version)	<ul style="list-style-type: none"> <li>▪ Dummy plug, depending on the device version:                             <ul style="list-style-type: none"> <li>- PE</li> <li>- PBT-GF</li> <li>- Nickel-plated steel</li> </ul> </li> <li>▪ Cable gland, depending on the device version:                             <ul style="list-style-type: none"> <li>- Nickel-plated brass (CuZn)</li> <li>- PA</li> </ul> </li> <li>▪ Adapter: 316L (1.4404/1.4435)</li> <li>▪ Seal: EPDM</li> </ul>
6	Dummy plug or M12 socket (depending on the device version)	<ul style="list-style-type: none"> <li>▪ Dummy plug : Nickel-plated brass (CuZn)</li> <li>▪ M12 socket: Nickel-plated GD-Zn</li> </ul>
7	Pressure relief stopper	Nickel-plated brass (CuZn)






Nr.	Part	Material
8	Ground terminal	<ul style="list-style-type: none"><li>▪ Screw: A2</li><li>▪ Spring washer: A2</li><li>▪ Clamp: 304 (1.4301)</li><li>▪ Holder: 304 (1.4301)</li></ul>
9	Adhesive nameplate	Plastic






- 1) For the version with M12 plug the sealing material is Viton.
- 2) For the version with 7/8" plug, the sealing material is NBR.

**Materials: Process connection**







Endress+Hauser supplies DIN/EN flanges and threaded process connections made of stainless steel according to AISI 316L (DIN/EN material number 1.4404 or 1.4435). With regard to their temperature stability properties, the materials 1.4404 and 1.4435 are grouped under 13EO in EN 1092-1:2007 Tab. G.3.1-1. The chemical composition of the two materials can be identical.

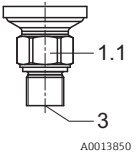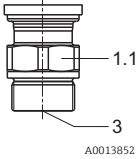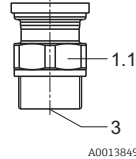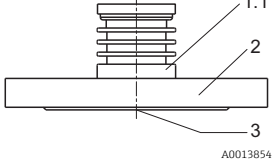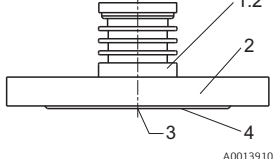Levelflex FMP51						
Threaded connection			Flange		No.	Material
$G\frac{3}{4}$ , NPT $\frac{3}{4}$	$G1\frac{1}{2}$	NPT1 $\frac{1}{2}$	DN40...DN200	DN40...DN100		
					1.1	316L (1.4404)
					1.2	Alloy C22 (2.4602)
					2	ASME: 316/316L EN: 316L (1.4404) JIS: 316L (1.4435)
					3	Ceramic Al <sub>2</sub> O <sub>3</sub> 99.7 %
					4	Cladding: Alloy C22 (2.4602)

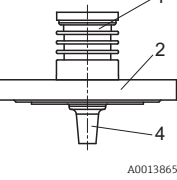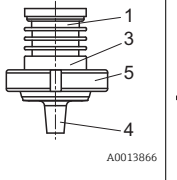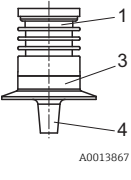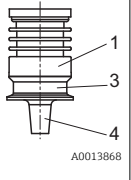
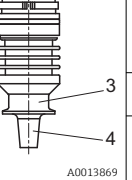
Levelflex FMP52							
Flange	Dairy coupling	Tri-Clamp			No.	Material	Approval
EN/ASME/JIS	DN50 (DIN 11851)	3"	2"	1 1/2"			
					1	316L (1.4404)	
					2	ASME: 316/316L EN: 316L (1.4404) JIS: 316L (1.4435)	
					3	316L (1.4404)	
					4	Coating 2 mm (0.08 in): PTFE (Dyneon TFM1600)	USP Cl. VI <sup>1)</sup>
					5	304L (1.4307)	






1) Plastic parts in contact with process have been tested according to USP <88> Class VI-70°C.

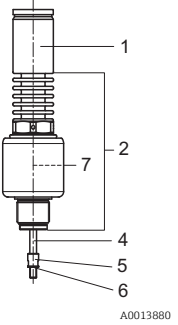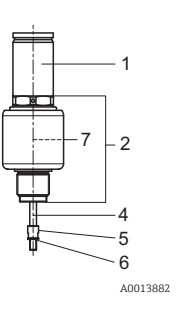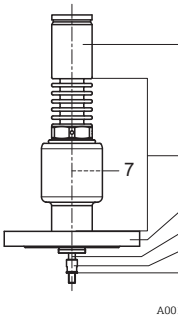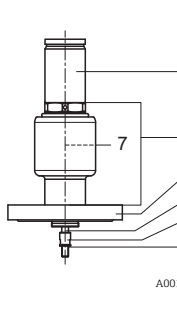Levelflex FMP54					
Threaded connection $G1\frac{1}{2}$ , NPT1 $\frac{1}{2}$		Flange		No.	Material
HT version	XT version	HT version	XT version		
				1	316L (1.4404)
				2	316L (1.4404)
				3	ASME: 316/316L EN: 316L (1.4404) JIS: 316L (1.4435)
				4	Alloy C22 (2.4602)
				5	316L (1.4404)
				6	Nordlock washer: 1.4547
				7	Ceramic Al <sub>2</sub> O <sub>3</sub> 99.7 %, pure graphite

Levelflex FMP51							No.	Material
Rope probe		Rod probe		Coax probe				
$\phi$ 4 mm (1/6")	$\phi$ 4 mm (1/6") with centering disk	$\phi$ 8 mm (1/3")	$\phi$ 12.7 mm (1/2") AlloyC	Thread G3/4	Thread G1-1/2 AlloyC	Thread G1-1/2 316L		
							1.1	316L (1.4404)
							1.2	Alloy C22 (2.4602)
							2	316 (1.4401)
							3	316L (1.4404)
							4	Set screw: A4-70
							5	Screw for tightening: A2-70
							6	Socket cap screw: A4-80
							7	Disk: 316L (1.4404)
							8	Set screw: A4-70
							9.1	Rod: 316L (1.4404)
							9.2	Alloy C22 (2.4602)
							10	Centering star: PFA


Levelflex FMP51			
Rod probe		No.	Material
$\phi$ 12 mm (1/2") 316L	$\phi$ 16 mm (2/3") divisible		
		1	316L (1.4404)
		3	Connecting bolt: Alloy C22 (2.4602) Nordlock washer: 1.4547
		11	Hexagon head screw: A4-70 Nordlock washer: 1.4547
		12	Centering star, PEEK Center washer, 316L (1.4404)
		13	Center washer, PFA

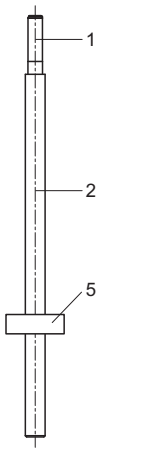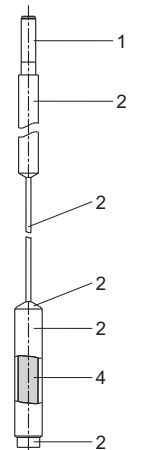Levelflex FMP52			
Rod probe $\phi$ 16 mm (2/3") coated	Rope probe $\phi$ 4 mm (1/6") coated	No.	Material
 <p>A0013870</p>	 <p>A0013871</p>	1	316L (1.4404)
		2	Coating 2 mm (0.08 in): PFA (Daikin PFA AP230)
		3	Rope: 316 (1.4401) Coating 0.75mm (0.03 in): PFA (Daikin PFA AP230)
		4	Core: 316L (1.4435)
		5	PFA (Daikin PFA AP230), centering star

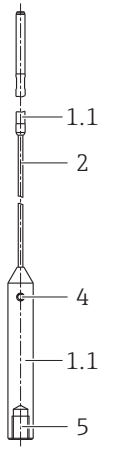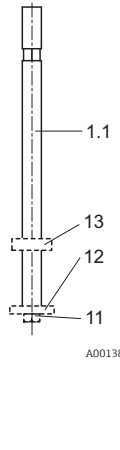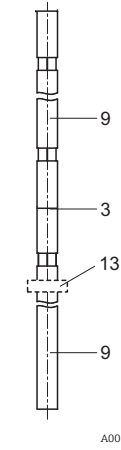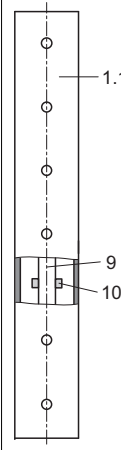Levelflex FMP54						
Rope probe $\phi$ 4 mm (1/6")		Rod probe $\phi$ 16 mm (2/3") with centering disk		Coax probe	No.	Material
$\phi$ 4 mm (1/6")	$\phi$ 4 mm (1/6") with centering disk	$\phi$ 16 mm (2/3") with centering disk	$\phi$ 16 mm (2/3") divisible			
 <p>A0031287</p>	 <p>A0013855</p>	 <p>A0013885</p>	 <p>A0013886</p>	 <p>A0013864</p>	1.1	316L (1.4404) <sup>1)</sup>
					2	316 (1.4401)
					3	Connecting bolt: Alloy C22 (2.4602) Nordlock washer: 1.4547
					4	Set screw: A4-70
					5	Screw for tightening: A2-70
					6	Socket cap screw: A4-80
					7	Disk: 316L (1.4404)
					8	Set screw: A4-70
					9	Rod: 316L (1.4404)
					10	Centering star: ceramic Al <sub>2</sub> O <sub>3</sub> 99.7 %
					11	Hexagon head screw: A4-70 Nordlock washer: 1.4547
					12	Centering star, PEEK Center washer, 316L (1.4404)
					13	Centering star, PFA

1) For probes with gas phase compensation this is also the material of the reference rod.

Materials: Mounting bracket

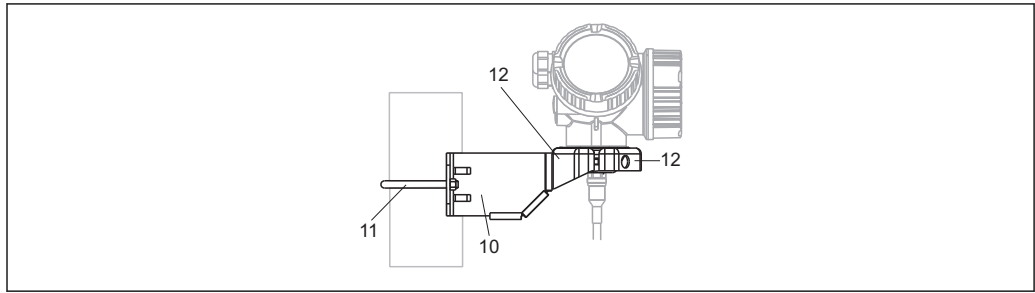


A0015143

Mounting bracket for version "Sensor remote"		
Position	Part	Material
10	Bracket	316L (1.4404)
11	Bracket	316Ti (1.4571)
	Screw/nuts	A4-70
	Distance sleeves	316Ti (1.4571) or 316L (1.4404)
12	Half-shells	316L (1.4404)




**Materials: Adapter and cable for remote sensor**

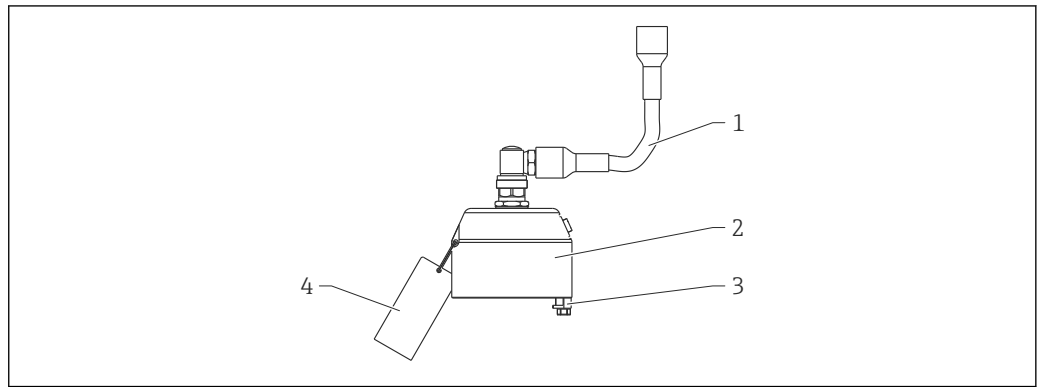

A0021722

Adapter and cable for version "Sensor remote"		
Position	Part	Material
1	Cable	FRNC
2	Sensor adapter	304 (1.4301)
3	Clamp	316L (1.4404)
	Screw	A4-70
4	Loop	316 (1.4401)
	Crimp sleeve	Aluminum
	Nameplate	304 (1.4301)

**Materials: Weather protection cover**

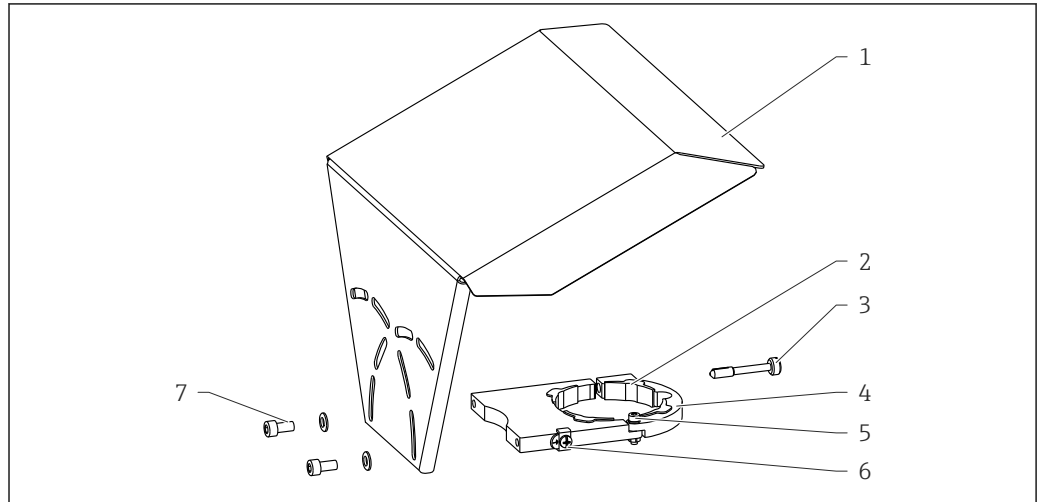

A0015473

No	Part: Material
1	Protection cover: 316L (1.4404)
2	Molded rubber part (4x): EPDM
3	Clamping screw: 316L (1.4404) + carbon fibre
4	Bracket: 316L (1.4404)
5	<ul style="list-style-type: none"> <li>▪ Cheese head screw: A4-70</li> <li>▪ Nut: A4</li> <li>▪ Spring washer: A4</li> </ul>
6	Ground terminal <ul style="list-style-type: none"> <li>▪ Screw: A4</li> <li>▪ Spring washer: A4</li> <li>▪ Clamp: 316L (1.4404)</li> <li>▪ Holder: 316L (1.4404)</li> </ul>
7	<ul style="list-style-type: none"> <li>▪ Washer: A4</li> <li>▪ Cheese head screw: A4-70</li> </ul>

## Operability

### Operating concept

#### Operator-oriented menu structure for user-specific tasks

- Commissioning
- Operation
- Diagnostics
- Expert level

#### Operating languages

- English
- Deutsch
- Français
- Español
- Italiano
- Nederlands
- Portuguesa
- Polski
- русский язык (Russian)
- Svenska
- Türkçe
- 中文 (Chinese)
- 日本語 (Japanese)
- 한국어 (Korean)
- Bahasa Indonesia
- tiếng Việt (Vietnamese)
- čeština (Czech)



Feature 500 of the product structure determines which of these languages is preset on delivery.

#### Quick and save commissioning

- Interactive wizard with graphical interface for easy commissioning via FieldCare/DeviceCare
- Menu guidance with brief explanations of the individual parameter functions
- Standardized operation at the device and in the operating tools



#### Integrated data storage device (HistoROM)

- Enables transfer of configuration when changing electronic modules
- Records up to 100 event messages in the device
- Records up to 1000 measured values in the device
- Saves the signal curve on commissioning which can later be used as a reference.


#### Efficient diagnostics increase measurement reliability

- Remedy information is integrated in plain text
- Diverse simulation options and line recorder functions

**Local operation**
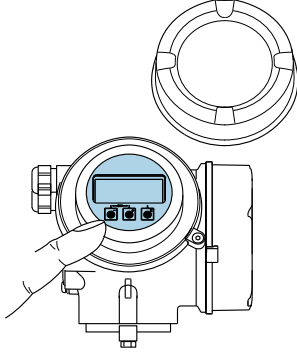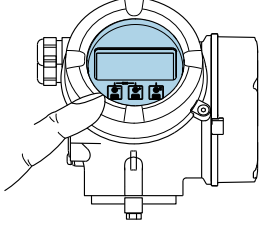
<b>Operation with</b>	<i>Pushbuttons</i>	<i>Touch Control</i>
<b>Order code for "Display; Operation"</b>	Option <b>C</b> "SD02"	Option <b>E</b> "SD03"
		
<b>Display elements</b>	4-line display	4-line display white background lighting; switches to red in event of device error
	Format for displaying measured variables and status variables can be individually configured	
	Permitted ambient temperature for the display: -20 to +70 °C (-4 to +158 °F) The readability of the display may be impaired at temperatures outside the temperature range.	
<b>Operating elements</b>	local operation with 3 push buttons (☐, ☐, ☐)	external operation via touch control; 3 optical keys: ☐, ☐, ☐
	Operating elements also accessible in various hazardous areas	
<b>Additional functionality</b>	Data backup function The device configuration can be saved in the display module.	
	Data comparison function The device configuration saved in the display module can be compared to the current device configuration.	
	Data transfer function The transmitter configuration can be transmitted to another device using the display module.	

**Operation with remote display and operating module FHX50**

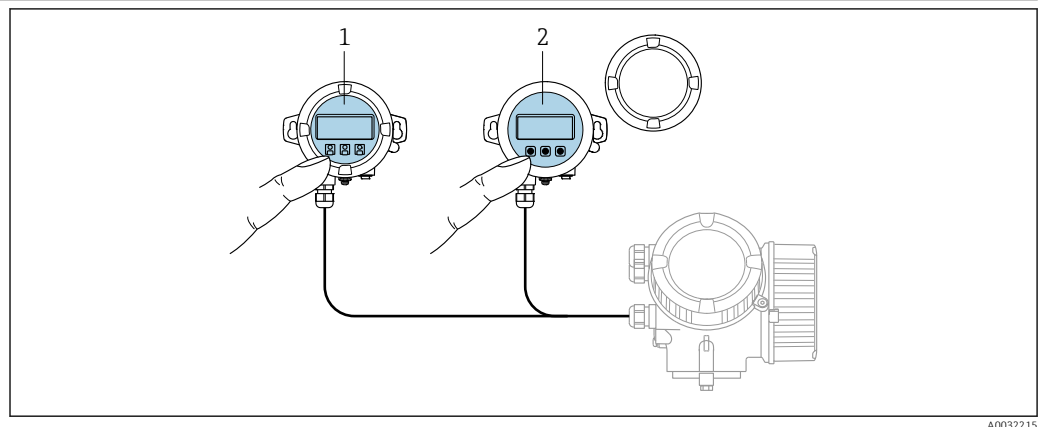


☐ 35 FHX50 operating options

- 1 Housing of the remote display and operating module FHX50
- 2 Display and operating module SD02, push buttons; cover must be removed
- 3 Display and operating module SD03, optical keys; can be operated through the glass of the cover

Remote operation

Via HART protocol

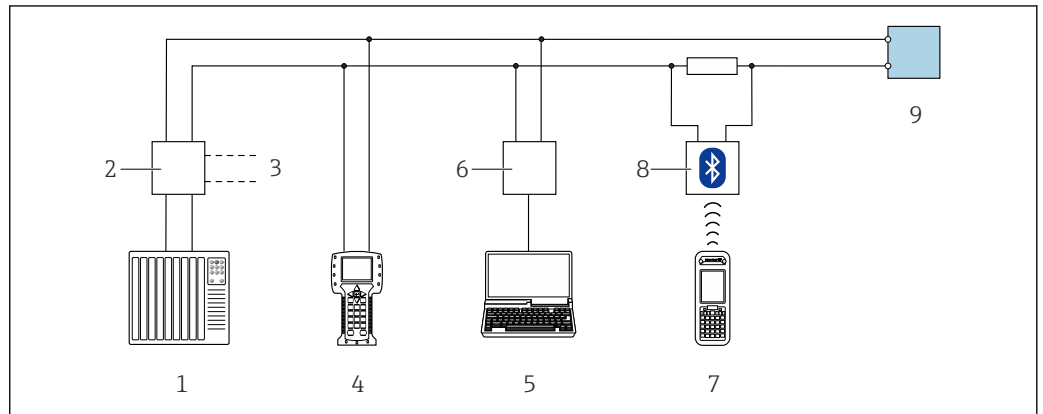


A0028746

36 Options for remote operation via HART protocol

- 1 PLC (programmable logic controller)
- 2 Transmitter power supply unit, e.g. RN22 1N (with communication resistor)
- 3 Connection for Commubox FXA191, FXA195 and Field Communicator 375, 475
- 4 Field Communicator 475
- 5 Computer with operating tool (e.g. DeviceCare/FieldCare , AMS Device Manager, SIMATIC PDM)
- 6 Commubox FXA191 (RS232) or FXA195 (USB)
- 7 Field Xpert SFX350/SFX370
- 8 VIATOR Bluetooth modem with connecting cable
- 9 Transmitter


Via PROFIBUS PA protocol

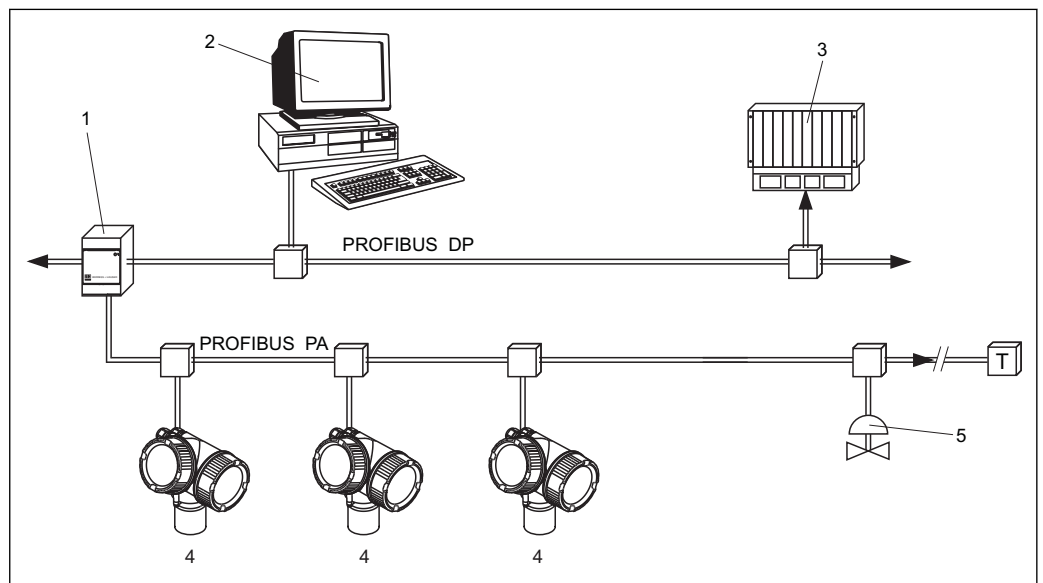

A0015775

- 1 Segment coupler
- 2 Computer with Profiboard/Proficard and operating tool (e.g. DeviceCare/FieldCare)
- 3 PLC (Programmable Logic Controller)
- 4 Transmitter
- 5 Additional functions (valves etc.)

Via FOUNDATION Fieldbus

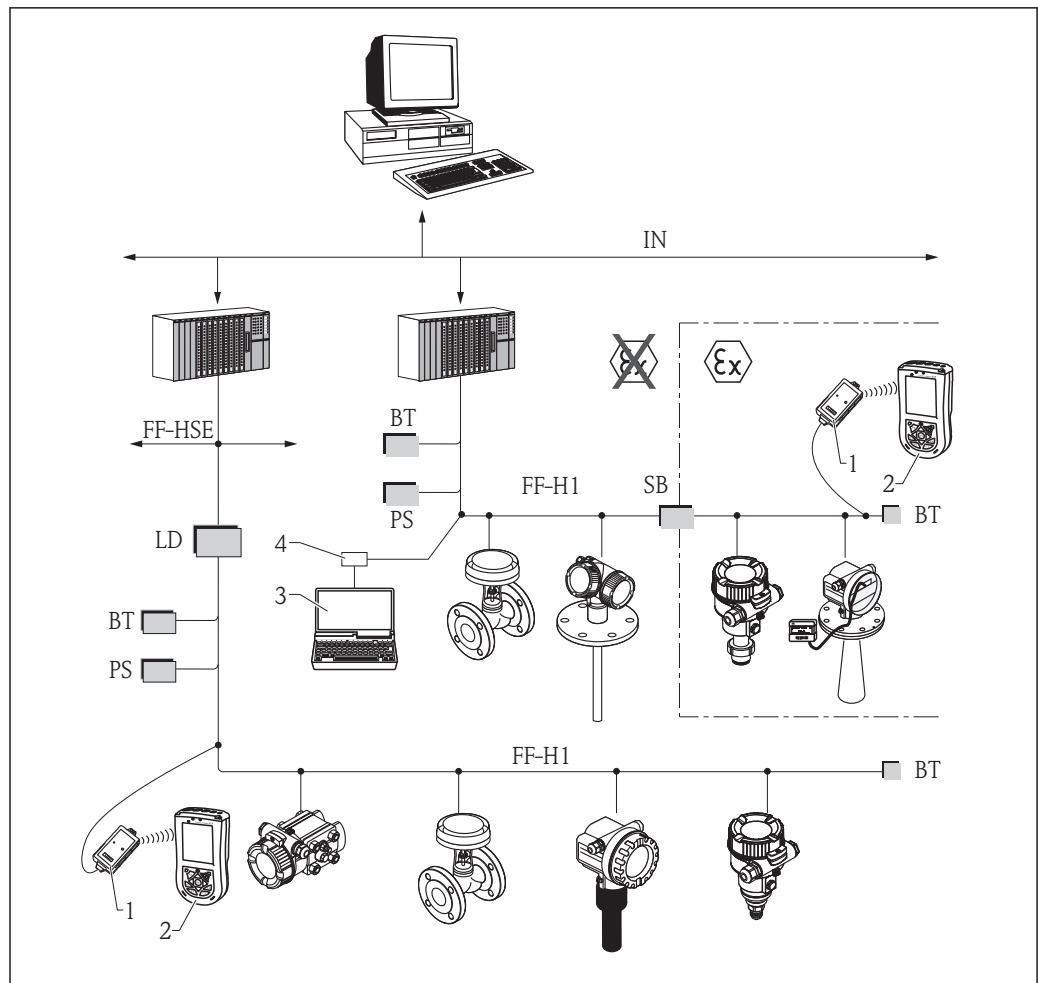


A0017188

37 FOUNDATION Fieldbus system architecture with associated components

- 1 FFblue Bluetooth modem
- 2 Field Xpert SFX350/SFX370
- 3 DeviceCare/FieldCare
- 4 NI-FF interface card

IN	Industrial network
FF-HSE	High Speed Ethernet
FF-H1	FOUNDATION Fieldbus-H1
LD	Linking Device FF-HSE/FF-H1
PS	Bus Power Supply
SB	Safety Barrier
BT	Bus Terminator

**Via service interface (CDI)**

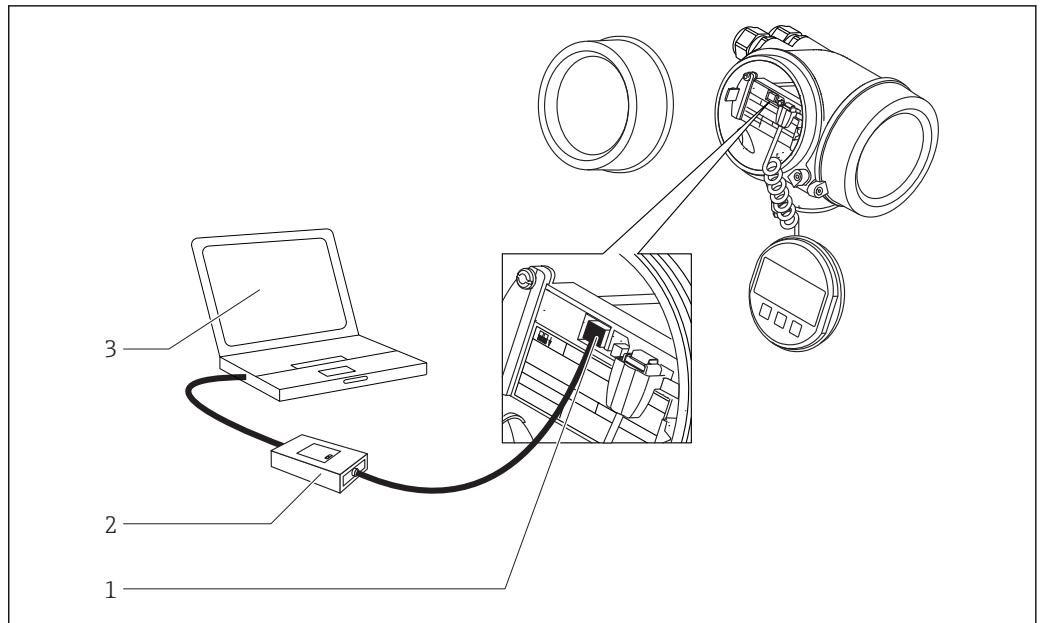


A0032466

- 1 Service interface (CDI) of the measuring device (= Endress+Hauser Common Data Interface)
- 2 Commubox FXA291
- 3 Computer with DeviceCare/FieldCare operating tool

**Integration in tank gauging system**

The Endress+Hauser Tank Side Monitor NRF590 provides integrated communications for sites with multiple tanks, each with one or more sensors on the tank, such as radar, spot or average temperature, capacitive probe for water detection and/or pressure sensors. Multiple protocols out of the Tank Side Monitor guarantee connectivity to nearly any of the existing industry standard tank gauging protocols. Optional connectivity of analog 4...20 mA sensors, digital I/O and analog output simplify full tank sensor integration. Use of the proven concept of the intrinsically safe HART bus for all on-tank sensors yields extremely low wiring costs, while at the same time providing maximum safety, reliability and data availability.

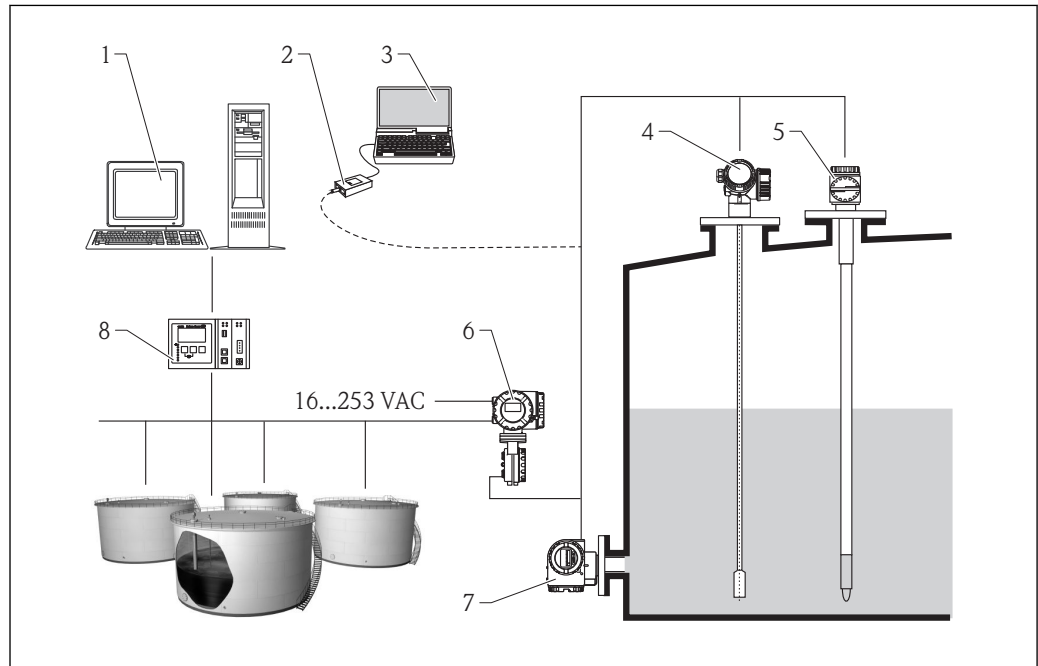

A0016590

38 The complete measuring system consists of:

- 1 Tankvision workstation
- 2 Commubox FXA195 (USB) - optional
- 3 Computer with operating tool (ControlCare) - optional
- 4 Level measuring device
- 5 Temperature measuring device
- 6 Tank Side Monitor NRF590
- 7 Pressure measuring device
- 8 Tankvision Tank Scanner NXA820



---

## **SupplyCare inventory management software**

SupplyCare is a web-based operating program for coordinating the flow of material and information along the supply chain. SupplyCare provides a comprehensive overview of the levels of geographically distributed tanks and silos, for instance, providing complete transparency over the current inventory situation, regardless of time and location.

Based on the measuring and transmission technology installed onsite, the current inventory data are collected and sent to SupplyCare. Critical levels are clearly indicated and calculated forecasts provide additional security for material requirements planning.

The main functions of SupplyCare:

### **Inventory visualization**

SupplyCare determines the inventory levels in tanks and silos at regular intervals. It displays current and historical inventory data and calculated forecasts of future demand. The overview page can be configured to suit the user's preferences.

### **Master data management**

With SupplyCare you can create and manage the master data for locations, companies, tanks, products and users, as well as user authorization.

### **Report Configurator**

The Report Configurator can be used to create personalized reports quickly and easily. The reports can be saved in a variety of formats, such as Excel, PDF, CSV and XML. The reports can be transmitted in many ways, such as by http, ftp or e-mail.

### **Event management**

Events, such as when levels drop below the safety stock level or plan points, are indicated by the software. In addition, SupplyCare can also notify pre-defined users by e-mail.

### **Alarms**

If technical problems occur, e.g. connection issues, alarms are triggered and alarm e-mails are sent to the System Administrator and the Local System Administrator.

### **Delivery planning**

The integrated delivery planning function automatically generates an order proposal if a pre-set minimum inventory level is undershot. Scheduled deliveries and disposals are monitored continuously by SupplyCare. SupplyCare notifies the user if scheduled deliveries and disposals are not going to be met as planned.

### **Analysis**

In the Analysis module, the most important indicators for the inflow and outflow of the individual tanks are calculated and displayed as data and charts. Key indicators of material management are automatically calculated and form the basis for optimizing the delivery and storage process.

### **Geographical visualization**


All the tanks and the tank inventories are represented graphically on a map (based on Google Maps). The tanks and inventory situations can be filtered by tank group, product, supplier or location.

### **Multi-language support**

The multi-language user interface supports 9 languages, thereby enabling global collaboration on a single platform. The language and settings are recognized automatically using the browser settings.

### **SupplyCare Enterprise**

SupplyCare Enterprise runs by default as a service under Microsoft Windows on an application server in an Apache Tomcat environment. The operators and administrators operate the application via a Web browser from their workstations.

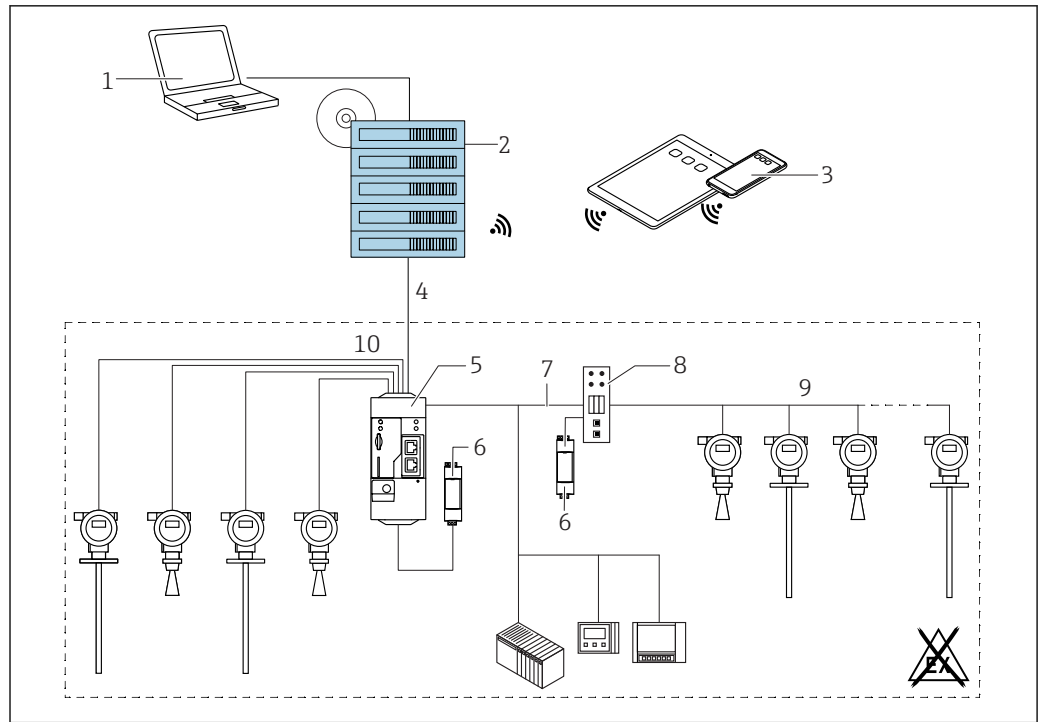


39 Example of inventory management platform with SupplyCare Enterprise SCE30B

- 1 SupplyCare Enterprise (via Web browser)
- 2 SupplyCare Enterprise installation
- 3 SupplyCare Enterprise on mobile devices (via Web browser)
- 4 Ethernet/WLAN/UMTS
- 5 Fieldgate FXA42
- 6 Power supply 24 V DC
- 7 Modbus TCP via Ethernet as server/client
- 8 Converter from Modbus to HART Multidrop
- 9 HART Multidrop
- 10 4 x 4 to 20 mA analog input (2-wire/4-wire)

### Cloud-based application: SupplyCare Hosting

SupplyCare Hosting is offered as a hosting service (software as a service). Here, the software is installed within the Endress+Hauser IT infrastructure and made available to the user in the Endress+Hauser portal.

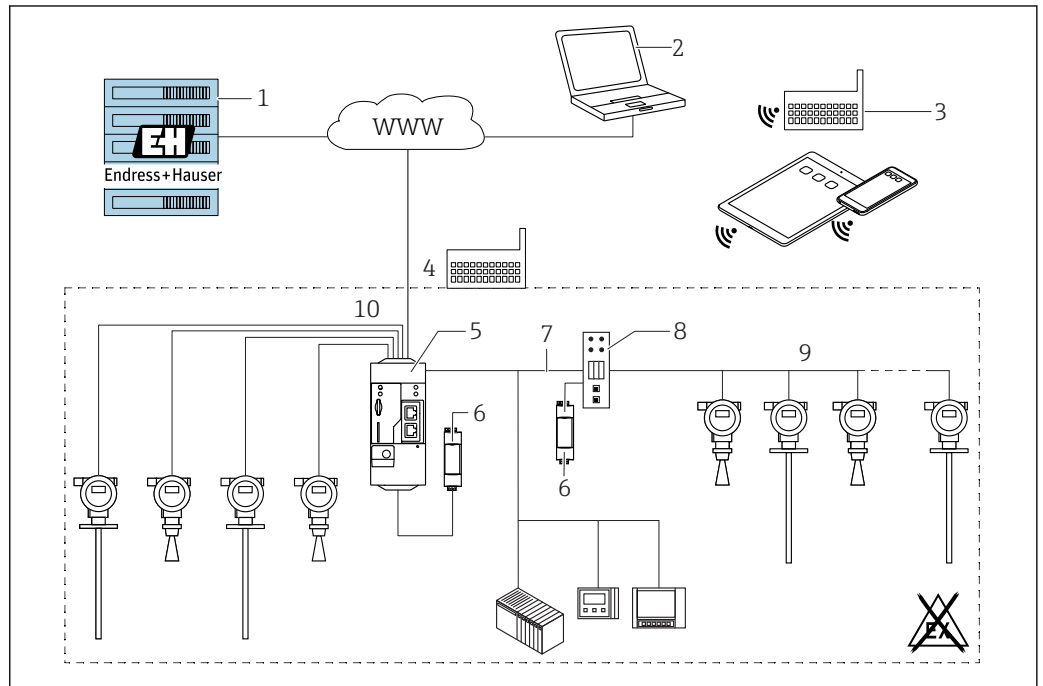

40 Example of inventory management platform with SupplyCare Hosting SCH30

- 1 SupplyCare Hosting installation in Endress+Hauser data center
- 2 PC workstation with Internet connection
- 3 Warehouse locations with Internet connection via 2G/3G with FXA42 or FXA30
- 4 Warehouse locations with Internet connection with FXA42
- 5 Fieldgate FXA42
- 6 Power supply 24 V DC
- 7 Modbus TCP via Ethernet as server/client
- 8 Converter from Modbus to HART Multidrop
- 9 HART Multidrop
- 10 4 x 4 to 20 mA analog input (2-wire/4-wire)

With SupplyCare Hosting, users do not need to make the initial software purchase or install and run the IT infrastructure needed. Endress+Hauser constantly update SupplyCare Hosting and enhance the capability of the software in conjunction with the customer. The hosted version of SupplyCare is thus always up-to-date and can be customized to meet different customer requirements. Other services are also offered in addition to the IT infrastructure and the software that is installed in a secure, redundant Endress+Hauser data center. These services include defined availability of the global Endress+Hauser Service and Support Organization and defined response times in a service event.

## Certificates and approvals

 Currently available certificates and approvals can be called up via the product configurator.

**CE mark** The measuring system meets the legal requirements of the applicable EC guidelines. These are listed in the corresponding EC Declaration of Conformity together with the standards applied.  
Endress+Hauser confirms successful testing of the device by affixing to it the CE mark.



**RoHS** The measuring system complies with the substance restrictions of the Restriction on Hazardous Substances Directive 2011/65/EU (RoHS 2).

**RCM-Tick marking** The supplied product or measuring system meets the ACMA (Australian Communications and Media Authority) requirements for network integrity, interoperability, performance characteristics as well as health and safety regulations. Here, especially the regulatory arrangements for electromagnetic compatibility are met. The products are labelled with the RCM- Tick marking on the name plate.



A0029561

**Ex approval** The devices are certified for use in hazardous areas and the relevant safety instructions are provided in the separate "Safety Instructions" (XA) document. Reference is made to this document on the nameplate.

 The separate documentation "Safety Instructions" (XA) containing all the relevant explosion protection data is available from your Endress+Hauser Sales Center. Correlation of documentations to the device →  134.

**Dual seal according to ANSI/ISA 12.27.01** The devices have been designed according to ANSI/ISA 12.27.01 as dual seal devices, allowing the user to waive the use and save the cost of installing external secondary process seals in the conduit as required by the process sealing sections of ANSI/NFPA 70 (NEC) and CSA 22.1 (CEC) These instruments comply with the North-American installation practice and provide a very safe and cost-saving installation for pressurized applications with hazardous fluids.

Further information can be found in the Safety Instructions (XA) of the relevant devices.




**Functional Safety** Used for level monitoring (MIN, MAX, range) up to SIL 3 (homogeneous redundancy), independently assessed by TÜV Rheinland as per IEC 61508. Other information see documentation SD00326F: "Functional Safety Manual".

**Overfill prevention** **WHG**  
DIBt Z-65.16-501

**Sanitary compatibility**

The following table shows which device versions meet the requirements of 3A-Sanitary Standard No. 74 and are certified by the EHEDG.

FMP52			
Feature	Option	3A	EHEDG
060: Probe	CA Rod 16mm PFA>316L	✓	✓
	CB Rod 0.63 in PFA>316L	✓	✓
100: Process connection	TAK Tri-Clamp ISO2852 DN40-51 (2"), PTFE>316L	✓	✓
	TLK Tri-Clamp ISO2852 DN70-76.1 (3"), PTFE>316L	✓	✓
	TNK Tri-Clamp ISO2852 DN38 (1-1/2"), PTFE>316L	✓	✓

-  Suitable fittings and seals must be used to ensure hygiene-compliant design according to the specifications of 3A and EHEDG.
-  The gap-free connections can be cleaned without residue using the usual cleaning methods (CIP and SIP).
-  Wetted non-metallic parts of the FMP52 conform to FDA 21 CFR 177.1550 and USP Class VI.

**AD2000**

- For FMP51/FMP54:  
The wetted material 316L (1.4435/1.4404) corresponds to AD2000 - W2/W10.
- For FMP52/FMP55:  
The pressure retaining material 316L (1.4435/1.4404) corresponds to AD2000 - W2/W10.
- Declaration of conformity: see product structure, feature 580, option JF.

**NACE MR 0175 / ISO 15156**

- For FMP51, FMP54:
- The wetted, metallic materials (except for ropes) comply with the requirements of NACE MR 0175 / ISO 15156.
  - Declaration of conformity: see product structure, feature 580, option JB.

**NACE MR 0103**

- For FMP51, FMP54:
- The wetted, metallic materials (except for ropes) comply with the requirements of NACE MR 0103 / ISO 17495.
  - The certificate of compliance is based on NACE MR 0175.  
The hardness and the intercrystalline corrosion have been tested, as well as the heat treatment (solution annealed) has been carried out. The used materials comply therefore with the requirements of NACE MR 0103 / ISO 17495.
  - Declaration of conformity: see product structure, feature 580, option JE.

**ASME B31.1 and B31.3**

- The dimensions, materials of construction, pressure / temperature ratings and identification markings of the device comply with the requirements of AMSE B31.1 and ASME B31.3
- Declaration of conformity: see product structure, feature 580, option KV.

**Pressure equipment with allowable pressure ≤ 200 bar (2 900 psi)**

Pressure instruments with a flange and threaded boss that do not have a pressurized housing do not fall within the scope of the Pressure Equipment Directive, irrespective of the maximum allowable pressure.

**Reasons:**

According to Article 2, point 5 of EU Directive 2014/68/EU, pressure accessories are defined as "devices with an operational function and having pressure-bearing housings".

If a pressure instrument does not have a pressure-bearing housing (no identifiable pressure chamber of its own), there is no pressure accessory present within the meaning of the Directive.

**Pressure equipment with allowable pressure > 200 bar (2 900 psi)**

Pressure equipment designated for application in every process fluid having a pressurized volume V of <0.1 l and a max. allowable pressure PS > 200 bar (2 900 psi) shall satisfy the essential safety requirements set out in Annex I of the Pressure Equipment Directive 2014/68/EU. According to Article 13 pressure equipment shall be classified by category in accordance with Annex II. The conformity assessment of the pressure equipment shall be determined by the category I under consideration of the above-mentioned low pressurized volume. These devices shall be provided with CE marking.

**Reasons:**

- Pressure Equipment Directive 2014/68/EU, Article 13 and Annex II
- Pressure equipment directive 2014/68/EU, Commission's Working Group "Pressure", Guideline A-05

**Note:**

A partial examination shall be performed for pressure instruments that are part of safety equipment for the protection of a pipe or vessel from exceeding allowable limits (equipment with safety function in accordance with Pressure Equipment Directive 2014/68/EU, Article 2, point 4).

The conformity assessment was performed according to module A; and proof of static strength and fatigue strength according to EN 13445 and AD2000.

The FMP54 is not suitable for use with unstable gases at nominal pressures above 200 bar (2900 psi).

**Steam boiler approval**

The FMP54 is approved as a limiting device for high water (HW) and low water (LW) for liquids in containers which are subject to the requirements of EN12952-11 and EN12953-9 (certified by TÜV Nord).

Product structure: Feature 590 "Additional Approval", option LX "Steam boiler approval".

For details refer to Safety Instructions SD00349F and Planning Recommendations SD01071F.

 Device with steam boiler approval always have a SIL approval as well.

**Marine certificate**

Device	Marine certificate <sup>1)</sup>				
	GL	ABS	LR	BV	DNV
FMP51	✓	✓	✓	✓	✓
FMP52	✓	✓	✓	✓	✓
FMP54	-	-	-	-	-

1) see ordering feature 590 "Additional approval"

**Telecommunications**

Complies with part 15 of the FCC rules for an unintentional radiator. All probes meet the requirements for a Class A digital device.

In addition, all probes in metallic tanks as well as the coax probe meet the requirements for a Class B digital device.

**CRN approval**

Some device versions have a CRN approval. Devices are CRN approved if the following two conditions are met:

- The device has a CSA or FM approval (Product structure: Feature 010 "Approval")
- The device has a CRN approved process connection according to the following table.

Feature 100 of the product structure	Approval
AAJ	NPS 2" Cl. 600 RF, 316/316L flange ASME B16.5
ABJ	NPS 3" Cl. 600 RF, 316/316L flange ASME B16.5
AEJ	NPS 1-1/2" Cl. 150 RF, 316/316L flange ASME B16.5
AEK	NPS 1-1/2" Cl. 150, PTFE>316/316L flange ASME B16.5
AEM	NPS 1-1/2" Cl. 150, AlloyC>316/316L flange ASME B16.5

Feature 100 of the product structure	Approval
AFJ	NPS 2" Cl. 150 RF, 316/316L flange ASME B16.5
AFK	NPS 2" Cl. 150, PTFE>316/316L flange ASME B16.5
AFM	NPS 2" Cl. 150, AlloyC>316/316L flange ASME B16.5
AGJ	NPS 3" Cl. 150 RF, 316/316L flange ASME B16.5
AGK	NPS 3" Cl. 150, PTFE>316/316L flange ASME B16.5
AGM	NPS 3" Cl. 150, AlloyC>316/316L flange ASME B16.5
AHJ	NPS 4" Cl. 150 RF, 316/316L flange ASME B16.5
AHK	NPS 4" Cl. 150, PTFE>316/316L flange ASME B16.5
AJJ	NPS 6" Cl. 150 RF, 316/316L flange ASME B16.5
AJK	NPS 6" Cl. 150, PTFE>316/316L flange ASME B16.5
AKJ	NPS 8" Cl. 150 RF, 316/316L flange ASME B16.5
AOJ	NPS 4" Cl. 600 RF, 316/316L flange ASME B16.5
AQJ	NPS 1-1/2" Cl. 300 RF, 316/316L flange ASME B16.5
AQK	NPS 1-1/2" Cl. 300, PTFE>316/316L flange ASME B16.5
AQM	NPS 1-1/2" Cl. 300, AlloyC>316/316L flange ASME B16.5
ARJ	NPS 2" Cl. 300 RF, 316/316L flange ASME B16.5
ARK	NPS 2" Cl. 300, PTFE>316/316L flange ASME B16.5
ARM	NPS 2" Cl. 300, AlloyC>316/316L flange ASME B16.5
ASJ	NPS 3" Cl. 300 RF, 316/316L flange ASME B16.5
ASK	NPS 3" Cl. 300, PTFE>316/316L flange ASME B16.5
ASM	NPS 3" Cl. 300, AlloyC>316/316L flange ASME B16.5
ATJ	NPS 4" Cl. 300 RF, 316/316L flange ASME B16.5
ATK	NPS 4" Cl. 300, PTFE>316/316L flange ASME B16.5
ATM	NPS 4" Cl. 300, AlloyC>316/316L flange ASME B16.5
AZJ	NPS 4" Cl. 900 RF, 316/316L flange ASME B16.5
A6J	NPS 2" Cl. 1500 RF, 316/316L Flansch ASME B16.5
A7J	NPS 3" Cl. 1500 RF, 316/316L flange ASME B16.5
A8J	NPS 4" Cl. 1500 RF, 316/316L flange ASME B16.5
GGJ	Thread ISO228 G1-1/2, 316L
GIJ	Thread ISO228 G1-1/2, 200bar, 316L
GJJ	Thread ISO228 G1-1/2, 400bar, 316L
RAJ	Thread ANSI MNPT1-1/2, 200bar, 316L
RBJ	Thread ANSI MNPT1-1/2, 400bar, 316L
RGJ	Thread ANSI MNPT1-1/2, 316L
TAK	Tri-Clamp ISO2852 DN40-51 (2"), 3A, EHEDG, PTFE>316L
TDK	Tri-Clamp ISO2852 DN40-51 (2"), PTFE>316L
TFK	Tri-Clamp ISO2852 DN70-76.1 (3"), PTFE>316L
TJK	Tri-Clamp ISO2852 DN38 (1-1/2"), PTFE>316L
TLK	Tri-Clamp ISO2852 DN70-76.1 (3"), 3A, EHEDG, PTFE>316L
TNK	Tri-Clamp ISO2852 DN38 (1-1/2"), 3A, EHEDG, PTFE>316L



▪ Process connections without CRN approval are not included in this table.

- Refer to the product structure to see which process connections are available for a specific device type.
- CRN approved devices are marked with the registration number OF14480.5C on the nameplate.


---

**Track record**

FMP5x is the upgrade model of the corresponding FMP4x series.



Test, Certificate

Feature 580 "Test, Certificate"	Designation	Available for
JA	3.1 Material certificate, wetted metallic parts, EN10204-3.1 inspection certificate	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>
JB	Conformity to NACE MR0175, wetted metallic parts	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP52</li> <li>■ FMP54</li> </ul>
JD	3.1 Material certificate, pressurized parts, EN10204-3.1 inspection certificate	FMP52
JE	Conformity to NACE MR0103, wetted metallic parts	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP52</li> <li>■ FMP54</li> </ul>
JF	Conformity to AD2000, wetted metallic parts: Material of all wetted/pressurized parts conform to AD2000 (Technical rules W2, W9, W10)	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP52</li> <li>■ FMP54</li> </ul>
JN	Ambient temperature transmitter -50 °C (-58 °F)  Devices with this option undergo a routine check test (startup test at -50 °C (-58 °F)).	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>
KD	Helium leak test, internal procedure, inspection certificate	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>
KE	Pressure test, internal procedure, inspection certificate	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP52</li> <li>■ FMP54</li> </ul>
KG	3.1 Material certificate+PMI test (XRF), internal procedure, wetted metallic parts, EN10204-3.1 inspection certificate	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>
KP	Liquid penetrant test AD2000-HP5-3(PT), wetted/pressurized metallic parts, inspection certificate	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>
KQ	Liquid penetrant test ISO23277-1 (PT), wetted/pressurized metallic parts, inspection certificate	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>
KR	Liquid penetrant test ASME VIII-1 (PT), wetted/pressurized metallic parts, inspection certificate	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>
KS	Welding documentation, wetted/pressurized seams consisting of <ul style="list-style-type: none"> <li>■ Welding drawing</li> <li>■ WPQR (Welding Procedure Qualification Report)</li> <li>■ WPS (Welding Process Specification)</li> <li>■ WQR (Manufacturer Declaration)</li> </ul>	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>
KV	Conformity to ASME B31.3: The dimensions, materials of construction, pressure / temperature ratings and identification markings of the device comply with the requirements of ASME B31.3	<ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP52</li> <li>■ FMP54</li> </ul>



Test reports, declarations and material test certificates can be obtained electronically from the *W@M Device Viewer* :

Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))

This applies to the options of the following ordering features:

- 550 "Calibration"
- 580 "Test, Certificate"

Product documentation on paper

Test reports, declarations and material certificates can be ordered as hardcopies via ordering feature 570 "Service", option I7 „Product documentation on paper“. The printouts will be enclosed in the product delivery.

**Other standards and guidelines**

- EN 60529  
Degrees of protection by housing (IP code)
- EN 61010-1  
Protection Measures for Electrical Equipment for Measurement, Control, Regulation and Laboratory Procedures.
- IEC/EN 61326  
"Emission in accordance with Class A requirements". Electromagnetic compatibility (EMC requirements)
- NAMUR NE 21  
Electromagnetic compatibility (EMC) of industrial process and laboratory control equipment.
- NAMUR NE 43  
Standardization of the signal level for the breakdown information of digital transmitters with analog output signal.
- NAMUR NE 53  
Software of field devices and signal-processing devices with digital electronics
- NAMUR NE 107  
Status classification as per NE107
- NAMUR NE 131  
Requirements for field devices for standard applications
- IEC61508  
Functional safety of electrical/electronic/programmable electronic safety-related systems

## Ordering information

---

### Ordering information

Detailed ordering information is available from the following sources:


- In the Product Configurator on the Endress+Hauser website: [www.endress.com](http://www.endress.com) -> Click "Corporate" -> Select your country -> Click "Products" -> Select the product using the filters and search field -> Open product page -> The "Configure" button to the right of the product image opens the Product Configurator.
- From your Endress+Hauser Sales Center: [www.addresses.endress.com](http://www.addresses.endress.com)




#### **Product Configurator - the tool for individual product configuration**

- Up-to-the-minute configuration data
- Depending on the device: Direct input of measuring point-specific information such as measuring range or operating language
- Automatic verification of exclusion criteria
- Automatic creation of the order code and its breakdown in PDF or Excel output format
- Ability to order directly in the Endress+Hauser Online Shop

**3-point linearity protocol**

 The following notes must be taken into account if option F3 ("3 point linearity protocol") has been selected in feature 550 ("Calibration").


Depending on the probe the 3 points of the linearity protocol are defined as follows:

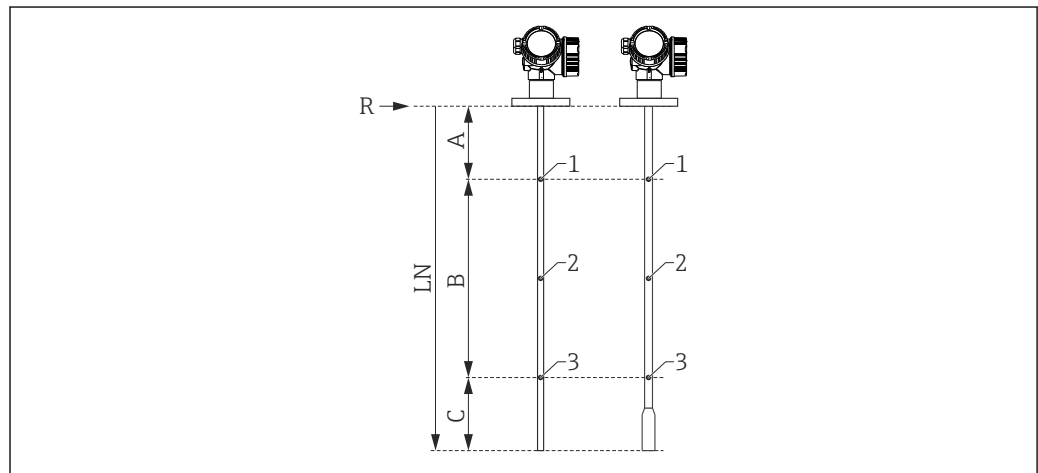


- A Distance from reference point R to first measuring point
- B Measuring range
- C Distance from end of probe to third measuring point
- LN Length of probe
- R Reference point of the measurement
- 1 First measuring point
- 2 Second measuring point (centrally between first and third measuring point)
- 3 Third measuring point


	Rod or coax probe <sup>1)</sup> LN ≤ 6 m (20 ft)	Divisible rod probe LN > 6 m (20 ft)	Rope probe LN ≤ 6 m (20 ft)	Rope probe LN > 6 m (20 ft)
Position of 1st measuring point	<ul style="list-style-type: none"> <li>▪ FMP51/FMP52/FMP54 without gas phase compensation/FMP55: A = 350 mm (13.8 in)</li> <li>▪ FMP54 with gas phase compensation, L<sub>ref</sub> = 300 mm (11 in): A = 600 mm (23.6 in)</li> <li>▪ FMP54 with gas phase compensation, L<sub>ref</sub> = 550 mm (21 in): A = 850 mm (33.5 in)</li> </ul>		A = 350 mm (13.8 in)	A = 350 mm (13.8 in)
Position of 2nd measuring point	centrally between 1st and 3rd measuring point	centrally between 1st and 3rd measuring point	centrally between 1st and 3rd measuring point	centrally between 1st and 3rd measuring point
Position of 3rd measuring point	measured from the bottom end of the probe: C = 250 mm (9.84 in)	measured from the top end of the probe: A+B = 5 750 mm (226 in)	measured from the bottom end of the probe: C = 500 mm (19.7 in)	measured from the top end of the probe: A+B = 5 500 mm (217 in)
Minimum measuring range	B ≥ 400 mm (15.7 in)	B ≥ 400 mm (15.7 in)	B ≥ 400 mm (15.7 in)	B ≥ 400 mm (15.7 in)
Minimum length of probe	LN ≥ 1 000 mm (39.4 in)	LN ≥ 1 000 mm (39.4 in)	LN ≥ 1 250 mm (49.2 in)	LN ≥ 1 250 mm (49.2 in)

1) also valid for divisible rods

 The position of the measuring points may vary by ±1 cm (±0.04 in).


- 
  - For rod and rope probes the linearity check is performed with the complete device.
  - For divisible rod probes a reference probe is used instead of the original one.
  - For coax probes the electronics is mounted to a reference rod probe and the linearity check is performed to this configuration.
  - The linearity is checked under reference conditions.

**5-point linearity protocol**

 The following notes must be taken into account if option F4 ("5 point linearity protocol") has been selected in feature 550 ("Calibration").

The five points of the linearity protocol are evenly distributed across the measuring range (0% to 100%). In order to define the measuring range, **Empty calibration** (E) and **Full calibration** (F) have to be specified <sup>11)</sup>.

The following restrictions have to be taken into account when defining E and F:

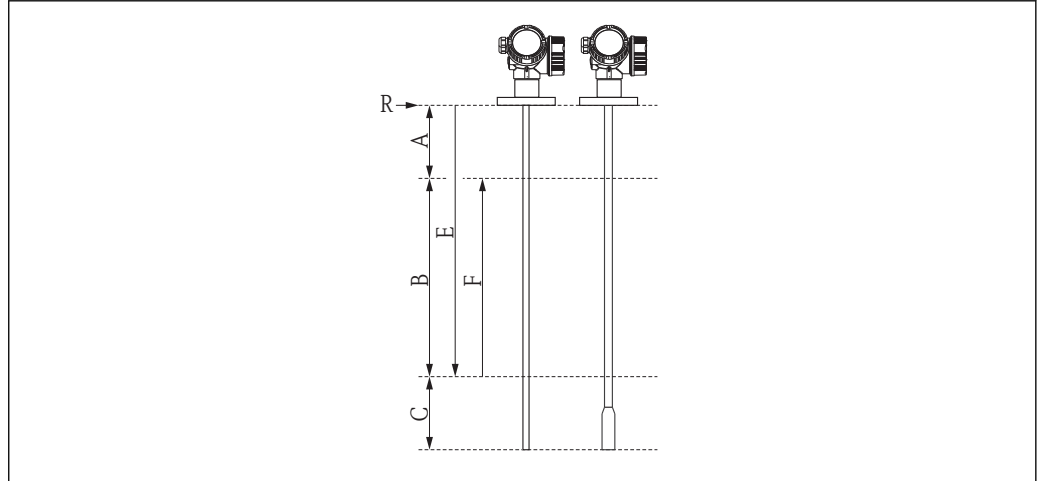

A0014673



Sensor	Minimum distance between reference point (R) and 100% level	Minimum measuring range
FMP51	A ≥ 250 mm (10 in)	B ≥ 400 mm (16 in)
FMP51 Rope probe with center rod, max. 300 mm (12 in) nozzle height <sup>1)</sup>	A ≥ 350 mm (14 in)	B ≥ 400 mm (16 in)
FMP52	A ≥ 250 mm (10 in)	B ≥ 400 mm (16 in)
FMP52 Rope probe with center rod, max. 300 mm (12 in) nozzle height <sup>2)</sup>	A ≥ 350 mm (14 in)	B ≥ 400 mm (16 in)
FMP54 w/o gas phase compensation	A ≥ 250 mm (10 in)	B ≥ 400 mm (16 in)
FMP54 with gas phase compensation, L <sub>ref</sub> = 300 mm	A ≥ 450 mm (18 in)	B ≥ 400 mm (16 in)
FMP54 with gas phase compensation, L <sub>ref</sub> = 550 mm	A ≥ 700 mm (28 in)	B ≥ 400 mm (16 in)


1) Product structure: Feature 060 "Probe", Option MB or MD

2) Product structure: Feature 060 "Probe", Option OB or OD

11) If E and F are not specified, probe dependent default values will be used instead.

Type of probe	Minimum distance from end of probe to 0% level	Maximum value for "empty calibration"
Rod (not divisible)	$C \geq 100 \text{ mm (4 in)}$	$E \leq 3.9 \text{ m (12.8 ft)}$
<ul style="list-style-type: none"> <li>▪ Coax</li> <li>▪ Rod (divisible)</li> </ul>	$C \geq 100 \text{ mm (4 in)}$	$E \leq 5.9 \text{ m (19.4 ft)}$
Rope	$C \geq 1000 \text{ mm (40 in)}$	$E \leq 23 \text{ m (75 ft)}$

- 
  - For rod and rope probes the linearity check is performed with the complete device.
  - For coax probes the electronics is mounted to a reference rod probe and the linearity check is performed to this configuration.
  - The linearity is checked under reference conditions.
  
- 

The selected values of **Empty calibration** and **Full calibration** are only used to record the linearity protocol and are reset to their probe specific default values thereafter. If values different from the default are required, they must be ordered as a customized parametrization →  119.

**Customized parametrization** If the option IJ "Customized parametrization HART", IK "Customized parametrization PA" or IL "Customized parametrization FF" has been selected in feature 570 "Service", customer specific presettings can be selected for the following parameters:

Parameter	Communication	Selection list / range of values
Setup → Distance unit	<ul style="list-style-type: none"> <li>■ HART</li> <li>■ PA</li> <li>■ FF</li> </ul>	<ul style="list-style-type: none"> <li>■ in</li> <li>■ ft</li> <li>■ mm</li> <li>■ m</li> </ul>
Setup → Empty calibration	<ul style="list-style-type: none"> <li>■ HART</li> <li>■ PA</li> <li>■ FF</li> </ul>	0 to 45 m (0 to 147 ft)
Setup → Full calibration	<ul style="list-style-type: none"> <li>■ HART</li> <li>■ PA</li> <li>■ FF</li> </ul>	0 to 45 m (0 to 147 ft)
Setup → Adv. Setup → Current output 1/2 → Damping	HART	0 to 999.9 s
Setup → Adv. Setup → Current output 1/2 → Failure mode	HART	<ul style="list-style-type: none"> <li>■ Min</li> <li>■ Max</li> <li>■ Last valid value</li> </ul>
Setup → Adv. Setup → Current output 1/2 → Burst mode	HART	<ul style="list-style-type: none"> <li>■ Off</li> <li>■ On</li> </ul>

**Tagging (TAG)**

<b>Ordering feature</b>	895: Marking
<b>Option</b>	Z1: Tagging (TAG), see additional spec.
<b>Position of the measuring point marking</b>	To be selected in the additional specifications: <ul style="list-style-type: none"> <li>■ Tag plate Stainless Steel</li> <li>■ Self-adhesive paper label</li> <li>■ Supplied label/plate</li> <li>■ RFID TAG</li> <li>■ RFID TAG + Tag plate Stainless Steel</li> <li>■ RFID TAG + Self-adhesive paper label</li> <li>■ RFID TAG + Supplied label/plate</li> </ul>
<b>Definition of the measuring point designation</b>	To be defined in the additional specifications: 3 lines containing up to 18 characters each  The measuring point designation appears on the selected label and/or the RFID TAG.
<b>Designation in the Electronic Name Plate (ENP)</b>	The first 32 characters of the measuring point designation
<b>Designation on the display module</b>	The first 12 characters of the measuring point designation

---

## Application Packages

---

### Heartbeat Diagnostics

#### Availability

Available in all device versions.


#### Function

- Continuous self-monitoring of the device.
- Diagnostic messages output to
  - the local display.
  - an asset management system (e.g. FieldCare/DeviceCare).
  - an automation system (e.g. PLC).

#### Advantages

- Device condition information is available immediately and processed in time.
- The status signals are classified in accordance with VDI/VDE 2650 and NAMUR recommendation NE 107 and contain information about the cause of the error and remedial action.

#### Detailed description

See Operating Instructions of the device (→  133); chapter "Diagnostics and trouble shooting"



## Heartbeat Verification

### Availability

Available for the following options of feature 540 "Application Package":

- EH: Heartbeat Verification + Monitoring
- EJ: Heartbeat Verification

### Device functionality checked on demand

- Verification of the correct functioning of the measuring device within specifications.
- The verification result provides information about the condition of the device: **Passed** or **Failed**.
- The results are documented in a verification report.
- The automatically generated report supports the obligation to demonstrate compliance with internal and external regulations, laws and standards.
- Verification is possible without interrupting the process.

### Advantages

- No onsite presence is required to use the function.
- The DTM <sup>12)</sup> triggers verification in the device and interprets the results. No specific knowledge is required on the part of the user.
- The verification report can be used to prove quality measures to a third party.
- **Heartbeat Verification** can replace other maintenance tasks (e.g. periodic check) or extend the test intervals.

### SIL/WHG-locked devices <sup>13)</sup>

- The **Heartbeat Verification** module contains a wizard for the proof test which must be performed at appropriate intervals for the following applications:
  - SIL (IEC61508/IEC61511)
  - WHG (German Water Resources Act)
- To perform a proof test, the device must be locked (SIL/WHG locking).
- The wizard can be used via FieldCare, DeviceCare or a DTM-based process control system.



In the case of SIL-locked and WHG-locked devices, it is **not** possible to perform verification without additional measures (e.g. by-passing of the output current) because the output current must be simulated (Increased safety mode) or the level must be approached manually (Expert mode) during subsequent re-locking (SIL/WHG locking).

### Detailed description



SD01872F

---

12) DTM: Device Type Manager; controls device operation via DeviceCare, FieldCare or a DTM-based process control system.

13) Only relevant for devices with SIL or WHG approval: order code 590 ("Additional approval"), option LA ("SIL") or LC ("WHG").

## Heartbeat Monitoring

### Availability

Available for the following options of feature 540 "Application Package":  
EH: Heartbeat Verification + Monitoring

### Function

- In addition to the verification parameters, the corresponding parameter values are also logged.
- Existing measured variables, such as the echo amplitude, are used in the **Foam detection** and **Build-up detection** wizards.



The **Foam detection** and **Build-up detection** wizards cannot be used together.

### "Foam detection" wizard

- The Heartbeat Monitoring module contains the **Foam detection** wizard.
- This wizard is used to configure automatic foam detection, which detects foam on the product surface on the basis of the reduced signal amplitude. Foam detection can be linked to a switch output in order to control a sprinkler system, for example, which dissolves the foam.
- This wizard can be used via FieldCare, DeviceCare or a DTM-based process control system.

### "Build-up detection" wizard

- The Heartbeat Monitoring module contains the **Build-up detection** wizard.
- The wizard is used to configure automatic buildup detection, which detects the buildup of deposits on the probe on the basis of the reduced signal amplitude.
- This wizard can be used via FieldCare, DeviceCare or a DTM-based process control system.

### Advantages

- Early detection of changes (trends) to ensure plant availability and product quality.
- Use of information for the proactive planning of measures (e.g. cleaning/maintenance).
- Identification of undesirable process conditions as the basis to optimizing the facility and the processes.
- Automated control of measures to remove foam or buildup.



### Detailed description



SD01872F

## Accessories


Device-specific accessories Weather protection cover

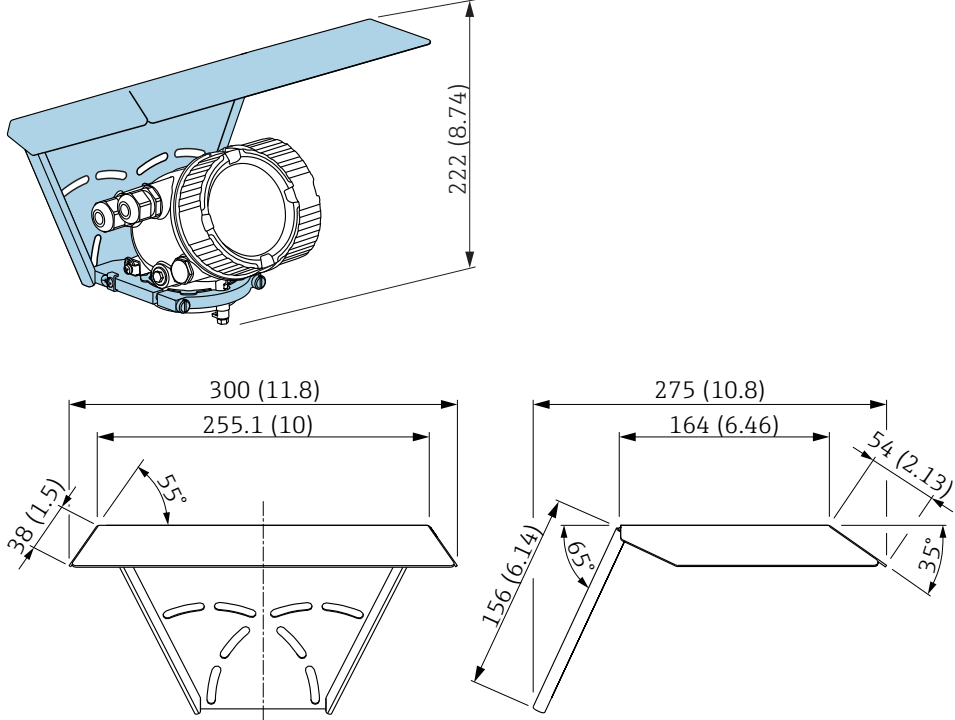Accessory	Description
Weather protection cover	 <p data-bbox="1476 728 1524 750">A0015466</p> <p data-bbox="1476 1142 1524 1164">A0015472</p> <p data-bbox="414 1164 925 1198">☑ 41 Weather protection cover; Dimensions: mm (in)</p> <p data-bbox="414 1220 1492 1310">  The weather protection cover can be ordered together with the device (product structure, feature 620 "Accessory Enclosed", option PB "Weather Protection Cover"). Alternatively, it can be separately ordered as an accessory; order code 71162242.         </p>

Mounting bracket for the electronics housing


Accessory	Description
<p>Mounting bracket for the electronics housing</p>	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p><b>A</b></p> </div> <div style="text-align: center;"> <p><b>B</b></p> </div> </div> <p> 42 Mounting bracket for the electronics housing; Dimensions: mm (in)</p> <p>A Wall mounting B Pipe mounting</p> <p> For the "Sensor remote" device version (see feature 060 of the product structure), the mounting bracket is part of the delivery. If required, it can also be ordered as an accessory (order code 71102216).</p> <p style="text-align: right; font-size: small;">A0014793</p>

**Extension rod / centering HMP40**

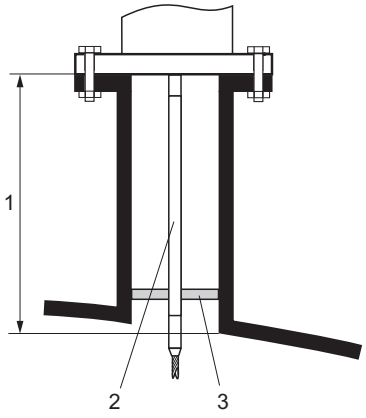
Accessory	Description
<p>Extension rod / centering HMP40</p> <ul style="list-style-type: none"> <li>■ can be used for: FMP54</li> <li>■ Admissible temperature at lower nozzle edge:                             <ul style="list-style-type: none"> <li>- without center washer: no limitation</li> <li>- with center washer: -40 to 150 °C (-40 to 302 °F)</li> </ul> </li> <li>■ Additional information: SD01002F</li> </ul>	
	<p>1 Nozzle height 2 Extension rod 3 Center washer</p>
<b>010</b>	<b>Approval:</b>
A	A: Non-hazardous area
M	M: FM DIP Cl.II Div.1 Gr.E-G N.I., zone 21,22
P	P: CSA DIP Cl.II Div.1 Gr.G + coal dust N.I.
S	S: FM Cl.I, II, III Div.1 Gr.A-G N.I., zone 0,1,2,20,21,22
U	U: CSA Cl.I, II, III Div.1 Gr.A-G N.I., zone 0,1,2
1	1: ATEX II 1G
2	2: ATEX II 1D
<b>020</b>	<b>Extension rod; nozzle height:</b>
1	115mm; 150-250mm / 6-10"
2	215mm; 250-350mm / 10-14"
3	315mm; 350-450mm / 14-18"
4	415mm; 450-550mm / 18-22"
9	Special version, TSP-no. to be spec.
<b>030</b>	<b>Center washer:</b>
A	Not selected
B	DN40 / 1-1/2", inside-d. = 40-45mm, PPS
C	DN50 / 2", inside-d. = 50-57mm, PPS
D	DN80 / 3", inside-d. = 80-85mm, PPS
E	DN80 / 3", inside-d. = 76-78mm, PPS
G	DN100 / 4", inside-d. = 100-110mm, PPS
H	DN150 / 6", inside-d. = 152-164mm, PPS
J	DN200 / 8", inside-d. = 210-215mm, PPS
K	DN250 / 10", inside-d. = 253-269mm, PPS
Y	Special version, TSP-no. to be spec.


A0013597


**Mounting kit, isolated**

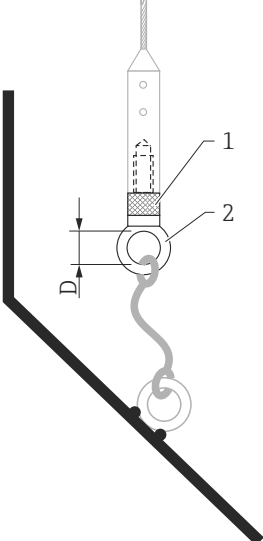Accessory	Description
<p>Mounting kit, isolated can be used for</p> <ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>	<div style="text-align: right; font-size: small; margin-bottom: 10px;">A0013586</div>  <p>☑ 43 Scope of supply of the mounting kit:</p> <p>1 Insulating sleeve 2 Eye-bolt</p> <p>For reliably insulated fixing of the probe. Maximum process temperature: 150 °C (300 °F)</p> <p>For rope probes 4 mm (1/8 in) or 6 mm (1/4 in) with PA&gt;steel:</p> <ul style="list-style-type: none"> <li>■ Diameter D = 20 mm (0.8 in)</li> <li>■ Order-No.: 52014249</li> </ul> <p>For rope probes 6 mm (1/4 in) or 8 mm (1/3 in) with PA&gt;steel:</p> <ul style="list-style-type: none"> <li>■ Diameter D = 25 mm (1 in)</li> <li>■ Order-No.: 52014250</li> </ul> <p>Due to the risk of electrostatic charge, the insulating sleeve is not suitable for use in hazardous areas. In these cases the fixing must be reliably grounded.</p> <p><b>i</b> The mounting kit can also be ordered directly with the device (see the Levelflex product structure, feature 620 "Accessory Enclosed", option PG "Mounting kit, isolated, rope").</p>

Centering star

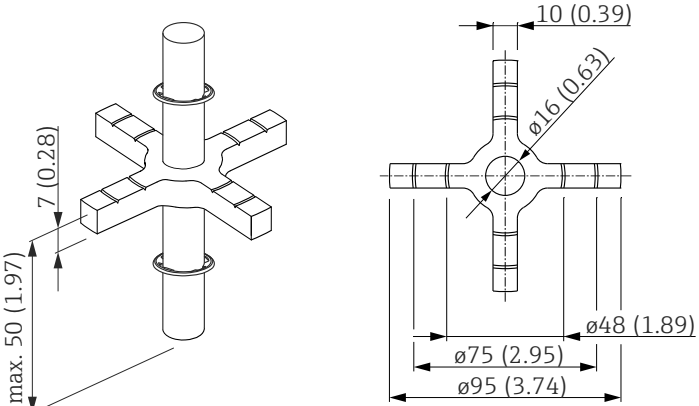
Accessory	Description
<p>Centering star PEEK <math>\phi</math> 48 to 95 mm (1.89 to 3.74 inch) can be used for</p> <ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP54</li> </ul>	<div style="display: flex; justify-content: space-around; align-items: flex-start;">  </div> <p style="text-align: right; font-size: small;">A0014576</p> <p>The centering star is suitable for probes with a rod diameter of 16 mm (0.6 in) and can be used in pipes from DN50 (2") up to DN100 (4"). Markings on the 4-leg centering star ensure a simple tailoring. Hence the centering star can be adapted to the pipe diameter. See also Operating Instructions BA00377F/00/A2.</p> <ul style="list-style-type: none"> <li>▪ Material of centering star: PEEK (statically dissipative)</li> <li>▪ Material of retaining rings: PH15-7Mo (UNS S15700)</li> <li>▪ Admissible process temperature: -60 to +200 °C (-76 to +392 °F)</li> <li>▪ Order code: 71069064</li> </ul> <p><b>i</b> If the centering star is inserted in a bypass, it must be positioned below the lower bypass outlet. This has to be accounted for when choosing the probe length. Generally, the centering star should not be mounted higher than 50 mm (1.97") from the probe end. It is recommended not to insert the PEEK centering star in the measuring range of the rod probe.</p> <p><b>i</b> The PEEK centering star can also be ordered directly with the device (see the Levelflex product structure, feature 610 "Accessory mounted", option OD). In this case it is not fastened by the retaining rings. Instead it is fixed to the end of the probe rod by a hexagonal headed bolt (A4-70) and a Nord-Lock washer (1.4547).</p>

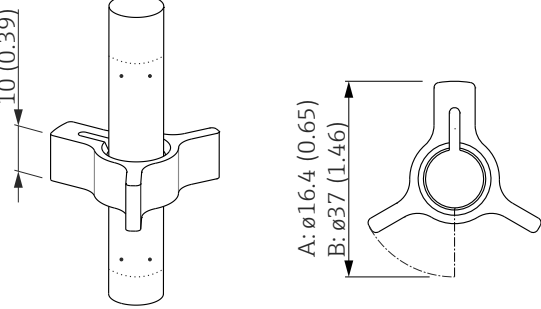Accessory	Description
<p>Centering star PFA</p> <ul style="list-style-type: none"> <li>■ <math>\phi</math> 16.4 mm (0.65 in)</li> <li>■ <math>\phi</math> 37 mm (1.46 in)</li> </ul> <p>can be used for</p> <ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP52</li> <li>■ FMP54</li> </ul>	<div style="display: flex; justify-content: space-around;">  </div> <p style="text-align: right; font-size: small;">A0014577</p> <p>A For 8 mm (0.3 in) probes          B: For 12 mm (0.47 in) and 16 mm (0.63 in) probes</p> <p>The centering star is suitable for probes with a rod diameter of 8 mm (0.3 in), 12 mm (0.47 in) and 16 mm (0.63 in) (also coated rod probes) and can be used in pipes from DN40 (1½") up to DN50 (2"). See also Operating Instructions BA00378F/00/A2.</p> <ul style="list-style-type: none"> <li>■ Material: PFA</li> <li>■ Admissible process temperature: -200 to +200 °C (-382 to +392 °F)</li> <li>■ Order code                     <ul style="list-style-type: none"> <li>- Probe 8 mm (0.3 in): 71162453</li> <li>- Probe 12 mm (0.47 in): 71157270</li> <li>- Probe 16 mm (0.63 in): 71069065</li> </ul> </li> </ul> <p><b>i</b> The PFA centering star can also be ordered directly with the device (see the Levelflex product structure, feature 610 "Accessory mounted", option OE).</p>

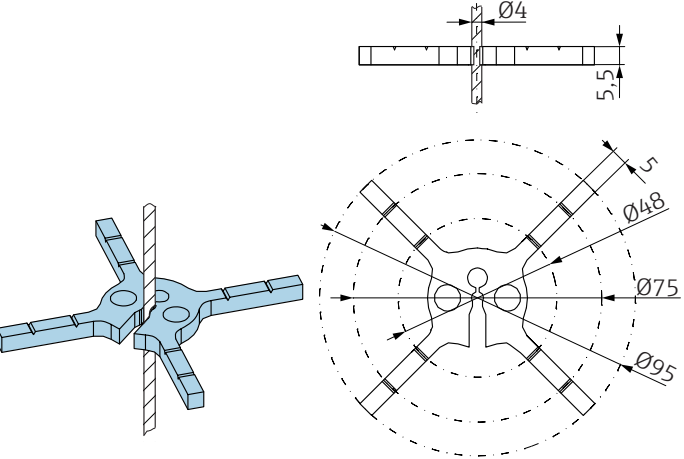Accessory	Description
<p>Centering star PEEK, <math>\phi</math> 48 to 95 mm (1.9 to 3.7 in)</p> <p>can be used for</p> <ul style="list-style-type: none"> <li>■ FMP51</li> <li>■ FMP54</li> </ul>	<div style="display: flex; justify-content: space-around;">  </div> <p style="text-align: right; font-size: small;">A0035182</p> <p>The centering star is suitable for probes with a rope diameter of 4 mm (1/8 in) (also coated rod probes). See also Operating Instructions SD01961F.</p> <ul style="list-style-type: none"> <li>■ Material: PEEK</li> <li>■ Admissible process temperature: -60 to +250 °C (-76 to +482 °F)</li> <li>■ Order code                     <ul style="list-style-type: none"> <li>- 71373490 (1 pc.)</li> <li>- 71373492 (5 pcs.)</li> </ul> </li> </ul> <p><b>i</b> The PFA centering star can also be ordered directly with the device (see the Levelflex product structure, feature 610 "Accessory mounted", option OD).</p>




Remote display FHX50

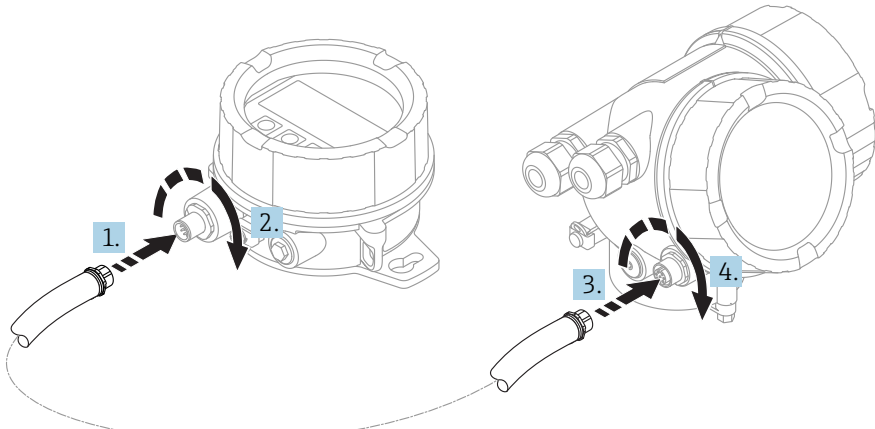
Accessories	Description
Remote display FHX50	<div style="text-align: center;">  </div> <p style="text-align: right; font-size: small;">A0019128</p> <ul style="list-style-type: none"> <li>■ Material:             <ul style="list-style-type: none"> <li>- Plastic PBT</li> <li>- 316L/1.4404</li> <li>- Aluminum</li> </ul> </li> <li>■ Degree of protection: IP68 / NEMA 6P and IP66 / NEMA 4x</li> <li>■ Suitable for display modules:             <ul style="list-style-type: none"> <li>- SD02 (push buttons)</li> <li>- SD03 (touch control)</li> </ul> </li> <li>■ Connecting cable:             <ul style="list-style-type: none"> <li>- Cable supplied with device up to 30 m (98 ft)</li> <li>- Standard cable supplied by customer up to 60 m (196 ft)</li> </ul> </li> <li>■ Ambient temperature range: -40 to 80 °C (-40 to 176 °F)</li> <li>■ Ambient temperature range (option): -50 to 80 °C (-58 to 176 °F) <sup>1)</sup></li> </ul> <p> <span style="font-size: small;">i</span> ■ If the remote display should be used, order the device version "Prepared for display FHX50" (feature 030, version L or M). For the FHX50, you must select option A: "Prepared for display FHX50" under feature 050 "Measuring device version".         </p> <p> <span style="font-size: small;">i</span> ■ If the device version "Prepared for display FHX50" was not originally ordered and a FHX50 display is to be retrofitted, you must select version B "Not prepared for display FHX50" under feature 050: "Measuring device version" when ordering the FHX50. In this case, a retrofit kit for the device is supplied with the FHX50. The kit can be used to prepare the device so that the FHX50 can be used.         </p> <p> <span style="font-size: small;">i</span> Use of the FHX50 may be restricted for transmitters with an approval. A device can only be retrofitted with the FHX50 if the option L or M ("Prepared for FHX50") is listed under <i>Basic specifications</i>, item 4 "Display, operation" in the Safety Instructions (XA) for the device.              Also pay attention to the Safety Instructions (XA) of the FHX50.         </p> <p> <span style="font-size: small;">i</span> Retrofitting is not possible on transmitters with:             <ul style="list-style-type: none"> <li>■ An approval for use in areas with flammable dust (dust ignition-proof approval)</li> <li>■ Ex nA type of protection</li> </ul> </p> <p> <span style="font-size: small;">i</span> For details, see document SD01007F.         </p>


1) This range is valid if option JN "Ambient temperature transmitter -50 °C (-58 °F)" has been selected in ordering feature 580 "Test, Certificate". If the temperature is permanently below -40 °C (-40 °F), failure rates may be increased.


**Overvoltage protection**

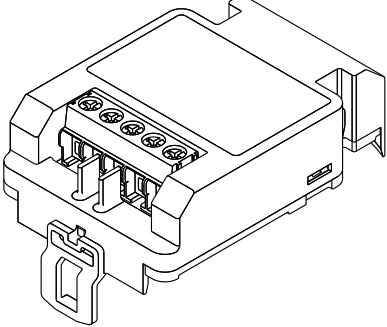
Accessory	Description
<p>Overvoltage protection for 2-wire-devices                      OVP10 (1 channel)                      OVP20 (2 channel)</p>	<div style="text-align: right; margin-bottom: 10px;">A0021734</div>  <p><b>Technical data</b></p> <ul style="list-style-type: none"> <li>▪ Resistance per channel: <math>2 * 0.5 \Omega_{max}</math></li> <li>▪ Threshold DC voltage: 400 to 700 V</li> <li>▪ Threshold impulse voltage: &lt; 800 V</li> <li>▪ Capacitance at 1 MHz: &lt; 1.5 pF</li> <li>▪ Nominal arrest impulse voltage (8/20 <math>\mu</math>s): 10 kA</li> <li>▪ Suited for wire cross-sections: 0.2 to 2.5 mm<sup>2</sup> (24 to 14 AWG)</li> </ul> <p><b>i Ordering with device</b>                      The overvoltage protection module is preferably ordered with the device. See product structure, feature 610 "Accessory mounted", option NA "Overvoltage protection". Separate ordering of the module is only necessary if a device is to be retrofitted with the overvoltage protection.</p> <p><b>i Order code for retrofitting</b></p> <ul style="list-style-type: none"> <li>▪ For 1-channel devices (feature 020, option A)                          OVP10: 71128617</li> <li>▪ For 2-channel devices (feature 020, option B, C, E or G)                          OVP20 : 71128619</li> </ul> <p><b>Housing lid for retrofitting</b>                      In order to keep the necessary safety distances, the housing lid needs to be replaced if the device is retrofitted with the overvoltage protection. Depending on the housing type, the order code of the suitable lid is as follows:</p> <ul style="list-style-type: none"> <li>▪ GT18 housing: Lid 71185516</li> <li>▪ GT19 housing: Lid 71185518</li> <li>▪ GT20 housing: Lid 71185516</li> </ul> <p><b>i Restrictions for retrofitting</b>                      Depending on the approval of the transmitter the usage of the OVP module may be restricted. A device may only be retrofitted with an OVP module if the option NA (overvoltage protection) is quoted under <i>Optional Specifications</i> in the Safety Instructions (XA) pertaining to the device.</p> <p><b>i</b> For details refer to SD01090F.</p>


**Communication-specific accessories**


Accessory	Description
Commubox FXA195 HART	For intrinsically safe HART communication with FieldCare via the USB interface.  For details refer to Technical Information TI00404F


Accessory	Description
Commubox FXA291	Connects Endress+Hauser field devices with CDI interface (= Endress+Hauser Common Data Interface) to the USB interface of a computer. Order code: 51516983  For details refer to Technical Information TI00405C


Accessory	Description
HART Loop Converter HMX50	Evaluates the dynamic HART variables and converts them to analog current signals or limit values. Order code: 71063562  For details refer to Technical Information TI00429F and Operating Instructions BA00371F


Accessory	Description
WirelessHART Adapter SWA70	Connects field devices to a WirelessHART network. The WirelessHART adapter can be mounted directly at a HART device and is easily integrated into an existing HART network. It ensures safe data transmission and can be operated in parallel with other wireless networks.  For details refer to Operating Instructions BA00061S


Accessories	Description
Connect Sensor FXA30/FXA30B	Fully integrated, battery-powered gateway for simple applications with SupplyCare Hosting. Up to 4 field devices with 4 to 20 mA communication (FXA30/FXA30B), serial Modbus (FXA30B) or HART (FXA30B) can be connected. With its robust design and ability to run for years on the battery, it is ideal for remote monitoring in isolated locations. Version with LTE (USA, Canada and Mexico only) or 3G mobile transmission for worldwide communication.  For details, see "Technical Information" TI01356S and Operating Instructions BA01710S.

Accessories	Description
Fieldgate FXA42	Fieldgates enable communication between connected 4 to 20 mA, Modbus RS485 and Modbus TCP devices and SupplyCare Hosting or SupplyCare Enterprise. The signals are transmitted either via Ethernet TCP/IP, WLAN or mobile communications (UMTS). Advanced automation capabilities are available, such as an integrated Web-PLC, OpenVPN and other functions.  For details, see "Technical Information" TI01297S and Operating Instructions BA01778S.




Accessories	Description
SupplyCare Enterprise SCE30B	Inventory management software that visualizes levels, volumes, masses, temperatures, pressures, densities or other tank parameters. The parameters are recorded and transmitted by means of gateways of the type Fieldgate FXA42. This Web-based software is installed on a local server and can also be visualized and operated with mobile terminals such as a smartphone or tablet.  For details, see "Technical Information" TI01228S and Operating Instructions BA00055S

Accessories	Description
SupplyCare Hosting SCH30	<p>Inventory management software that visualizes levels, volumes, masses, temperatures, pressures, densities or other tank parameters. The parameters are recorded and transmitted by means of gateways of the type Fieldgate FXA42, FXA30 and FXA30B.</p> <p>SupplyCare Hosting is offered as a hosting service (Software as a Service, SaaS). In the Endress+Hauser portal, the user is provided with the data over the Internet.</p> <p> For details, see "Technical Information" TI01229S and Operating Instructions BA00050S.</p>




Accessory	Description
Field Xpert SFX350	<p>Field Xpert SFX350 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the <b>non-Ex area</b>.</p> <p> For details, see Operating Instructions BA01202S</p>

Accessory	Description
Field Xpert SFX370	<p>Field Xpert SFX370 is a mobile computer for commissioning and maintenance. It enables efficient device configuration and diagnostics for HART and FOUNDATION fieldbus devices in the <b>non-Ex area</b> and the <b>Ex area</b>.</p> <p> For details, see Operating Instructions BA01202S</p>

Service-specific accessories

Accessory	Description
DeviceCare SFE100	<p>Configuration tool for HART, PROFIBUS and FOUNDATION Fieldbus devices</p> <p> Technical Information TI01134S</p> <p> <ul style="list-style-type: none"> <li>▪ DeviceCare is available for download at <a href="http://www.software-products.endress.com">www.software-products.endress.com</a>. The download requires a registration in the Endress+Hauser software portal.</li> <li>▪ Alternatively, a DeviceCare DVD can be ordered with the device. Product structure: Feature 570 "Service", Option IV "Tooling DVD (DeviceCare Setup)".</li> </ul> </p>
FieldCare SFE500	<p>Endress+Hauser's FDT-based Plant Asset Management tool. Helps to configure and maintain all field devices of your plant. By supplying status information it also supports the diagnosis of the devices.</p> <p> Technical Information TI00028S</p>

System components

Accessory	Description
Graphic Data Manager Memograph M	<p>The graphic data manager Memograph M provides information on all the relevant process variables. Measured values are recorded correctly, limit values are monitored and measuring points analyzed. The data are stored in the 256 MB internal memory and also on an SD card or USB stick.</p> <p> For details refer to Technical Information TI00133R and Operating Instructions BA00247R</p>
RN221N	<p>Active barrier with power supply for safe separation of 4 to 20 mA current circuits. Provides bi-directional HART transmission.</p> <p> For details refer to Technical Information TI00073R and Operating Instructions BA00202R</p>
RNS221	<p>Transmitter supply for 2-wire sensors or transmitters exclusively for non-Ex areas. Provides bi-directional communication using the HART communication sockets.</p> <p> For details refer to Technical Information TI00081R and Operating Instructions KA00110R</p>

## Documentation



For an overview of the scope of the associated Technical Documentation, refer to the following:

- The *W@M Device Viewer* : Enter the serial number from the nameplate ([www.endress.com/deviceviewer](http://www.endress.com/deviceviewer))
- The *Endress+Hauser Operations App*: Enter the serial number from the nameplate or scan the 2-D matrix code (QR code) on the nameplate.

### Standard documentation

#### Levelflex FMP51, FMP52, FMP54

*Correlation of documentations to the device:*

Device	Power supply, output	Communication	Document type	Document code
FMP51, FMP52, FMP54	A, B, C, K, L	HART	Technical Information	TI01001F
			Operating Instructions	BA01001F
			Brief Operating Instructions	KA01077F
			Description of Device Parameters	GP01000F
	G	PROFIBUS PA	Technical Information	TI01001F
			Operating Instructions	BA01006F
			Brief Operating Instructions	KA01079F
			Description of Device Parameters	GP01001F
	E	FOUNDATION Fieldbus	Technical Information	TI01001F
			Operating Instructions	BA01052F
			Brief Operating Instructions	KA01107F
			Description of Device Parameters	GP01015F

### Supplementary documentation

Application Package <sup>1)</sup>	Document type	Document code
<ul style="list-style-type: none"> <li>▪ EH: Heartbeat Verification + Monitoring</li> <li>▪ EJ: Heartbeat Verification</li> </ul>	Special documentation	SD01872F

1) Feature 540 of the product structure

Device	Document type	Document code
Fieldgate FXA520	Technical Information	TI369F
Tank Side Monitor NRF590	Technical Information	TI402F
	Operating Instructions	BA256F
	Description of Device Parameters	BA257F

Description	Document type	Document code
<b>Continuous level measurement in liquids and bulk solids</b> Selection and engineering guide for the process industry	Competence brochure	CP00023F
<b>Planning instructions for steam boiler approval</b> For Levelflex M FMP45 and Levelflex FMP54	Special documentation	SD01071F

**Safety documentation**

**Safety Instructions (XA)**

Depending on the approval, the following Safety Instructions (XA) are supplied with the device. They are an integral part of the Operating Instructions.

Feature 010	Approval	Available for	Feature 020: "Power Supply; Output"				
			A <sup>1)</sup>	B <sup>2)</sup>	C <sup>3)</sup>	E <sup>4)</sup> /G <sup>5)</sup>	K <sup>6)</sup> /L <sup>7)</sup>
BA	ATEX II 1G Ex ia IIC T6 Ga	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00496F	XA01125F	XA01126F	XA00516F	-
BB	ATEX II 1/2G Ex ia IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00496F	XA01125F	XA01126F	XA00516F	-
BC	ATEX II 1/2G Ex d ia  IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00499F	XA00499F	XA00499F	XA00519F	XA01133F
BD	ATEX II 1/3G Ex ic ia  IIC T6 Ga/Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00497F	XA01127F	XA01128F	XA00517F	-
BE	ATEX II 1D Ex t IIIC Da	FMP54	XA00501F	XA00501F	XA00501F	XA00521F	XA00501F
BF	ATEX II 1/2D Ex t IIIC Da/Db	FMP54	XA00501F	XA00501F	XA00501F	XA00521F	XA00501F
BG	ATEX II 3G Ex nA IIC T6 Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00498F	XA01130F	XA01131F	XA00518F	XA01132F
BH	ATEX II 3G Ex ic IIC T6 Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00498F	XA01130F	XA01131F	XA00518F	-
BL	ATEX II 1/3G Ex nA ia  IIC T6 Ga/Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00497F	XA01127F	XA01128F	XA00517F	XA01129F
B2	ATEX II 1/2G Ex ia IIC T6 Ga/Gb, 1/2D Ex ia IIIC Da/Db	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00502F	XA00502F	XA00502F	XA00522F	-
B3	ATEX II 1/2G Ex d ia  IIC T6 Ga/Gb, 1/2 D Ex t IIIC Da/Db	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00503F	XA00503F	XA00503F	XA00523F	XA01136F
B4	ATEX II 1/2G Ex ia IIC T6 Ga/Gb, Ex d ia  IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00500F	XA01134F	XA01135F	XA00520F	-
CD	CSA C/US DIP Cl.I,II,III Div.1 Gr.E-G	FMP54	XA00529F	XA00529F	XA00529F	XA00570F	XA00529F
C2	CSA C/US IS Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex ia	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00530F	XA00530F	XA00530F	XA00571F	XA00530F
C3	CSA C/US XP Cl.I,II,III Div.1 Gr.A-G, NI Cl.1 Div.2, Ex d	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00529F	XA00529F	XA00529F	XA00570F	XA00529F
FB	FM IS Cl.I,II,III Div.1 Gr.A-G, AEx ia, NI Cl.1 Div.2	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00531F	XA00531F	XA00531F	XA00573F	XA00531F
FD	FM XP Cl.I,II,III Div.1 Gr.A-G, AEx d, NI Cl.1 Div.2	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00532F	XA00532F	XA00532F	XA00572F	XA00532F
FE	FM DIP Cl.I,II,III Div.1 Gr.E-G	FMP54	XA00532F	XA00532F	XA00532F	XA00572F	XA00532F
GA	EAC Ex ia IIC T6 Ga	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA01380F	XA01380F	XA01380F	XA01381F	XA01380F

Feature 010	Approval	Available for	Feature 020: "Power Supply; Output"				
			A <sup>1)</sup>	B <sup>2)</sup>	C <sup>3)</sup>	E <sup>4)</sup> /G <sup>5)</sup>	K <sup>6)</sup> /L <sup>7)</sup>
GB	EAC Ex ia IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA01380F	XA01380F	XA01380F	XA01381F	XA01380F
GC	EAC Ex d[ia] IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA01382F	XA01382F	XA01382F	XA01383F	XA01382F
IA	IEC Ex ia IIC T6 Ga	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00496F	XA01125F	XA01126F	XA00516F	-
IB	IEC Ex ia IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00496F	XA01125F	XA01126F	XA00516F	-
IC	IEC Ex d[ia] IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00499F	XA00499F	XA00499F	XA00519F	XA01133F
ID	IEC Ex ic[ia] IIC T6 Ga/Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00497F	XA01127F	XA01128F	XA00517F	-
IE	IEC Ex t IIIC Da	FMP54	XA00501F	XA00501F	XA00501F	XA00521F	XA00501F
IF	IEC Ex t IIIC Da/Db	FMP54	XA00501F	XA00501F	XA00501F	XA00521F	XA00501F
IG	IEC Ex nA IIC T6 Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00498F	XA01130F	XA01131F	XA00518F	XA01132F
IH	IEC Ex ic IIC T6 Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00498F	XA01130F	XA01131F	XA00518F	-
IL	IEC Ex nA[ia] IIC T6 Ga/Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00497F	XA01127F	XA01128F	XA00517F	XA01129F
I2	IEC Ex ia IIC T6 Ga/Gb, Ex ia IIIC Da/Db	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00502F	XA00502F	XA00502F	XA00522F	-
I3	IEC Ex d [ia] IIC T6 Ga/Gb, Ex t IIIC Da/Db	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00503F	XA00503F	XA00503F	XA00523F	XA01136F
I4	IEC Ex II 1/2G Ex ia IIC T6 Ga/Gb, Ex d[ia] IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00500F	XA01134F	XA01135F	XA00520F	-
KA	KC Ex ia IIC T6 Ga	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA01169F	-	XA01169F	-	-
KB	KC Ex ia IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA01169F	-	XA01169F	-	-
KC	KC Ex d[ia] IIC T6	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	-	-	XA01170F	-	-
MA	INMETRO Ex ia IIC T6 Ga	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA01038F	XA01038F	XA01038F	-	XA01038F
MC	INMETRO Ex d[ia] IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA01041F	XA01041F	XA01041F	-	XA01041F
ME	INMETRO Ex t IIIC Da	FMP54	XA01043F	XA01043F	XA01043F	-	XA01043F

Feature 010	Approval	Available for	Feature 020: "Power Supply; Output"				
			A <sup>1)</sup>	B <sup>2)</sup>	C <sup>3)</sup>	E <sup>4)</sup> /G <sup>5)</sup>	K <sup>6)</sup> /L <sup>7)</sup>
MH	INMETRO Ex ic IIC T6 Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA01040F	XA01040F	XA01040F	-	XA01040F
NA	NEPSI Ex ia IIC T6 Ga	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00634F	XA00634F	XA00634F	XA00640F	XA00634F
NB	NEPSI Ex ia IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00634F	XA00634F	XA00634F	XA00640F	XA00634F
NC	NEPSI Ex d[ia] IIC T6 Ga/Gb	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00636F	XA00636F	XA00636F	XA00642F	XA00636F
NF	NEPSI DIP A20/21 T85...90oC IP66	FMP54	XA00637F	XA00637F	XA00637F	XA00643F	XA00637F
NG	NEPSI Ex nA II T6 Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00635F	XA00635F	XA00635F	XA00641F	XA00635F
NH	NEPSI Ex ic IIC T6 Gc	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00635F	XA00635F	XA00635F	XA00641F	XA00635F
N2	NEPSI Ex ia IIC T6 Ga/Gb, Ex iaD 20/21 T85...90°C	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00638F	XA00638F	XA00638F	XA00644F	XA00638F
N3	NEPSI Ex d[ia] IIC T6 Ga/Gb, DIP A20/21 T85...90°C IP66	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00639F	XA00639F	XA00639F	XA00645F	XA00639F
8A	FM/CSA IS+XP Cl.I,II,III Div.1 Gr.A-G	<ul style="list-style-type: none"> <li>▪ FMP51</li> <li>▪ FMP52</li> <li>▪ FMP54</li> </ul>	XA00531F XA00532F	XA00531F XA00532F	XA00531F XA00532F	XA00572F XA00573F	XA00531F XA00532F

- 1) A: 2-wire; 4-20mA HART
- 2) B: 2-wire; 4-20mA HART, switch output
- 3) C: 2-wire; 4-20mA HART, 4-20mA
- 4) E: 2-wire; FOUNDATION Fieldbus, switch output
- 5) G: 2-wire; PROFIBUS PA, switch output
- 6) K: 4-wire 90-253VAC; 4-20mA HART
- 7) L: 4-wire 10,4-48VDC; 4-20mA HART

 For certified devices the relevant Safety Instructions (XA) are indicated on the nameplate.



*Ex-marking in case of connected FHX50 remote display*

If the device is prepared for the remote display FHX50 (product structure: feature 030: Display, Operation", option L or M), the Ex marking of some certificates changes according to the following table <sup>14)</sup>:

Feature 010 ("Approval")	Feature 030 ("Display, Operation")	Ex-marking
BE	L or M	ATEX II 1D Ex ta [ia] IIIC T <sub>500</sub> xx°C Da
BF	L or M	ATEX II 1/2 D Ex ta [ia Db] IIIC Txx°C Da/Db
BG	L or M	ATEX II 3G Ex nA [ia Ga] IIC T6 Gc
BH	L or M	ATEX II 3G Ex ic [ia Ga] IIC T6 Gc
B3	L or M	ATEX II 1/2G Ex d [ia] IIC T6 Ga/Gb, ATEX II 1/2D Ex ta [ia Db] IIIC Txx°C Da/Db
IE	L or M	IECEX Ex ta [ia] IIIC T500 xx°C Da
IF	L or M	IECEX ta [ia Db] IIIC Txx°C Da/Db
IG	L or M	IECEX Ex nA [ia Ga] IIC T6 Gc
IH	L or M	IECEX Ex ic [ia Ga] IIC T6 Gc
I3	L or M	IECEX Ex d [ia] IIC T6 Ga/Gb, IECEX Ex ta [ia Db] IIIC Txx°C Da/Db

14) The marking of certificates not mentioned in this table are not affected by the FHX50.

## Registered trademarks

**HART®**

Registered trademark of the FieldComm Group, Austin, USA

**PROFIBUS®**

Registered trademark of the PROFIBUS User Organization, Karlsruhe, Germany

**FOUNDATION™ Fieldbus**

Registered trademark of the FieldComm Group, Austin, Texas, USA

**KALREZ®, VITON®**

Registered trademark of DuPont Performance Elastomers L.L.C., Wilmington, USA

**TEFLON®**

Registered trademark of E.I. DuPont de Nemours & Co., Wilmington, USA

**TRI CLAMP®**

Registered trademark of Alfa Laval Inc., Kenosha, USA

**NORD-LOCK®**

Registered trademark of Nord-Lock International AB

**FISHER®**

Registered trademark of Fisher Controls International LLC, Marshalltown, USA

**MASONEILAN®**

Registered trademark of Dresser, Inc., Addison, USA

## Patents

This product may be protected by at least one of the following patents.

Further patents are pending.

US Patents	EP Patents
5.827.985	---
5.884.231	---
5.973.637	---
6.087.978	955 527
6.140.940	---
6.481.276	---
6.512.358	1 301 914
6.559.657	1 020 735
6.640.628	---
6.691.570	---
6.847.214	---
7.441.454	---
7.477.059	---
---	1 389 337
7.965.087	---



[www.addresses.endress.com](http://www.addresses.endress.com)

---